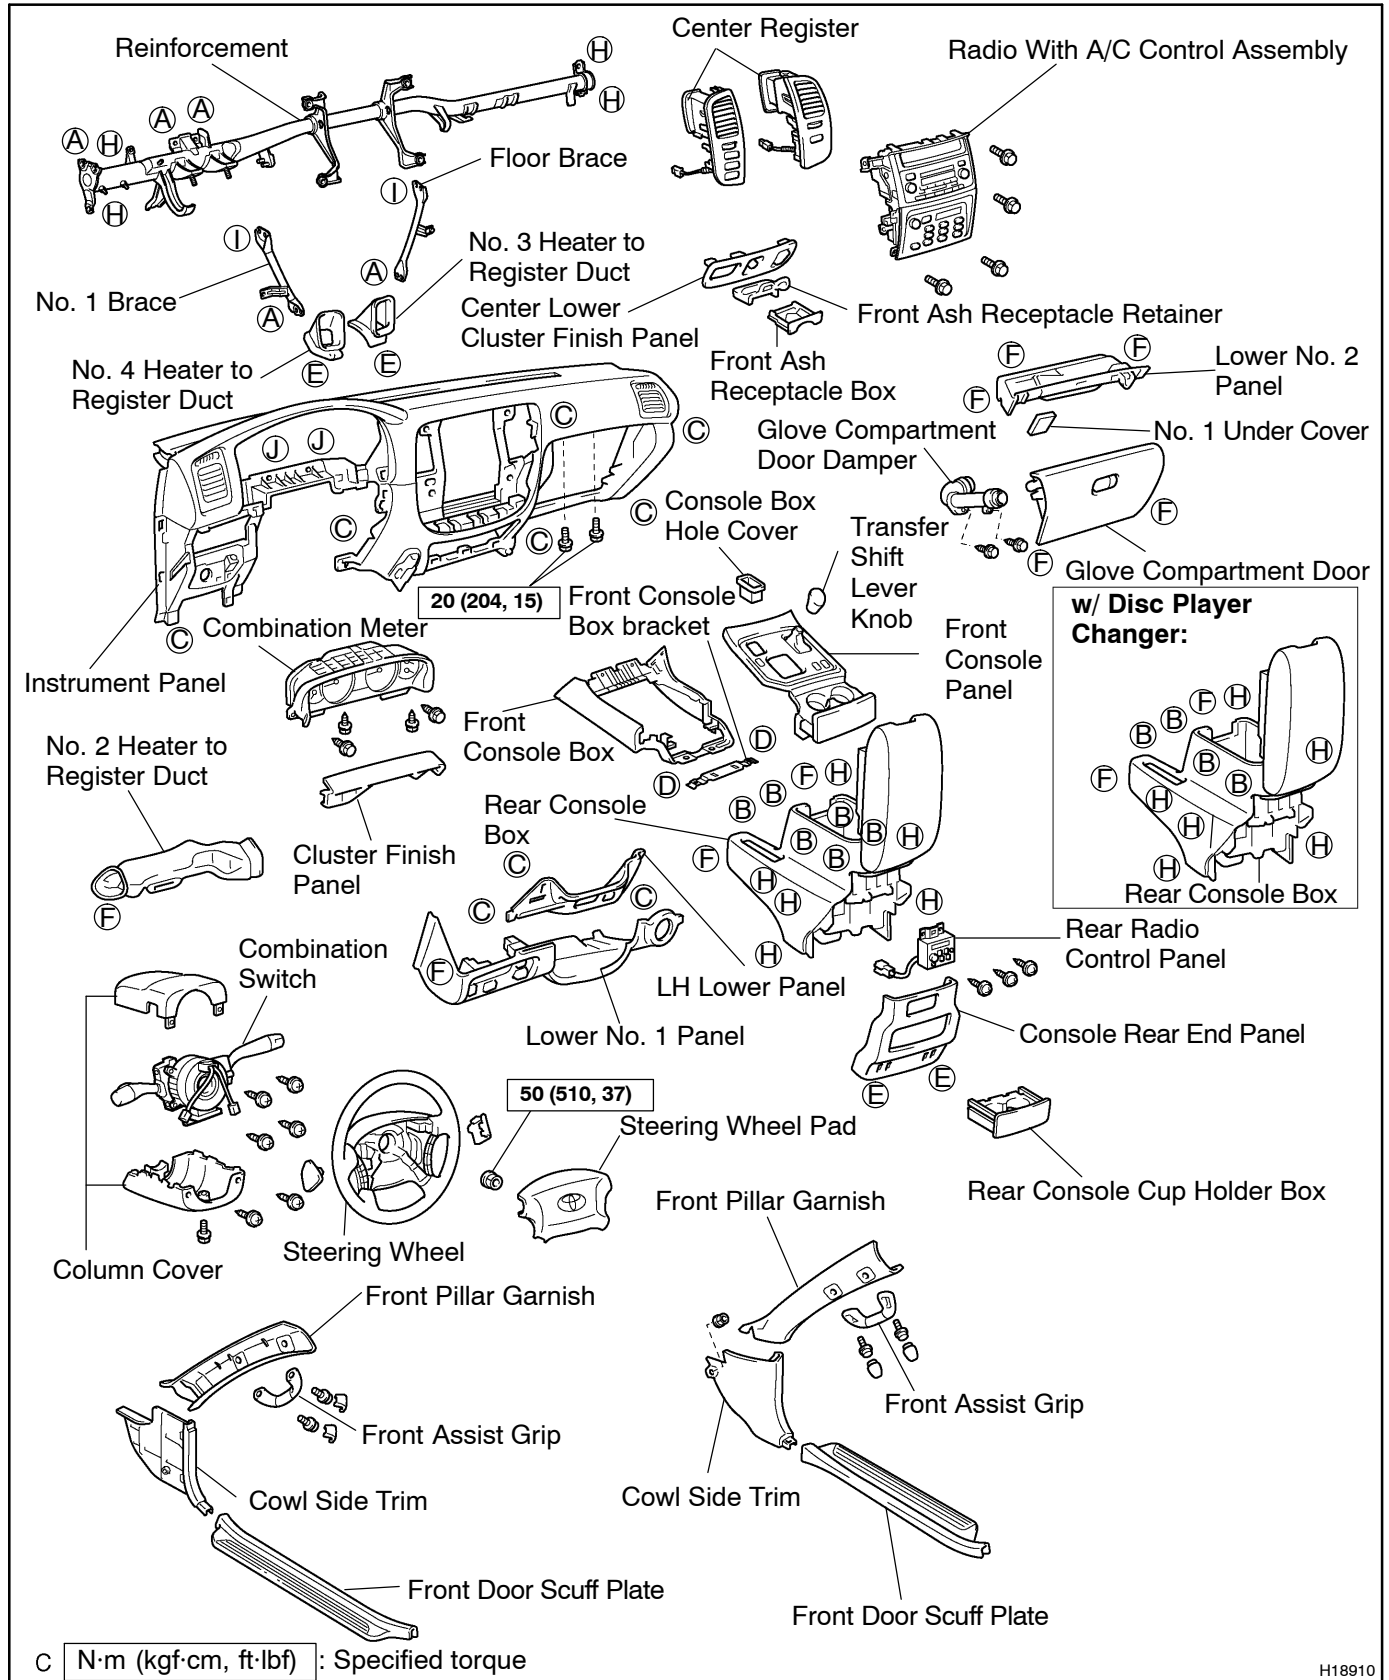
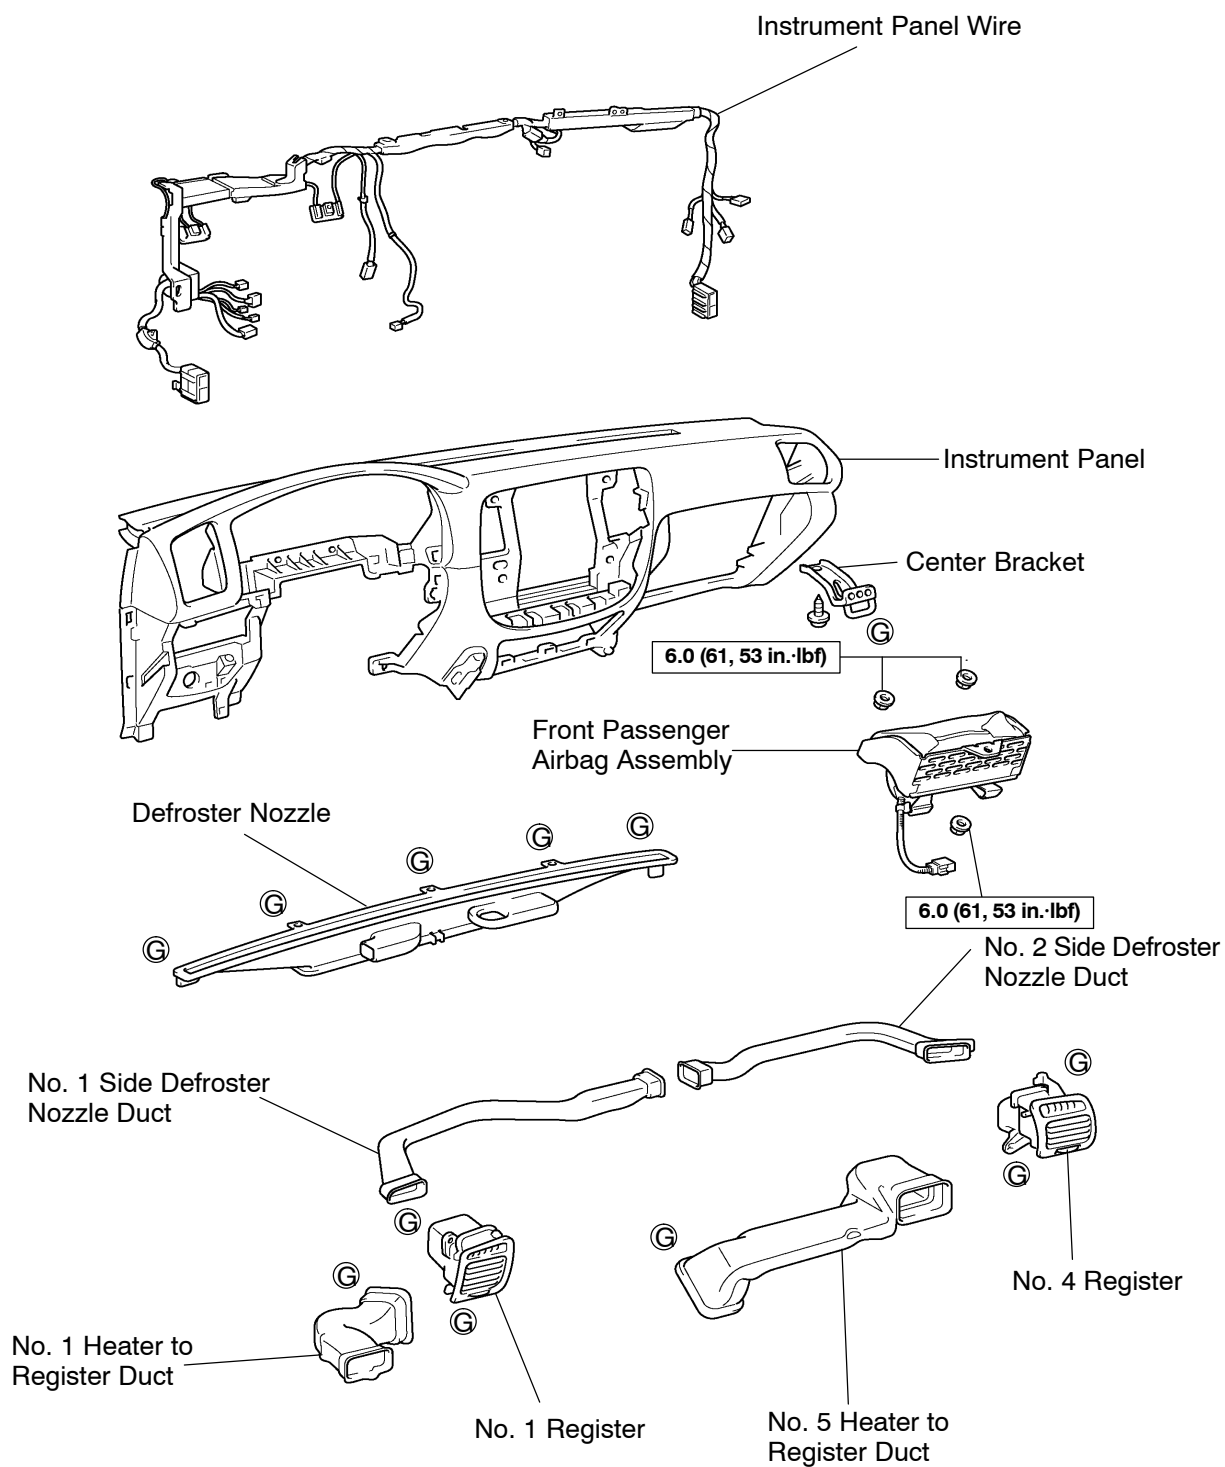


INSTRUMENT PANEL COMPONENTS

BO1KK-04



H18910













C N·m (kgf·cm, ft·lbf) : Specified torque

H18911

HINT:

Screw shapes and sizes are indicated in the table below. The codes ("A" to "I") correspond to those indicated on the previous page.

mm (in.)								
	Shape	Size		Shape	Size		Shape	Size
Ⓐ		ø = 8 (0.31) L = 16 (0.63)	Ⓑ		ø = 6 (0.24) L = 18 (0.71)	Ⓒ		ø = 6 (0.24) L = 16 (0.63)
Ⓓ		ø = 6 (0.24) L = 11 (0.43)	Ⓔ		ø = 6 (0.24) L = 16 (0.63)	Ⓕ		ø = 5 (0.20) L = 16 (0.63)
Ⓖ		ø = 5 (0.20) L = 14 (0.55)	Ⓗ		ø = 5 (0.20) L = 14 (0.55)	Ⓖ		ø = 8 (0.31)
Ⓙ		ø = 6 (0.24)						

C

H21419