


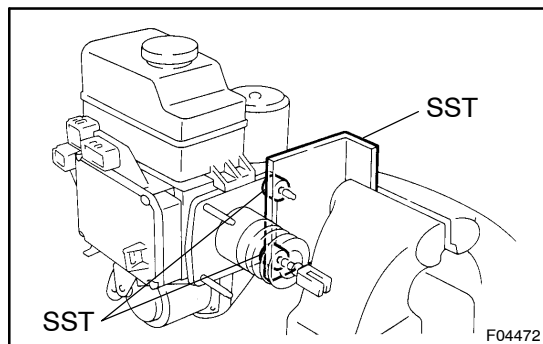

## DISASSEMBLY

### 1. PLACE HYDRAULIC BRAKE BOOSTER IN VISE

Using SST, set the hydraulic brake booster in vise.

SST 09630-00014 (09631-00142),  
09950-60010 (09951-00180, 09951-00190)

### 2. REMOVE FLUID LEVEL WARNING SWITCH CONNECTOR CLAMP

- Disconnect the connector.
- Remove the bolt and clamp.

### 3. REMOVE RESERVOIR AND GROMMETS


- Remove reservoir cap.
- Remove the 3 set screws and pull out the reservoir.

**Torque: 1.7 N·m (17.5 kgf·cm, 15.2 in·lbf)**

- Remove the 3 grommets.

### 4. REMOVE CLEVIS AND CYLINDER BOOT

- Loosen the lock nut, then remove the clevis and lock nut.  
**Torque: 25 N·m (260 kgf·cm, 19 ft·lbf)**
- Remove the cylinder boot.

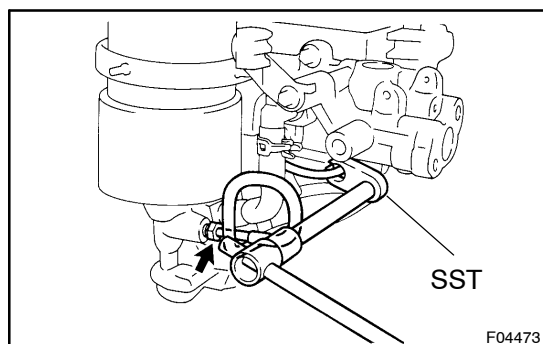

### 5. REMOVE BRAKE ACTUATOR TUBE NO. 1


Using SST, remove the brake actuator tube No. 1.

SST 09023-00100

**Torque: 15 N·m (155 kgf·cm, 11 ft·lbf)**

### 6. REMOVE BOOSTER PUMP AND ASSEMBLY

- Remove the actuator hose.
- Remove the 4 screws and wire harness from the booster and pump.
- Remove the 2 bolts, accumulator bracket.
- Remove the 2 bolts and booster pump motor assembly.
- Remove the bolt and No. 1 pump bracket.
- Remove the 2 washers, 2 cushions, 2 collars and sleeve.
- Remove the 2 bolts and No. 2 pump bracket.
- Remove the cushion from No. 2 pump bracket.

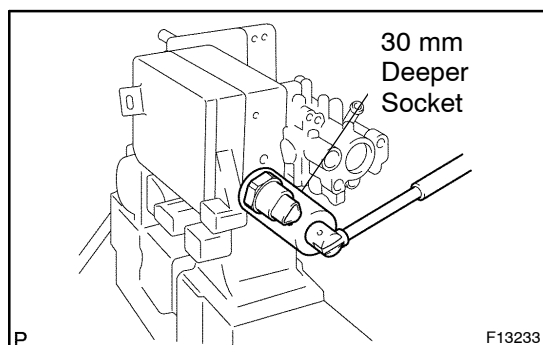

### 7. ABS & BA & TRAC & VSC only:

#### REMOVE MASTER CYLINDER PRESSURE SENSOR


Using 30 mm deeper socket wrench and remove the oil pressure sensor.

**Torque: 81 N·m (830 kgf·cm, 60 ft·lbf)**

#### NOTICE:

If replacing the master cylinder pressure sensor, since the sensor is non-reusable, use a sensor of the supply part No shown below.


**PART NO: 89637-30050**

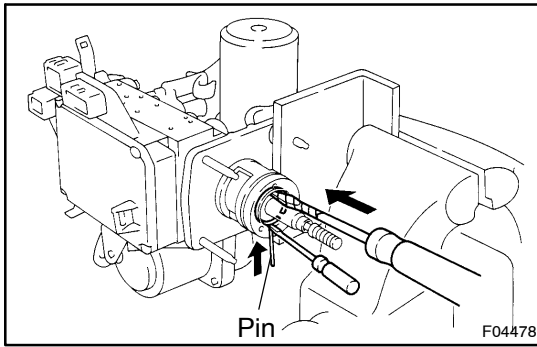**8. REMOVE PISTON**

- (a) Pressing the piston in with a screwdriver, use a pin or an equivalent to push the snap ring from the hole in the body then remove it with another screwdriver.
- (b) Remove the piston, pulling straight out, not at an angle.

**NOTICE:**

- If pulled out and installed at an angle, there is a possibility that the cylinder bore could be damaged.
- At the time of reassembly, be careful not to damage the rubber lips on the pistons.

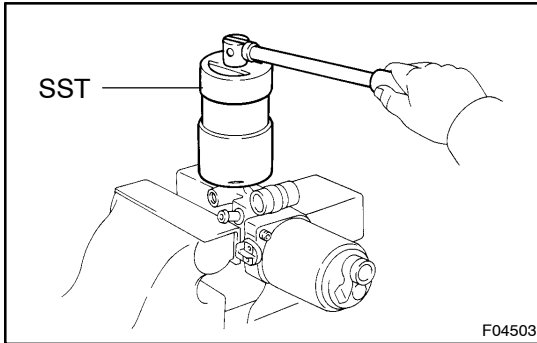**9. REMOVE ACCUMULATOR FROM BOOSTER PUMP**

- (a) Using SST, remove the accumulator.  
SST 09318-12010  
**Torque: 54 N·m (550 kgf·cm, 36 ft·lbf)**
- (b) Remove the silencer tube, spring and O-ring.