


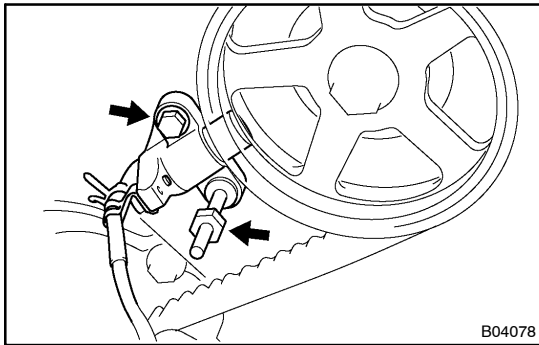

INSTALLATION

1. INSTALL CAMSHAFT POSITION SENSOR

Install the camshaft position sensor with the bolt and stud bolt

Torque: 7.5 N·m (80 kgf·cm, 66 in·lbf)

2. INSTALL LH NO.3 TIMING BELT COVER

(See page [EM-22](#))

3. CONNECT RADIATOR HOSE

4. INSTALL V-BANK COVER

5. FILL ENGINE COOLANT (See page [CO-2](#))

6. CHECK ENGINE COOLANT FOR LEAKS

7. CHECK IGNITION TIMING (See page [EM-9](#))