


REMOVAL

NOTICE:

- Do not open the cover or the case of the ECU and various electrical devices unless absolutely necessary. (If the IC terminals are touched, the IC may be destroyed by static electricity.)
 - If the wiring connector of the SRS is disconnected and the ignition switch is at ON position, DTCs will be recorded.
1. REMOVE FRONT SEAT ASSEMBLY (DRIVER SIDE)
(See page [BO-105](#))

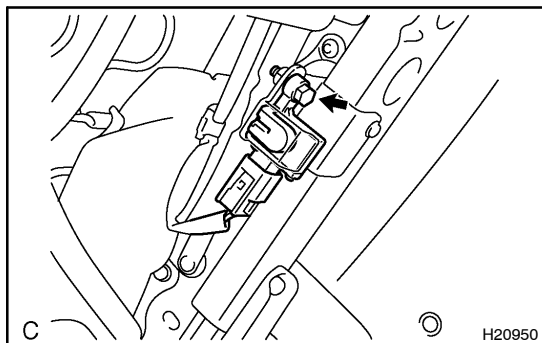

2. REMOVE SEAT POSITION SENSOR ASSEMBLY
 - (a) Remove the bolt and seat position sensor assembly.
 - (b) Disconnect the connector.