


E ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[LHD : 1FZ-FE]

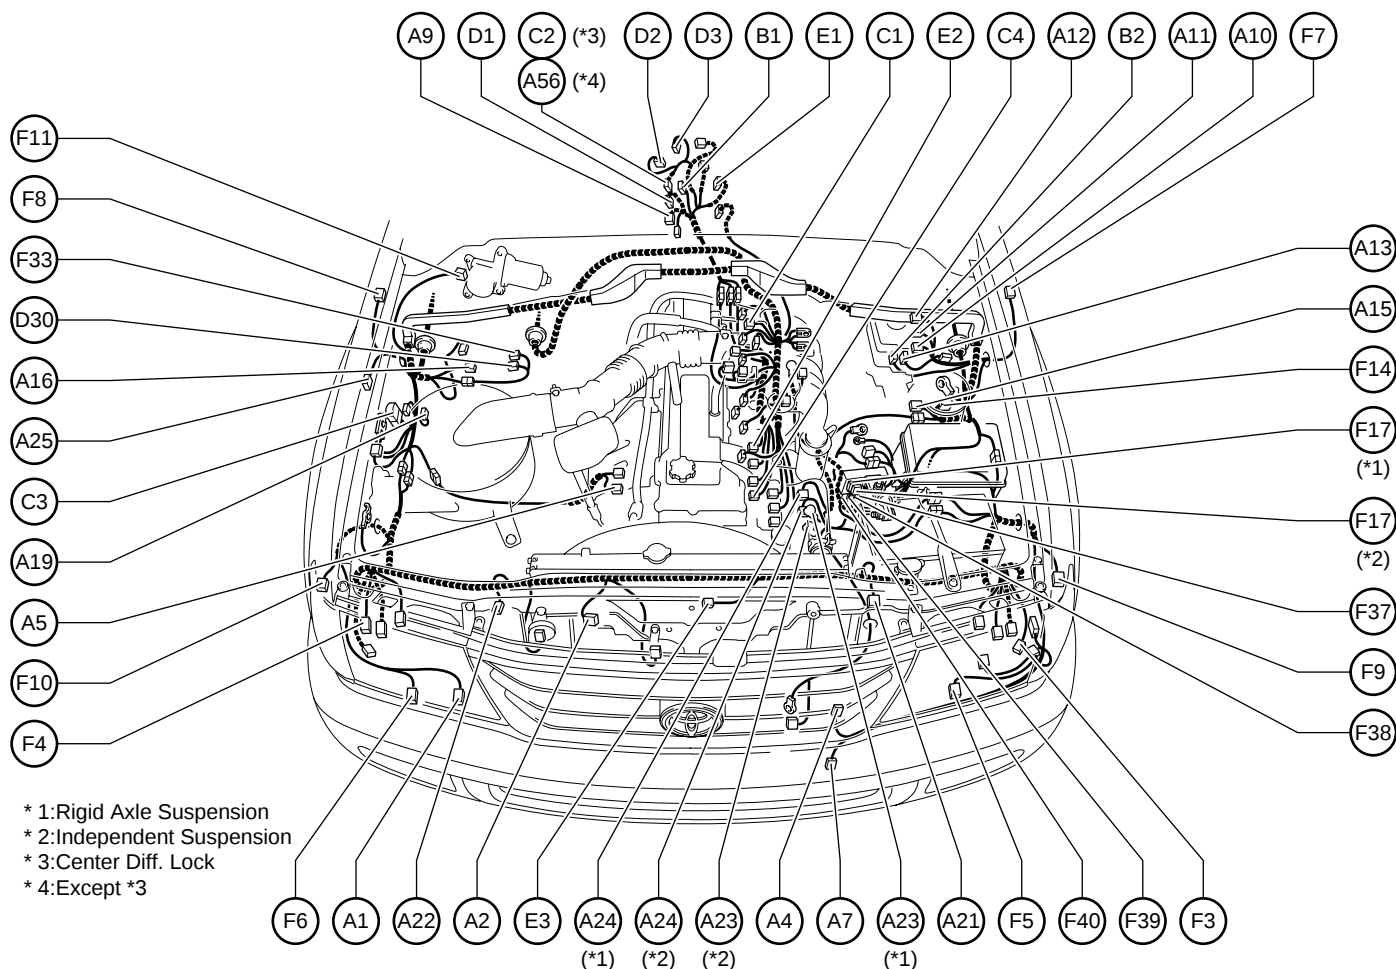

A 1 A/C Ambient Temp. Sensor

A 2 A/C Condenser Fan Motor

A 4 Pressure SW

A 5 A/C Magnetic Clutch

A 7 A/C Magnetic Valve

A 9 A/T Oil Temp. Sensor

A10 ABS Actuator

A11 ABS Actuator

A12 ABS Actuator

A13 ABS Actuator

A15 ABS Speed Sensor Front LH

A16 ABS Speed Sensor Front RH

A19 Air Cleaner Warning Sensor

A21 Airbag Sensor Front LH

A22 Airbag Sensor Front RH

A23 Alternator

A24 Alternator

A25 Auto Antenna Motor

A56 ADD Control Motor

B 1 Back-Up Light SW

B 2 Brake Fluid Level Warning SW

C 1 Camshaft Position Sensor

C 2 Center Diff. Lock Control Motor

C 3 Check Connector

C 4 Crankshaft Position Sensor

D 1 Detection SW (Center Diff. Lock)

D 2 Detection SW (Transfer L Position)

D 3 Detection SW (Transfer Neutral Position)

D30 Detection SW (Front Diff. Lock)

E 1 ECT Solenoid

E 2 EFI Water Temp. Sensor

E 3 Engine Hood Courtesy SW

F 3 Front Clearance Light LH

F 4 Front Clearance Light RH

F 5 Front Fog Light LH

F 6 Front Fog Light RH

F 7 Front Side Turn Signal Light LH

F 8 Front Side Turn Signal Light RH

F 9 Front Turn Signal Light LH

F10 Front Turn Signal Light RH

F11 Front Wiper Motor

F14 Fuel Pump Resistor

F17 Fusible Link Block

F33 Front Diff. Lock Motor

F37 Fusible Link Block

F38 Fusible Link Block

F39 Fusible Link Block

F40 Fusible Link Block