


E ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[LHD : 1HD-FTE]

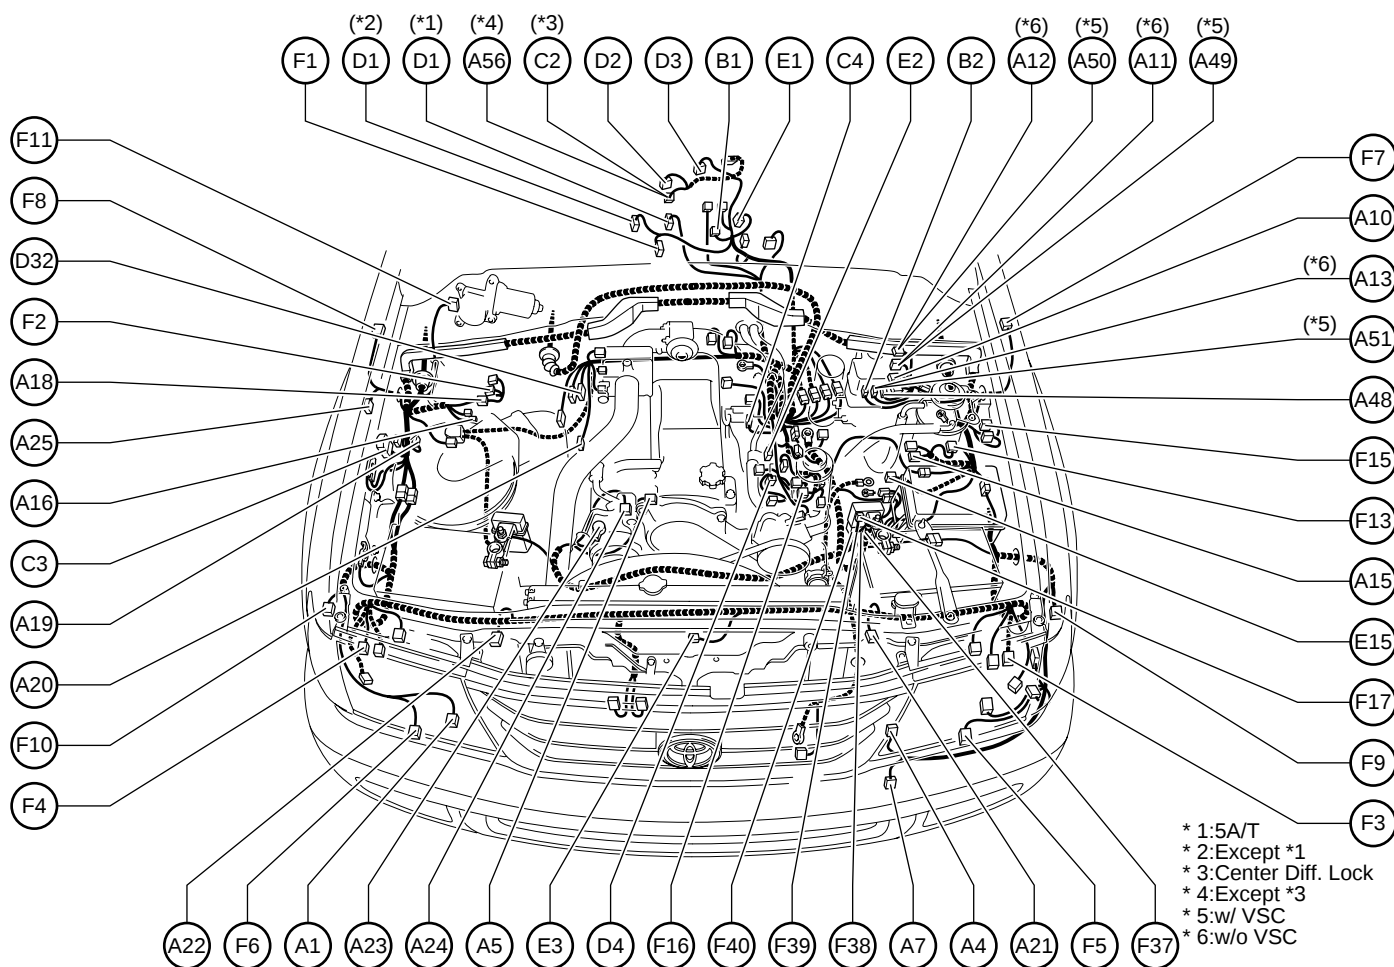

* 1:5A/T
 * 2:Except *1
 * 3:Center Diff. Lock
 * 4:Except *3
 * 5:w/ VSC
 * 6:w/o VSC

- A 1 A/C Ambient Temp. Sensor
- A 4 Pressure SW
- A 5 A/C Magnetic Clutch
- A 7 A/C Magnetic Valve
- A10 ABS Actuator
- A11 ABS Actuator
- A12 ABS Actuator
- A13 ABS Actuator
- A15 ABS Speed Sensor Front LH
- A16 ABS Speed Sensor Front RH
- A18 AHC Pump Motor
- A19 Air Cleaner Warning Sensor
- A20 Air Flow Meter
- A21 Airbag Sensor Front LH
- A22 Airbag Sensor Front RH
- A23 Alternator
- A24 Alternator
- A25 Auto Antenna Motor
- A48 ABS & BA & TRC & VSC Actuator
- A49 ABS & BA & TRC & VSC Actuator
- A50 ABS & BA & TRC & VSC Actuator
- A51 ABS & BA & TRC & VSC Actuator
- A56 ADD Control Motor
- B 1 Back-Up Light SW
- B 2 Brake Fluid Level Warning SW
- C 2 Center Diff. Lock Control Motor
- C 3 Check Connector
- C 4 Crankshaft Position Sensor

- D 1 Detection SW (Center Diff. Lock)
- D 2 Detection SW (Transfer L Position)
- D 3 Detection SW (Transfer Neutral Position)
- D 4 Diesel Engine Revolution Sensor
- D32 Diesel Throttle Position SW
- E 1 ECT Solenoid
- E 2 EFI Water Temp. Sensor
- E 3 Engine Hood Courtesy SW
- E15 EDU
- F 1 First Position SW
- F 2 Fluid Pressure Sensor
- F 3 Front Clearance Light LH
- F 4 Front Clearance Light RH
- F 5 Front Fog Light LH
- F 6 Front Fog Light RH
- F 7 Front Side Turn Signal Light LH
- F 8 Front Side Turn Signal Light RH
- F 9 Front Turn Signal Light LH
- F10 Front Turn Signal Light RH
- F11 Front Wiper Motor
- F13 Fuel Heater SW
- F15 Fuel Sediment SW
- F16 Fuel Temp. Sensor
- F17 Fusible Link Block
- F37 Fusible Link Block
- F38 Fusible Link Block
- F39 Fusible Link Block
- F40 Fusible Link Block