


Position of Parts in Body

[LHD : Liftgate Type]

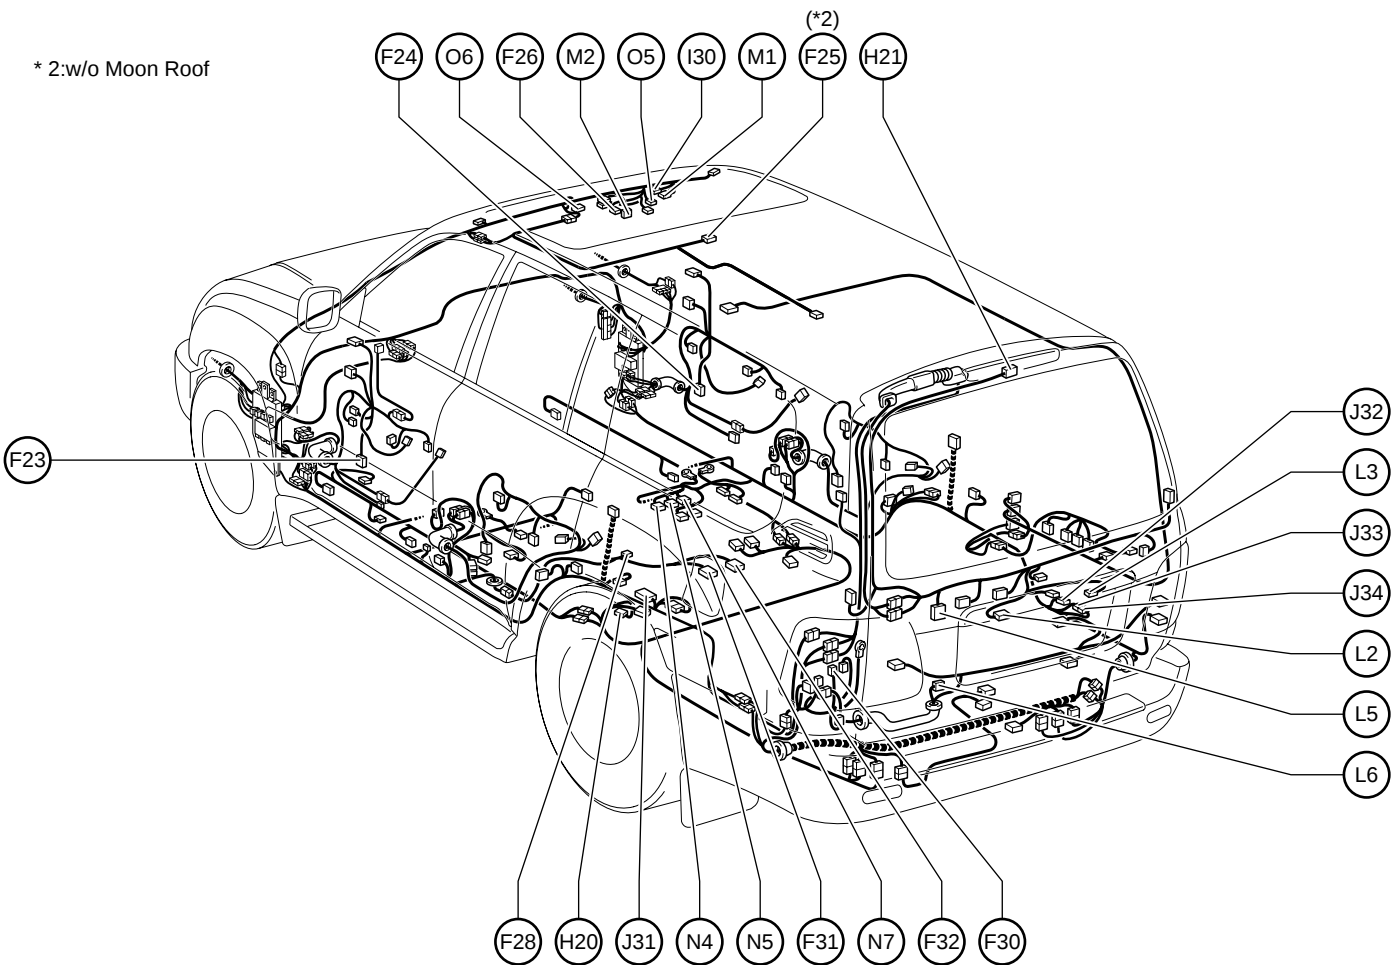

F23 Front Door Speaker LH
 F24 Front Door Speaker RH
 F25 Front Interior Light
 F26 Front Personal Light
 F28 Fuel Pump
 Fuel Sender
 F30 Fuel Pump Select Relay
 F31 Fuel Solenoid Valve 1
 F32 Fuel Solenoid Valve 2

H20 Height Control Sensor Rear
 H21 High Mounted Stop Light

I 30 Inner Mirror

J 31 Junction Connector
 J 32 Junction Connector
 J 33 Junction Connector
 J 34 Junction Connector

L 2 License Plate Light LH
 L 3 License Plate Light RH
 L 5 License Plate Light No.1
 L 6 License Plate Light No.2

M 1 Moon Roof Control ECU
 M 2 Moon Roof Control SW

N 4 Navigation ECU
 N 5 Navigation ECU
 N 7 Navigation ECU

O 5 Overhead J/B
 O 6 Overhead J/B