


Position of Parts in Instrument Panel

[RHD]

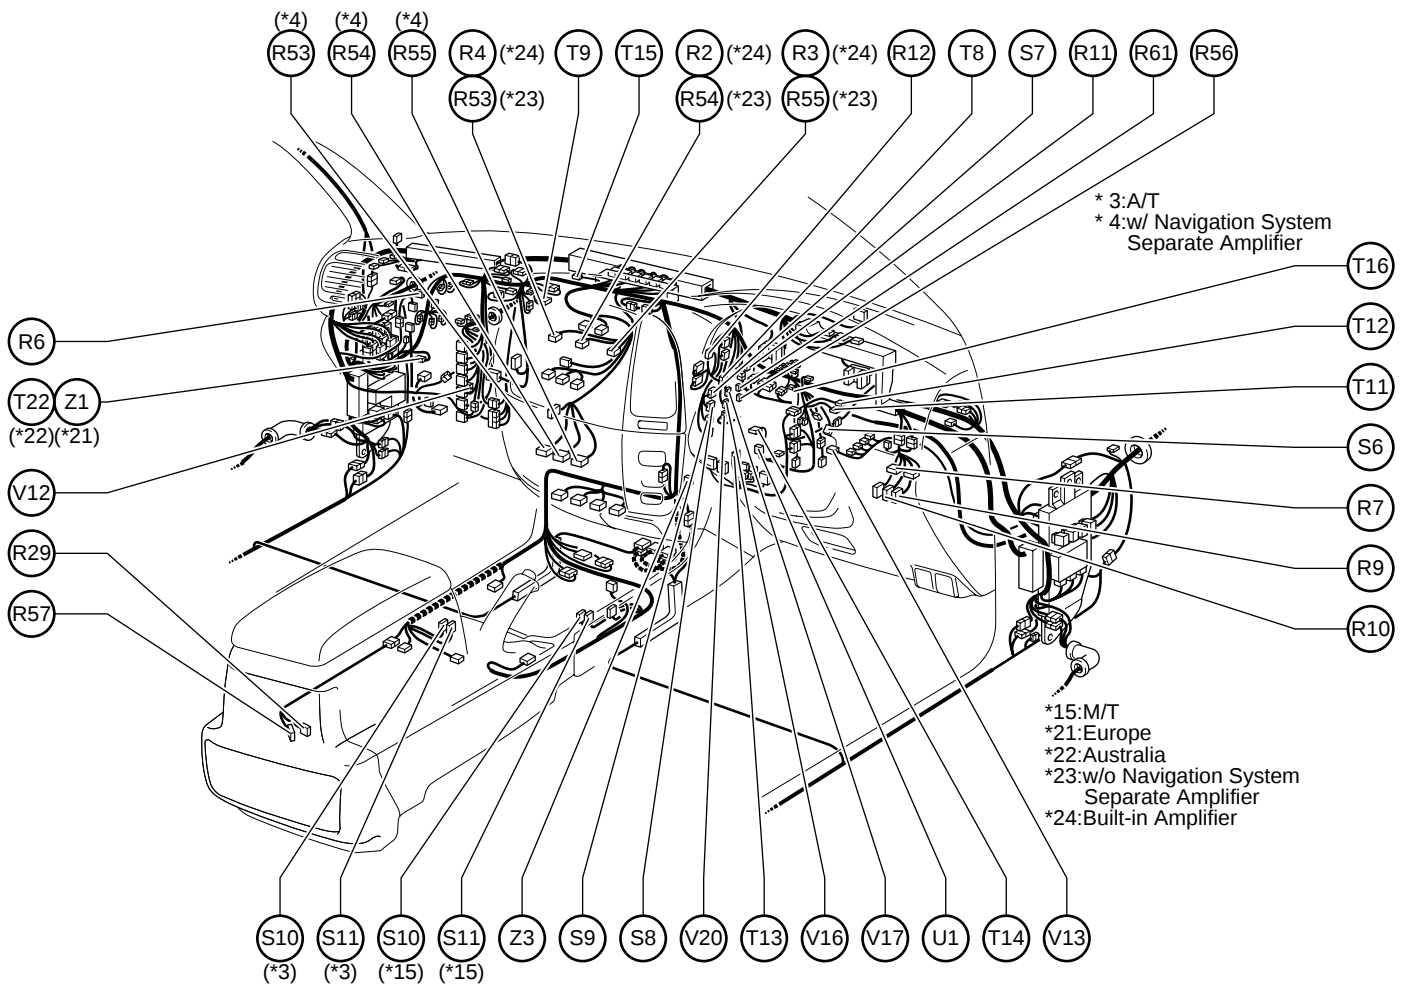

R 2 Radio and Player
 R 3 Radio and Player
 R 4 Radio and Player
 R 6 Rear Diff. Lock Control ECU
 R 7 Rear Fog Light SW
 R 9 Remote Control Mirror SW
 R10 Remote Control Mirror SW
 R11 Rheostat
 R12 Room Temp. Sensor (Front)
 R29 Rear Heater Control SW
 R53 Radio and Player
 R54 Radio and Player
 R55 Radio and Player
 R56 Rear Diff. Lock Control SW
 R57 Rear Seat Audio Controller
 R61 Roll Sensing of Curtain Shield Airbags Cut Off SW

S 6 Stop Light SW
 S 7 Suspension Control ECU
 S 8 Suspension Control ECU
 S 9 Suspension Control ECU
 S10 Seat Heater SW (Driver's Seat)
 S11 Seat Heater SW (Front Passenger's Seat)

T 8 Telescopic Motor
 T 9 Theft Deterrent ECU
 T11 Tilt and Telescopic ECU
 T12 Tilt and Telescopic ECU
 T13 Tilt Motor
 T14 Ignition Key Cylinder Light
 Transponder Key Amplifier
 T15 Transponder Key Computer
 T16 Turn Signal Flasher
 T22 TVSS ECU

U 1 Unlock Warning SW

V12 Viscous Heater Amplifier
 V13 VSC Warning Buzzer
 V16 VGRS ECU
 V17 VGRS ECU
 V20 VGRS Actuator

Z 1 Option Connector (Glass Breakage Sensor)
 Z 3 Option Connector (Radar Sensor)

* 3:A/T
 * 4:w/ Navigation System
 Separate Amplifier

*15:M/T
 *21:Europe
 *22:Australia
 *23:w/o Navigation System
 Separate Amplifier
 *24:Built-in Amplifier