


Position of Parts in Body

[RHD : Liftgate Type]

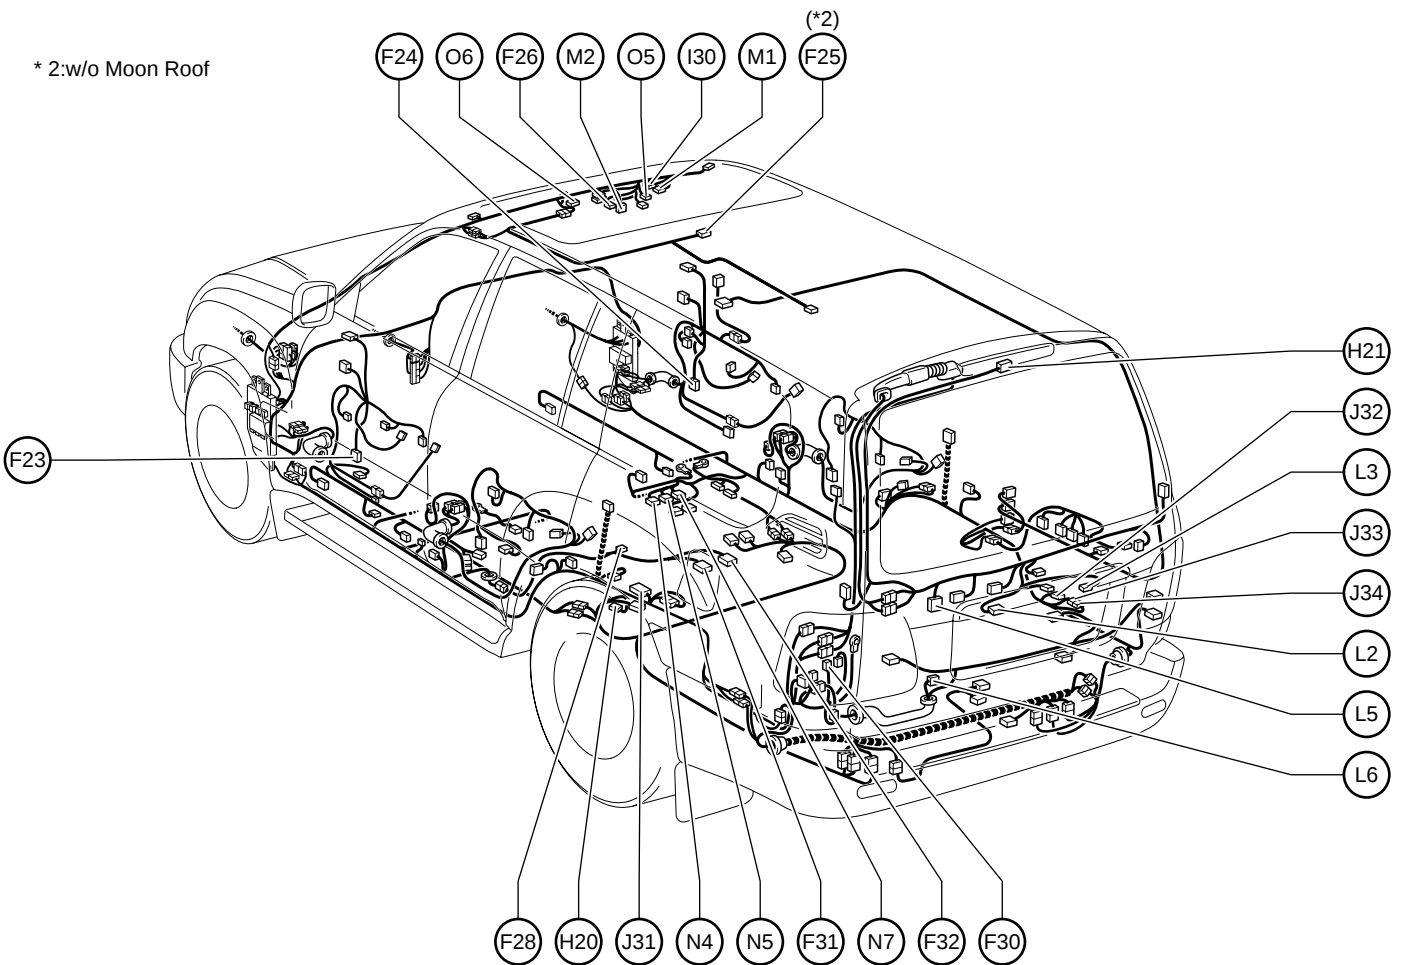

F 23 Front Door Speaker LH
 F 24 Front Door Speaker RH
 F 25 Front Interior Light
 F 26 Front Personal Light
 F 28 Fuel Pump
 Fuel Sender
 F 30 Fuel Pump Select Relay
 F 31 Fuel Solenoid Valve 1
 F 32 Fuel Solenoid Valve 2

H 20 Height Control Sensor Rear
 H 21 High Mounted Stop Light

I 30 Inner Mirror

J 31 Junction Connector
 J 32 Junction Connector
 J 33 Junction Connector
 J 34 Junction Connector

L 2 License Plate Light LH
 L 3 License Plate Light RH
 L 5 License Plate Light No.1
 L 6 License Plate Light No.2

M 1 Moon Roof Control ECU
 M 2 Moon Roof Control SW

N 4 Navigation ECU
 N 5 Navigation ECU
 N 7 Navigation ECU

O 5 Overhead J/B
 O 6 Overhead J/B