


BRAKE Warning Light Circuit

CIRCUIT DESCRIPTION

The BRAKE warning light lights up when the brake fluid is insufficient and an abnormality occurs in the hydro brake booster.

WIRING DIAGRAM

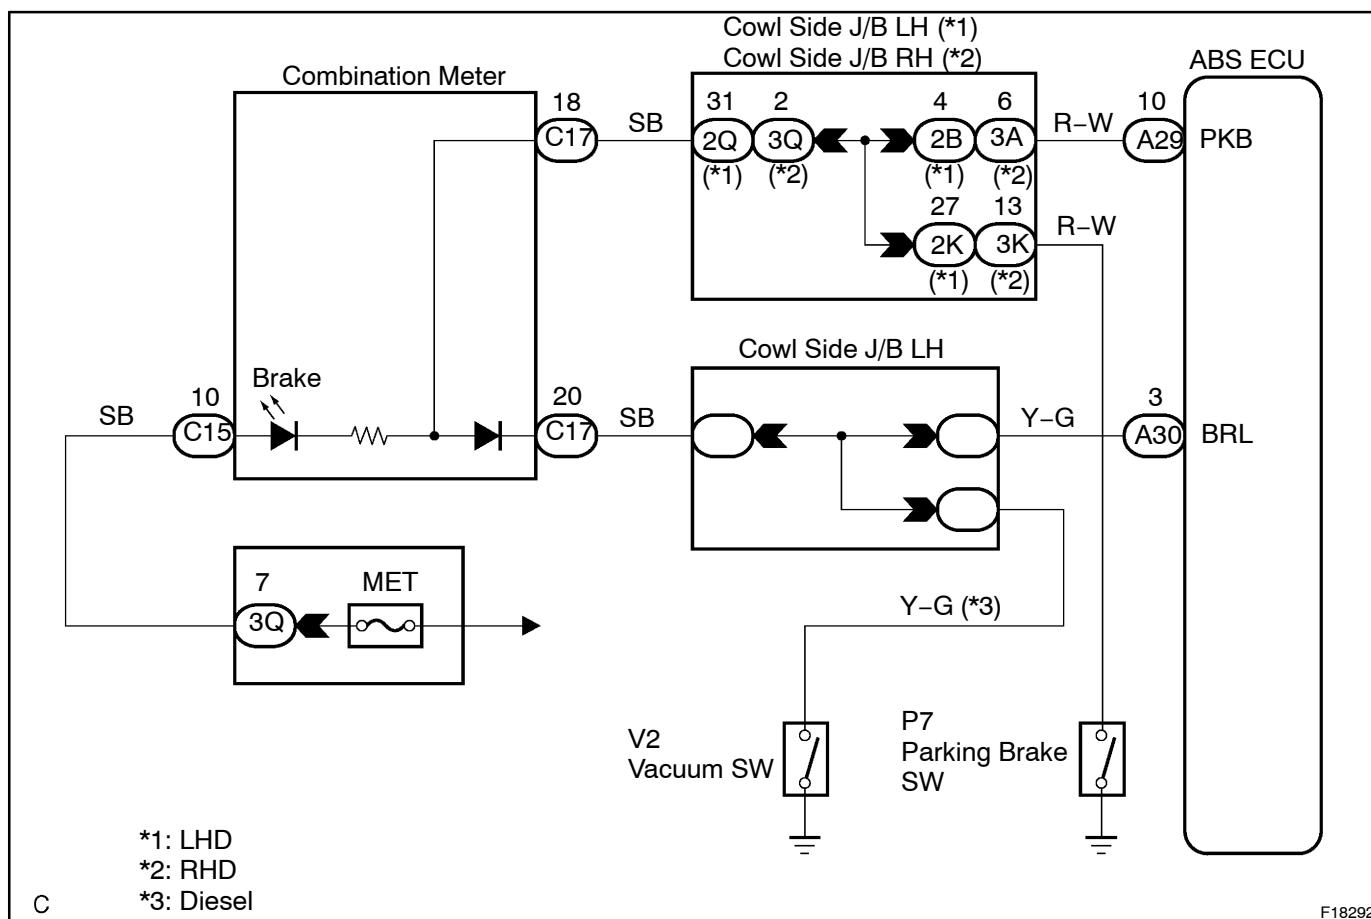

INSPECTION PROCEDURE

- 1 Check parking brake switch circuit.

NG

Repair or replace parking brake switch circuit.

OK

2 Check brake fluid level warning switch circuit.

NG

Repair or replace brake fluid level warning switch circuit.

OK

3 Is DTC output for ABS ?

Check the DTC on [page DI-54](#).

Yes

Repair circuit indicated by the output code.

No

4 Check BRAKE warning light.

See combination meter troubleshooting.

NG

Repair or replace combination meter.

OK

5 Check multiplex communication system.

NG

Repair or replace multiplex communication circuit.

OK

Check and replace ABS ECU.