

Ts and CG Terminal Circuit


CIRCUIT DESCRIPTION

The sensor signal check detects faults in VGRS sensor signal, which cannot be detected by the DTC check.

HINT:

If a current DTC exists when connecting Ts and CG, the warning light will remain on.

WIRING DIAGRAM

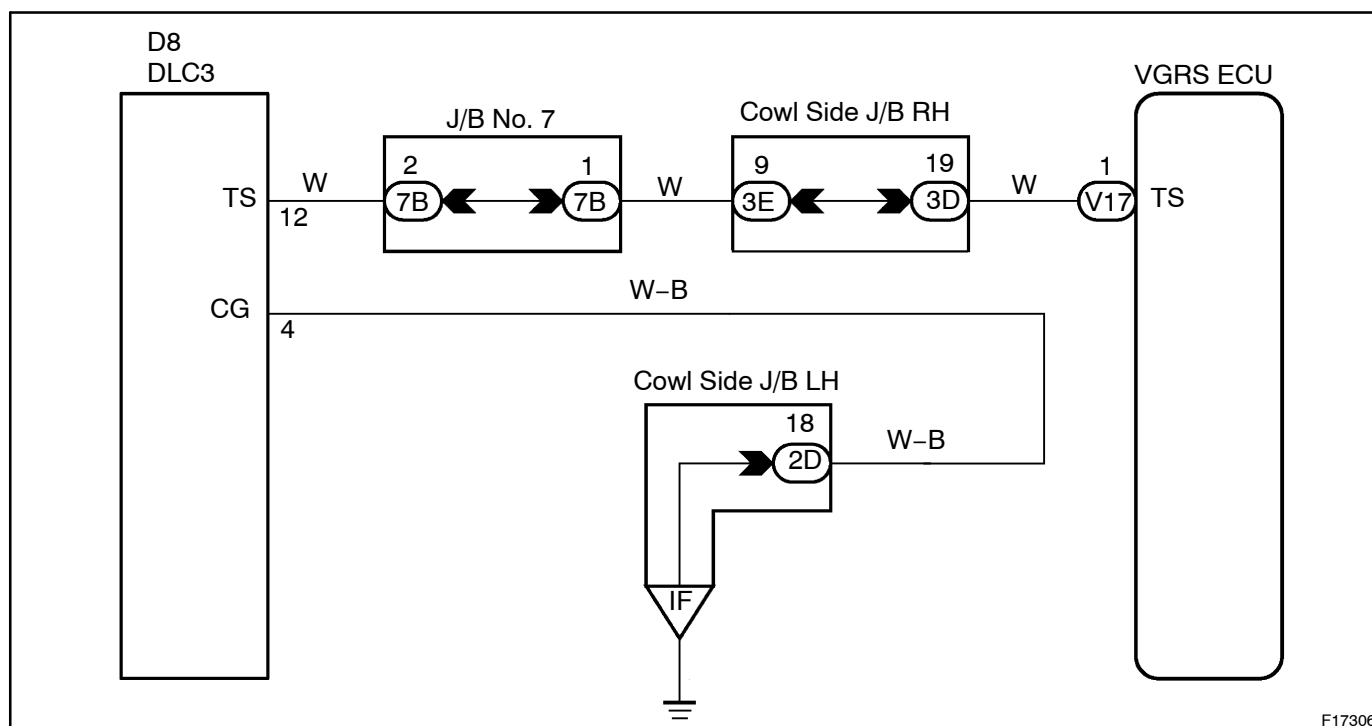

F17306

INSPECTION PROCEDURE

HINT:

Troubleshoot in accordance with the chart below for each trouble symptom.

VGRS warning light does not light up	Go to step 1
VGRS warning light remains on	Go to step 2

1	Connect terminals Ts and CG of DLC3.
----------	---

A: VGRS warning light does not illuminate.

B: VGRS warning light remains on.

B

Go to step 2.

A

Check and repair circuit fuse, bulb, wire harness or combination meter.

2	Check for an open circuit between DLC3 (Ts) and VGRS ECU.
----------	--

A: Open circuit

B: No open circuit

B

Replace VGRS ECU and retest.

A

Repair circuit.