


HOW TO PROCEED WITH TROUBLESHOOTING

HINT:
Troubleshoot in accordance with the procedure on this pages.

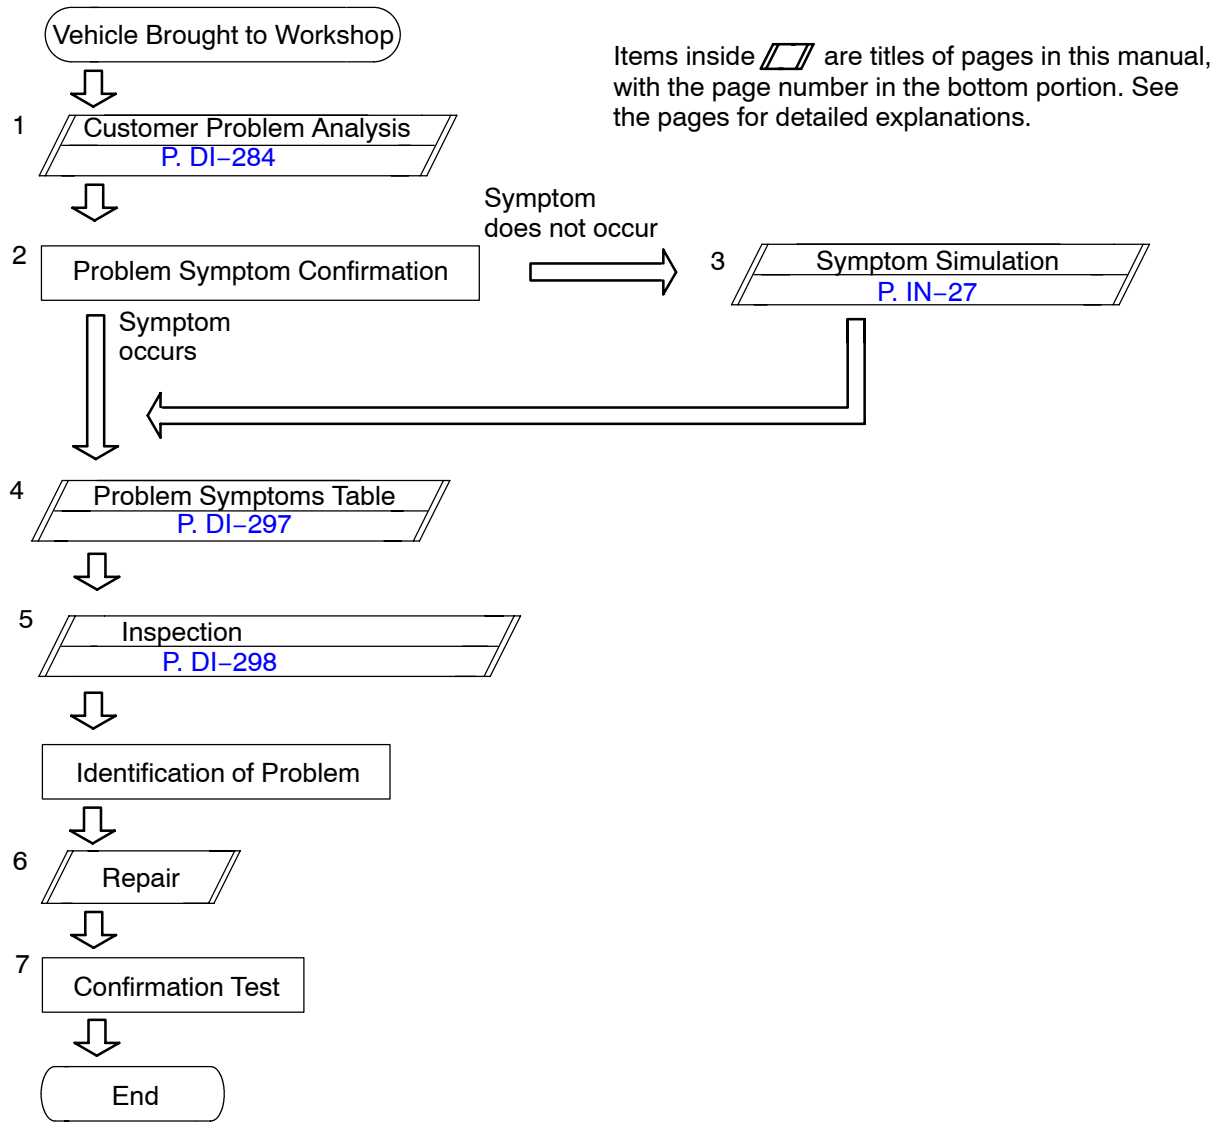

Before troubleshooting:

- (a) Using the tester, check the battery voltage.
Standard Voltage: 11 to 14 V
- (b) Perform a visual check for blown fuses, and poor connections in connectors.