


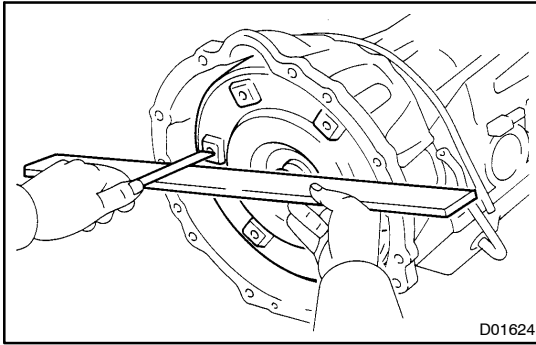

INSTALLATION

1. CHECK TORQUE CONVERTER CLUTCH INSTALLATION

Using calipers and a straight edge, measure the distance from the installed surface of the transmission housing to the installed surface of the torque converter clutch.

Correct distance: More than 17.1 mm (0.673 in.)

2. TRANSMISSION INSTALLATION

Installation is in the reverse order of removal

(See page [AT-33](#)).

HINT:

- Transmission control rod and the park/neutral position switch (See page [DI-361](#))
- ATF level (See page [AT-3-1](#))
- Conduct the road test of the vehicle (See page [DI-361](#))