


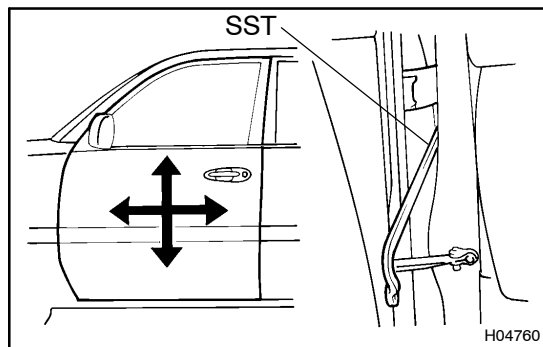


ADJUSTMENT

1. ADJUST DOOR IN FORWARD/BACKWARD AND VERTICAL DIRECTIONS

Using SST, loosen the body side hinge bolts to adjust.

SST 09812-00010

Torque: 23 N·m (235 kgf·cm, 17 ft·lbf)

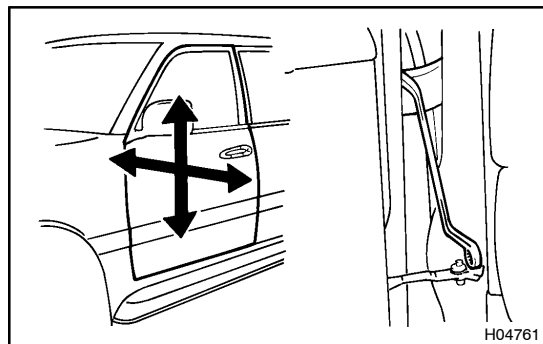


2. ADJUST DOOR IN RIGHT/LEFT AND VERTICAL DIRECTIONS

Loosen the door side hinge bolts to adjust.

HINT:

Substitute the bolt with washer for the centering bolt
(See page [BO-6](#)).

Torque: 26 N·m (265 kgf·cm, 19 ft·lbf)

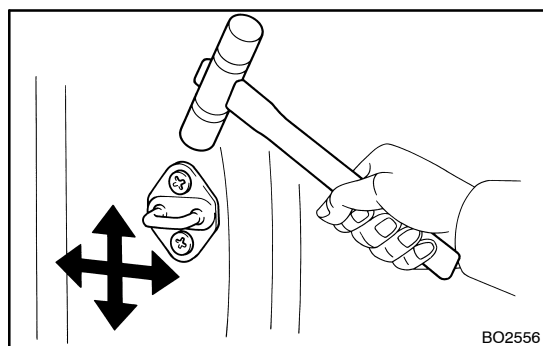

3. ADJUST DOOR LOCK STRIKER

(a) Check that the door fit and door lock linkages are adjusted correctly.

(b) Loosen the striker mounting screws.

Torque: 11 N·m (115 kgf·cm, 8 ft·lbf)

(c) Using a plastic hammer, tap the striker to adjust it.