


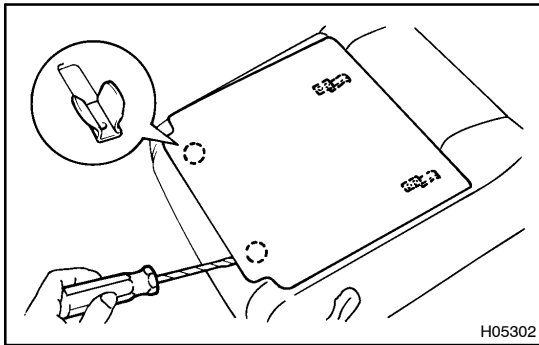

DISASSEMBLY

1. REMOVE HEADREST

2. REMOVE SEATBACK BOARD

Using a screwdriver, remove the seatback board as shown in the illustration.

HINT:

Tape the screwdriver tip before use.

3. REMOVE RECLINING ADJUSTER RELEASE HANDLE

(a) Using a screwdriver, remove the cover.

HINT:

Tape the screwdriver tip before use.

(b) Remove the screw and reclining adjuster release handle.

4. REMOVE NO. 1 RECLINING COVER

(a) Remove the 4 hog rings and open the seatback cover.



HINT:

At the time of reassembly, please refer to the following item.

When installing hog rings, take care to prevent wrinkles as little as possible.

(b) Remove the 2 corner pads.

(c) Remove the 2 screws and 2 No. 1 reclining covers as shown in the illustration.

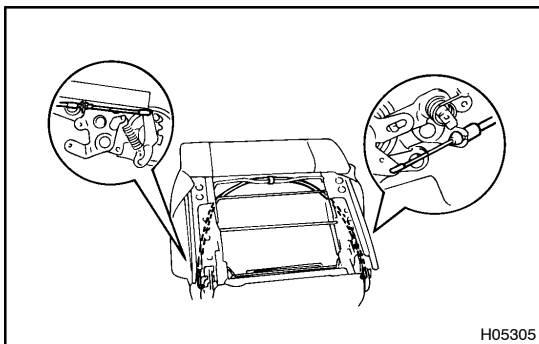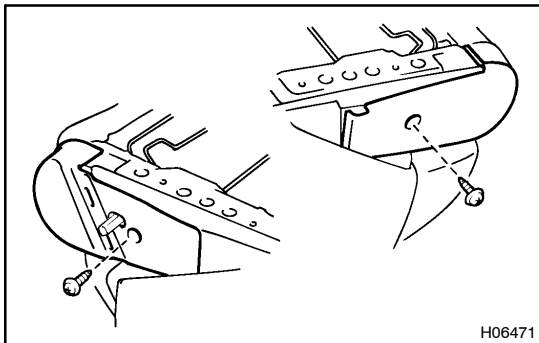


5. REMOVE RECLINING CONNECTING WIRE

(a) Loosen the nuts, then remove the reclining connecting wire of RH side edge.

(b) Remove the reclining connecting wire of LH side edge.


(c) Remove the clamp and reclining connecting wire.

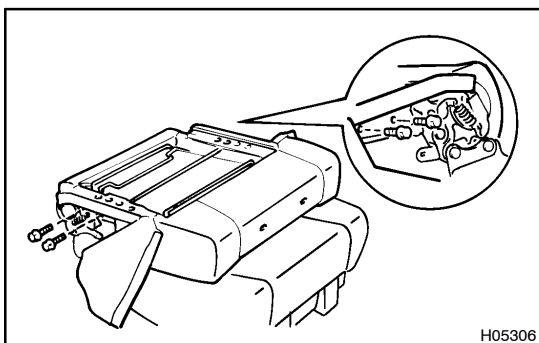

6. REMOVE SEATBACK ASSEMBLY

Remove the 4 bolts and seatback assembly.

Torque: 37 N·m (380 kgf·cm, 27 ft·lbf)

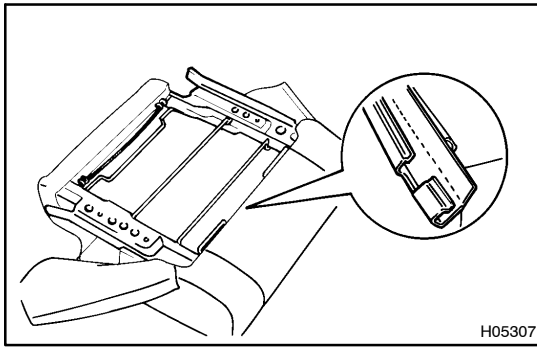**7. REMOVE SEATBACK FRAME**

- (a) Remove the 4 screws and reclining inner cover.
- (b) Remove the 2 hog rings.

HINT:

At the time of reassembly, please refer to the following item.
When installing hog rings, take care to prevent wrinkles as little as possible.

- (c) Disengage the hook, then remove the headrest supports.
- (d) Remove the seatback frame.
- (e) Remove the 2 No. 1 protectors from the seatback frame.

8. REMOVE SEATBACK COVER


Remove the hog rings and seatback cover.

HINT:

At the time of reassembly, please refer to the following item.
When installing hog rings, take care to prevent wrinkles as little as possible.

9. REMOVE SEAT CUSHION UNDER COVER

Remove the 2 screws and 2 seat cushion under covers.

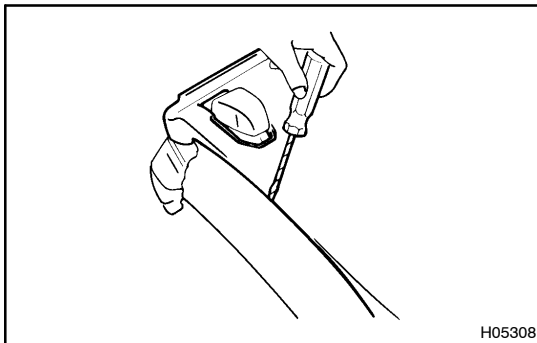**10. REMOVE SEAT CUSHION COVER WITH PAD**

- (a) Using a screwdriver, disengage the hooks as shown in the illustration.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the seat cushion cover with pad.

11. REMOVE SEAT CUSHION COVER

Remove the hog rings and seatback cover.

HINT:

At the time of reassembly, please refer to the following item.
When installing hog rings, take care to prevent wrinkles as little as possible.

12. REMOVE CUSHION

Remove the screw and cushion from the seat cushion under cover sub-assembly.

13. REMOVE LOCK COVER

Remove the screw and lock cover.

14. REMOVE RECLINING REMOTE CONTROL LEVER KNOB


Remove the screw and reclining remote control lever knob.

15. REMOTE FOLD SEAT STOPPER BAND

Remove the bolt and fold seat stopper band.

16. REMOVE SEAT CUSHION UNDER COVERS

Remove the 2 screws and 2 seat cushion under covers.

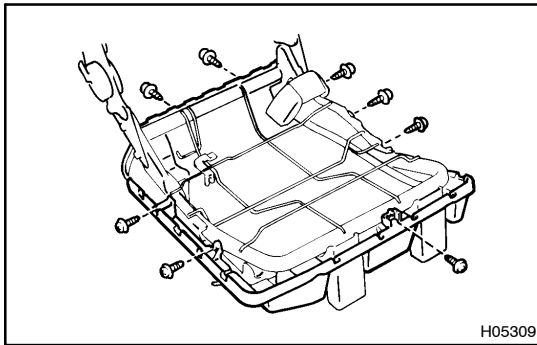

17. REMOVE REAR SEAT CUSHION UNDER COVER SUB-ASSEMBLY

Remove the 8 screws and rear seat cushion under cover.


18. REMOVE REAR NO. 1 SEAT ADJUSTER

- (a) Remove the 2 bolts and rear No. 1 seat outer adjuster.
Torque: 37 N·m (380 kgf·cm, 27 ft·lbf)
- (b) Remove the 2 bolts and rear No. 1 seat inner adjuster.
Torque: 37 N·m (380 kgf·cm, 27 ft·lbf)
- (c) Remove the 2 hinge covers from the outer and inner adjusters.

19. REMOVE REAR NO. 1 SEAT INNER BELT


Loosen the bolt, then remove the rear No. 1 seat inner belt.

Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)

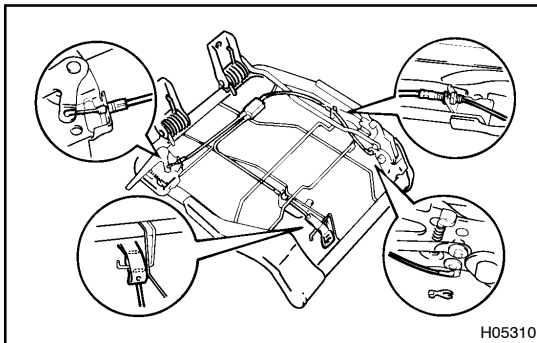

20. REMOVE NO. 2 FOLD SEAT LOCK CONTROL CABLE

Loosen the clamp and No. 2 fold seat lock control cable as shown in the illustration.

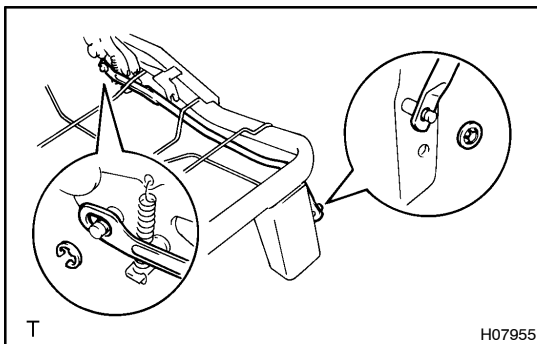

21. REMOVE NO. 1 SEAT LEG STAY

- (a) Using a screwdriver, remove the spring nut and E-ring.
HINT:

Tape the screwdriver tip before use.

- (b) Remove the No. 1 seat leg stay.

22. REMOVE REAR SEAT CUSHION HINGE

- (a) Using a screwdriver, remove the 2 E-rings.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the 2 hinge pins, 2 cushion spacers, 2 cushion support springs and 2 rear seat cushion hinges.

23. REMOVE REAR SEAT LOCK