

DISASSEMBLY

1. REMOVE ASSIST GRIP

- (a) Using a screwdriver, remove the 2 assist grip plugs.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the 2 screws and assist grip.


2. REMOVE INSIDE HANDLE BEZEL

3. REMOVE CENTER BACK DOOR GARNISH


Using a screwdriver, remove the center back door garnish.

HINT:

Tape up the screwdriver tip before use.

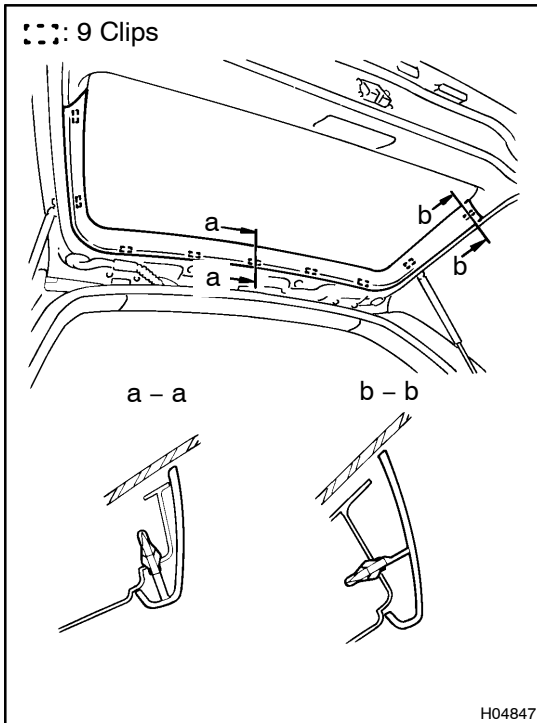

H04847

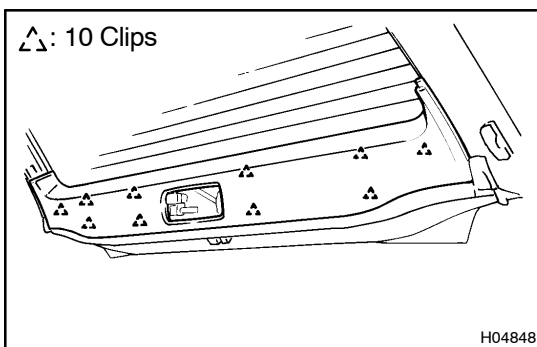


H04848

4. REMOVE BACK DOOR GARNISH

Using a screwdriver, remove the back door garnish.

HINT:

Tape up the screwdriver tip before use.

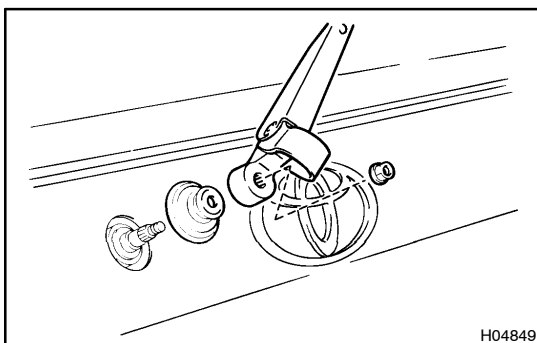

H04849


5. REMOVE REAR WIPER ARM

- (a) Open the cover.

- (b) Remove the nut and rear wiper arm.

Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)

- (c) Remove the grommet.

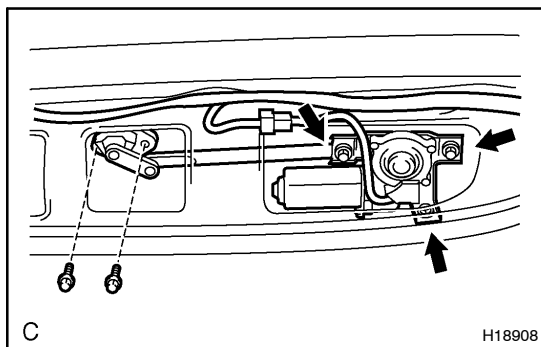


6. REMOVE REAR WIPER MOTOR AND LINK ASSEMBLY

- Disconnect the connector.
- Remove the 2 bolts.
- Unfasten the 3 bolts and remove the rear wiper motor and link assembly.

Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)

7. REMOVE REAR WIPER MOTOR RELAY

Remove the bolt and rear wiper motor relay.

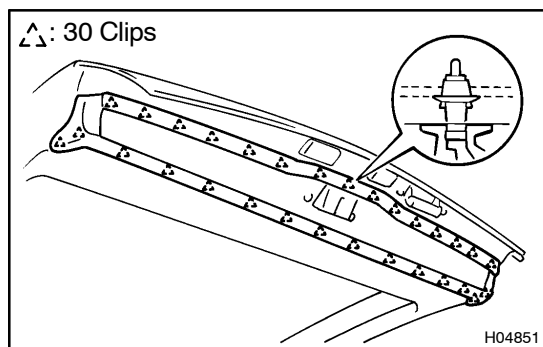


8. REMOVE BACK DOOR WEATHERSTRIP

Remove the back door weatherstrip.


NOTICE:

Do not pull strongly on the weatherstrip as it may tear.

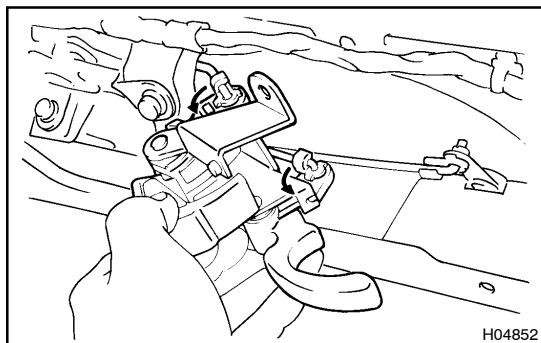


9. REMOVE BACK DOOR INSIDE HANDLE

- Remove the 2 bolts.
- Disconnect the back door lock locking rod and back door lock inside opening link, then remove the back door inside handle.

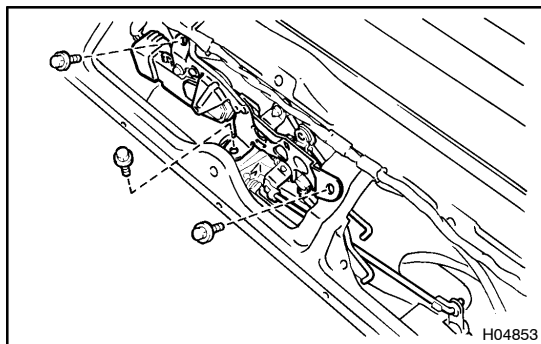


10. REMOVE BACK DOOR CONTROL

- Disconnect the links.
 - Remove the 3 bolts.
- Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)**
- Disconnect the connector, then remove the back door control.

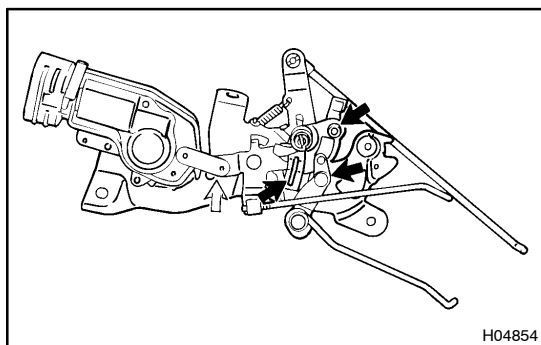

HINT:


At the time of reassembly, please refer to the following item.
Apply MP grease to the sliding surface of the back door control.

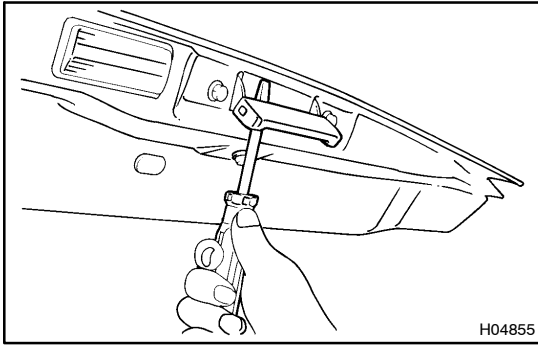**11. REMOVE BACK DOOR OUTSIDE HANDLE ASSEMBLY**

- (a) Using a screwdriver, remove the back door outside handle.

HINT:

Tape up the screwdriver tip before use.

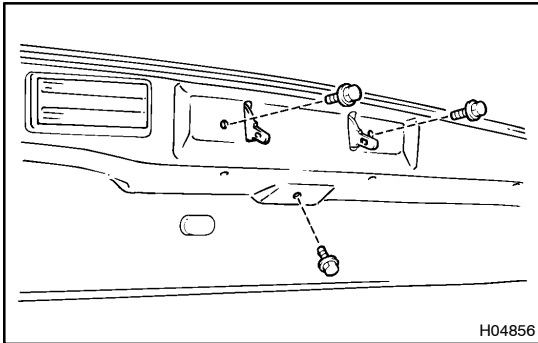

- (b) Remove the 3 bolts and back door outside handle assembly.

Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)

12. REMOVE LICENSE PLATE LIGHTS**13. REMOVE BACK DOOR LOCK**

Remove the 4 bolts and back door lock.

Torque: 7.0 N·m (71 ft·lbf, 62 in·lbf)

14. REMOVE BACK DOOR LINK PROTECTOR