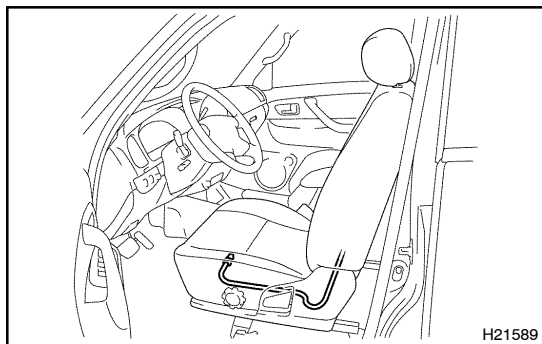


REMOVAL

NOTICE:

- If the wiring connector of the SRS is disconnected and the ignition switch is at ON position, DTCs will be recorded.
- Never use the airbag parts from another vehicle. When replacing parts, replace them with new parts.



1. REMOVE FRONT SEAT

- Remove the 4 seat track covers and 4 bolts.
- Disconnect the power seat and side airbag connector.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

- Remove the front seat.

NOTICE:

Be careful not to damage the body.

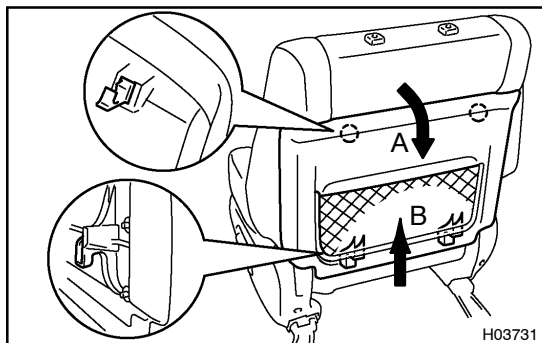
2. REMOVE HEADREST

3. REMOVE SEATBACK BOARD

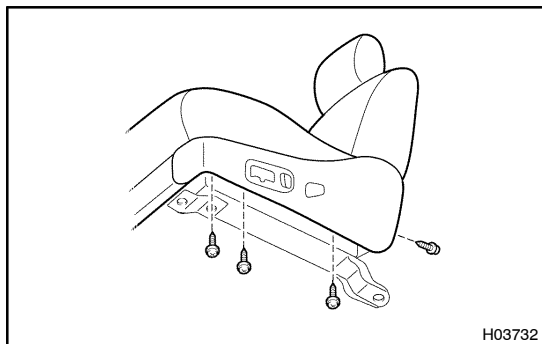
Remove the seatback board as shown in the illustration.

HINT:

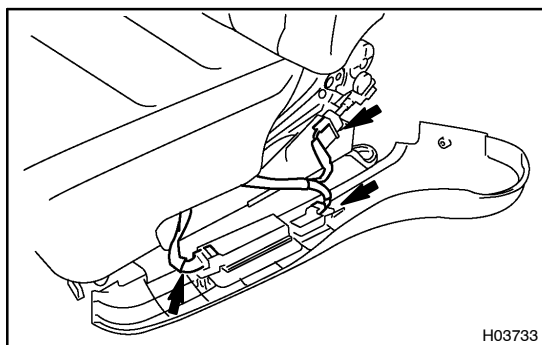
Remove the seatback board in order "A" and "B" as shown in the illustration.



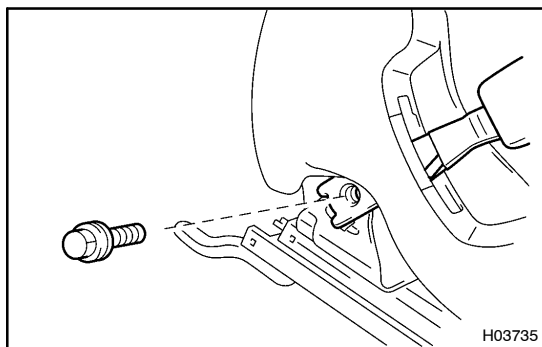
4. REMOVE SEAT CUSHION OUTER SHIELD



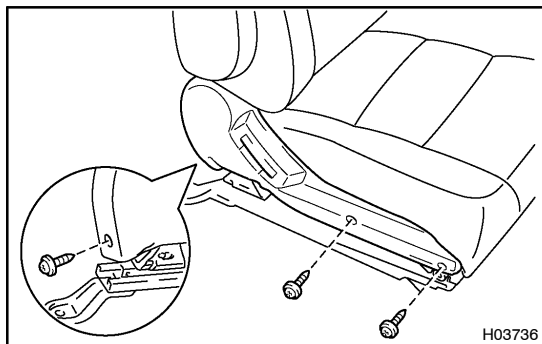
- Remove the 4 screws.



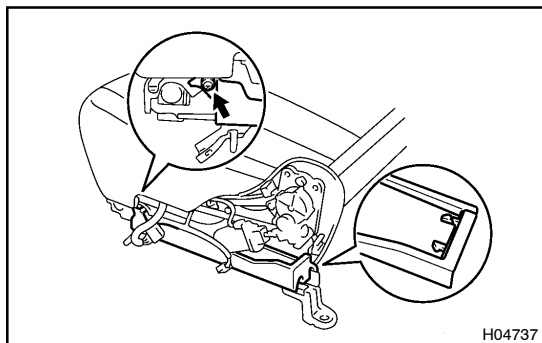
- Disconnect the connectors as shown in the illustration.
- Remove the seat cushion outer shield.

**5. REMOVE FRONT SEAT INNER BELT**

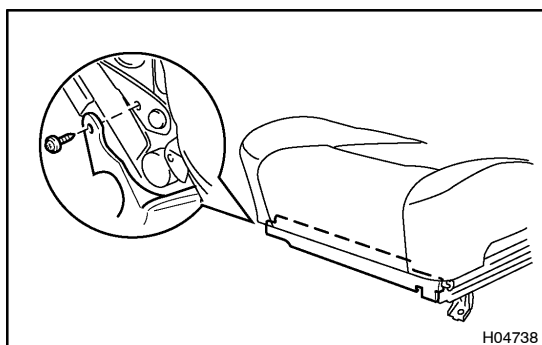
- (a) Remove the clamp, then disconnect the connector.
- (b) Remove the bolt and inner belt.

**6. REMOVE SEAT CUSHION INNER SHIELD**

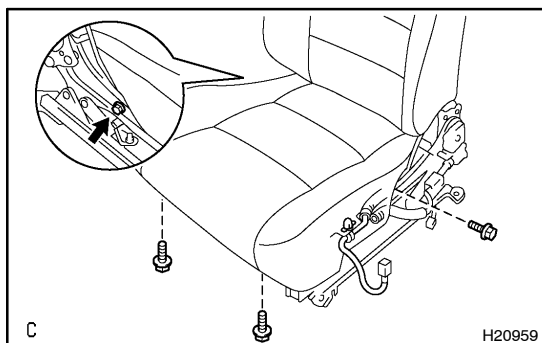
Remove the 3 screws and seat cushion inner shield.

**7. REMOVE LOWER SEAT CUSHION SHIELD**

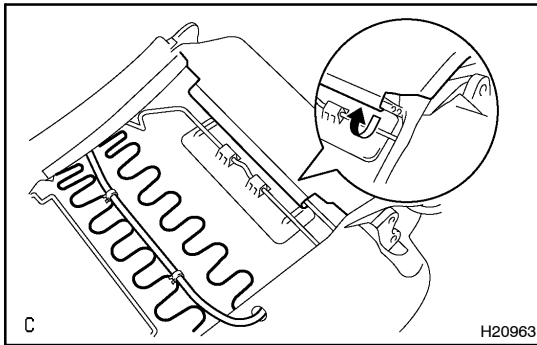
Remove the screw and lower seat cushion shield as shown in the illustration.

**8. REMOVE FRONT SEAT CUSHION SHIELD**

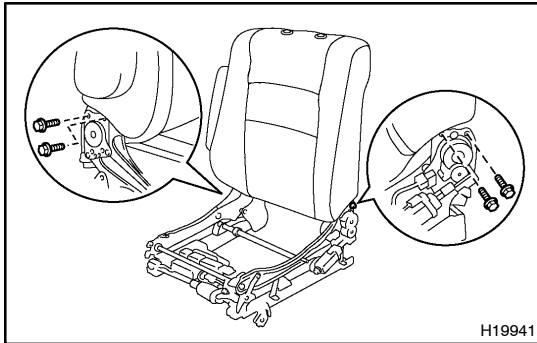
Remove the screw and front seat cushion shield.

**9. REMOVE SEAT CUSHION ASSEMBLY**

- (a) Remove the 4 bolts.
- (b) Remove the clamps from the seat cushion assembly.

**10. REMOVE SEATBACK ASSEMBLY**

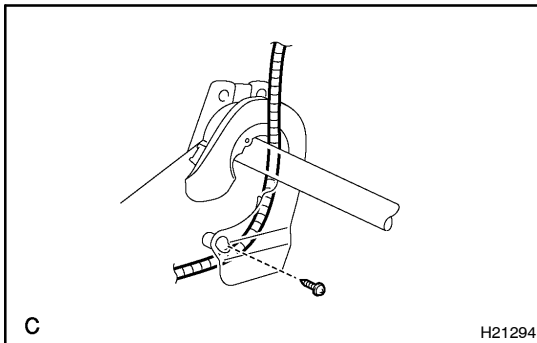
- (a) Remove the hog rings.
- (b) Disengage the hook as shown in the illustration.
- (c) Disconnect the connectors.



- (d) Remove the 4 bolts and seatback assembly.

NOTICE:

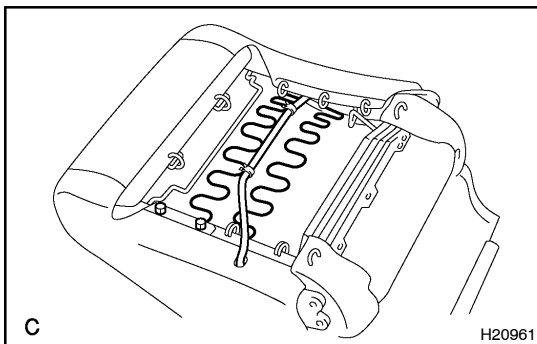
When handling the airbag connector take care not to damage the airbag wire harness.



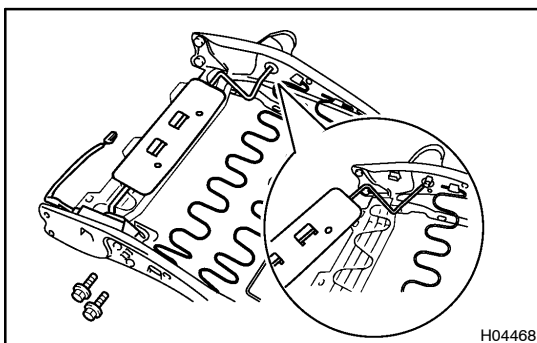
- (e) Remove the 2 screws and RH reclining adjuster inside shield, then disconnect the side airbag connector.

NOTICE:

When handling the airbag connector take care not to damage the airbag wire harness.

11. REMOVE ARMREST**12. REMOVE SEATBACK FRAME**

- (a) Remove the hog rings, clamps and the 2 bolts.
- (b) Remove the 2 headrest supports.
- (c) Remove the seatback frame from the seatback cover with pad.

**13. REMOVE LUMBER SUPPORT**

Remove the 2 bolts and lumbar support.