



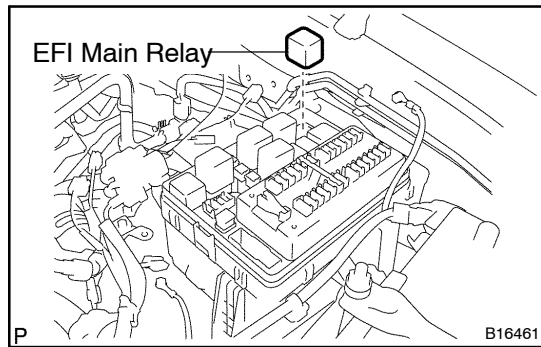

EFI MAIN RELAY INSPECTION

SF06G-18

1. REMOVE RELAY BOX COVER
2. REMOVE EFI MAIN RELAY (Marking: EFI)

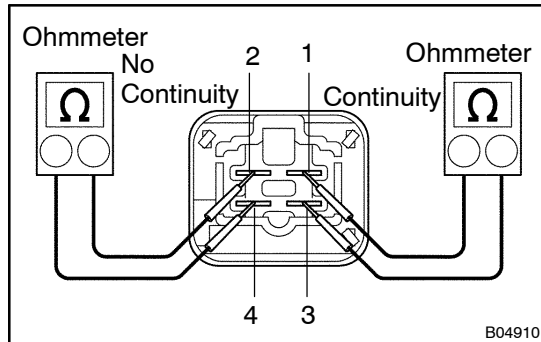

3. INSPECT EFI MAIN RELAY


- (a) Inspect the relay continuity.

- (1) Using an ohmmeter, check that there is a continuity between terminal 1 and 3.

If there is no continuity, replace the relay.

- (2) Check that there is no continuity between terminals 2 and 4.

If there is a continuity, replace the relay.

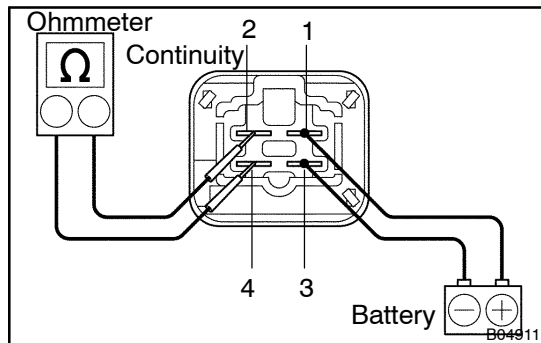

- (b) Inspect the relay operation.

- (1) Apply battery positive voltage across terminals 1 and 3.

- (2) Using an ohmmeter, check that there is a continuity between terminal 2 and 4.

If there is no continuity, replace the relay.

4. REINSTALL EFI MAIN RELAY
5. REINSTALL RELAY BOX COVER