


# INJECTOR

## ON-VEHICLE INSPECTION

SF00R-10

1. REMOVE V-BANK COVER
2. REMOVE INTAKE AIR CONNECTOR

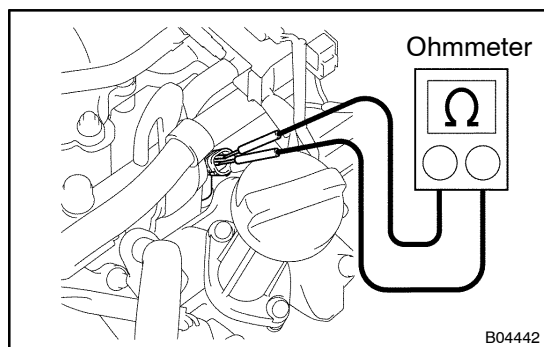

### 3. INSPECT INJECTOR RESISTANCE

- (a) Disconnect the 8 injector connectors.
- (b) Using an ohmmeter, measure the resistance between the terminals.

**Resistance: 13.4 – 14.2  $\Omega$  at 20°C (68°F)**

If the resistance is not as specified, replace the injector.

- (c) Reconnect the 8 injector connectors.
4. REINSTALL INTAKE AIR CONNECTOR
5. REINSTALL V-BANK COVER