


Spill Valve Relay Circuit

CIRCUIT DESCRIPTION

When the ignition switch is turned ON, battery positive voltage is applied to the coil, closing the contacts of the spill valve relay (Marking: SPIL/VLV) and supplying power to the terminal +B of the EDU.

WIRING DIAGRAM

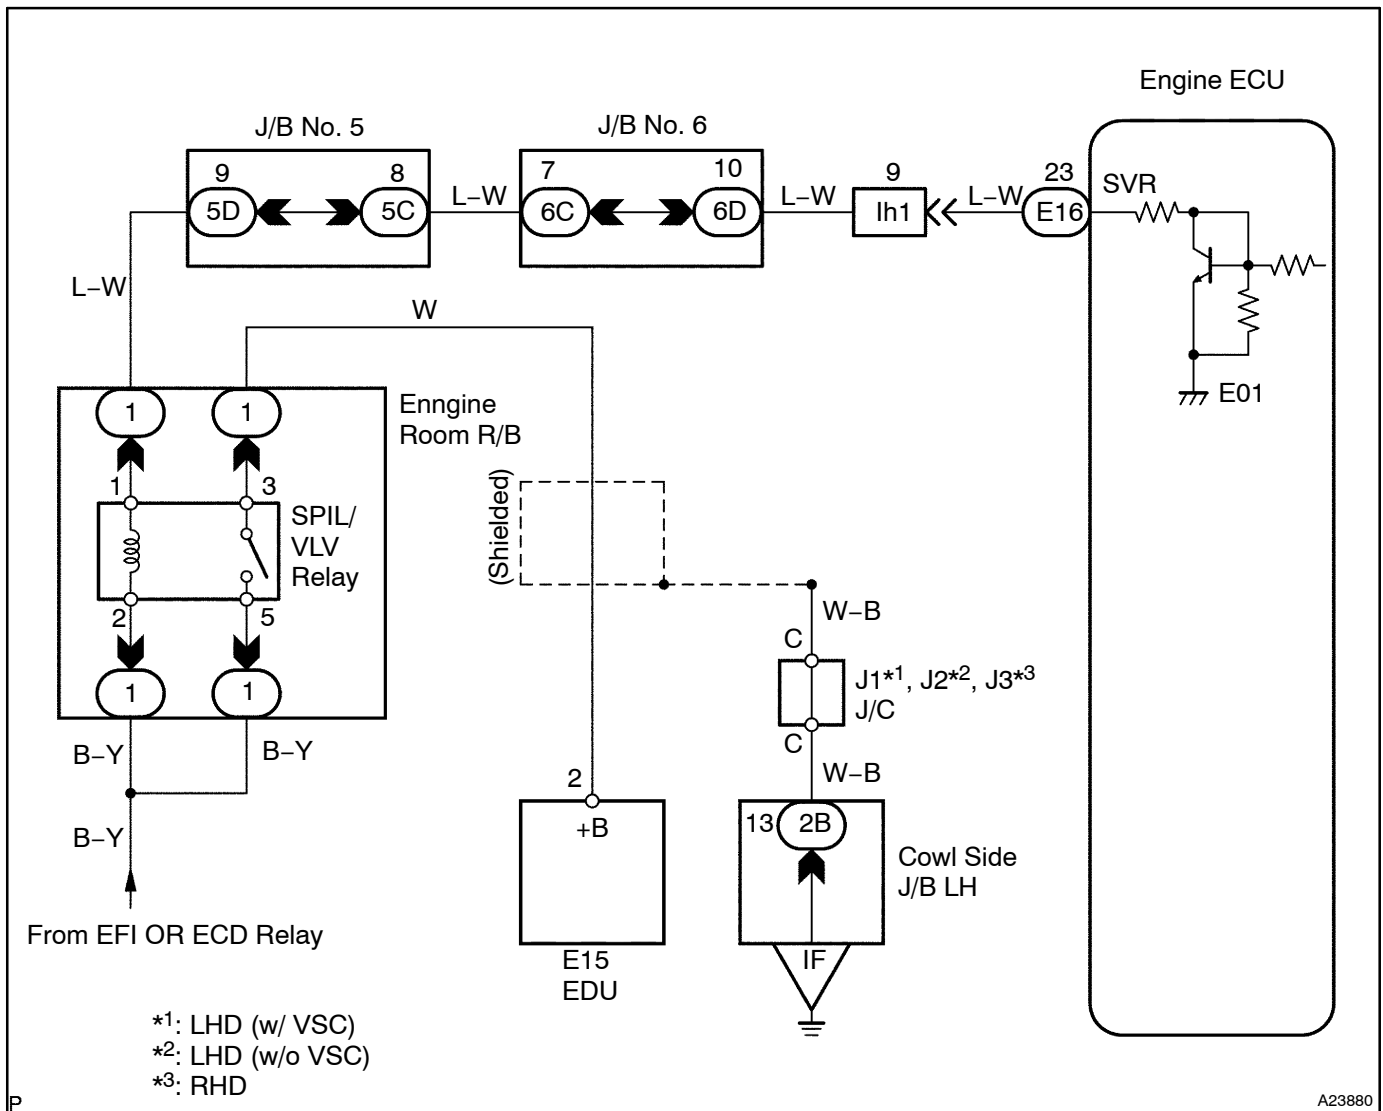

A23880

INSPECTION PROCEDURE

- | | |
|---|--|
| 1 | Check spill valve relay (Marking: SPIL/VLV) (See Pub No. RM617E, page ED-4). |
|---|--|

NG

Replace spill valve relay.

OK

- | | |
|---|--|
| 2 | Check for open and short in harness and connector between engine ECU and spill valve relay (Marking: SPIL/VLV) (See page IN-19). |
|---|--|

NG

Repair or replace harness or connector.

OK

Check and replace engine ECU (See page IN-19).
--