


Position of Parts in Engine Compartment

[LHD : 2UZ-FE]

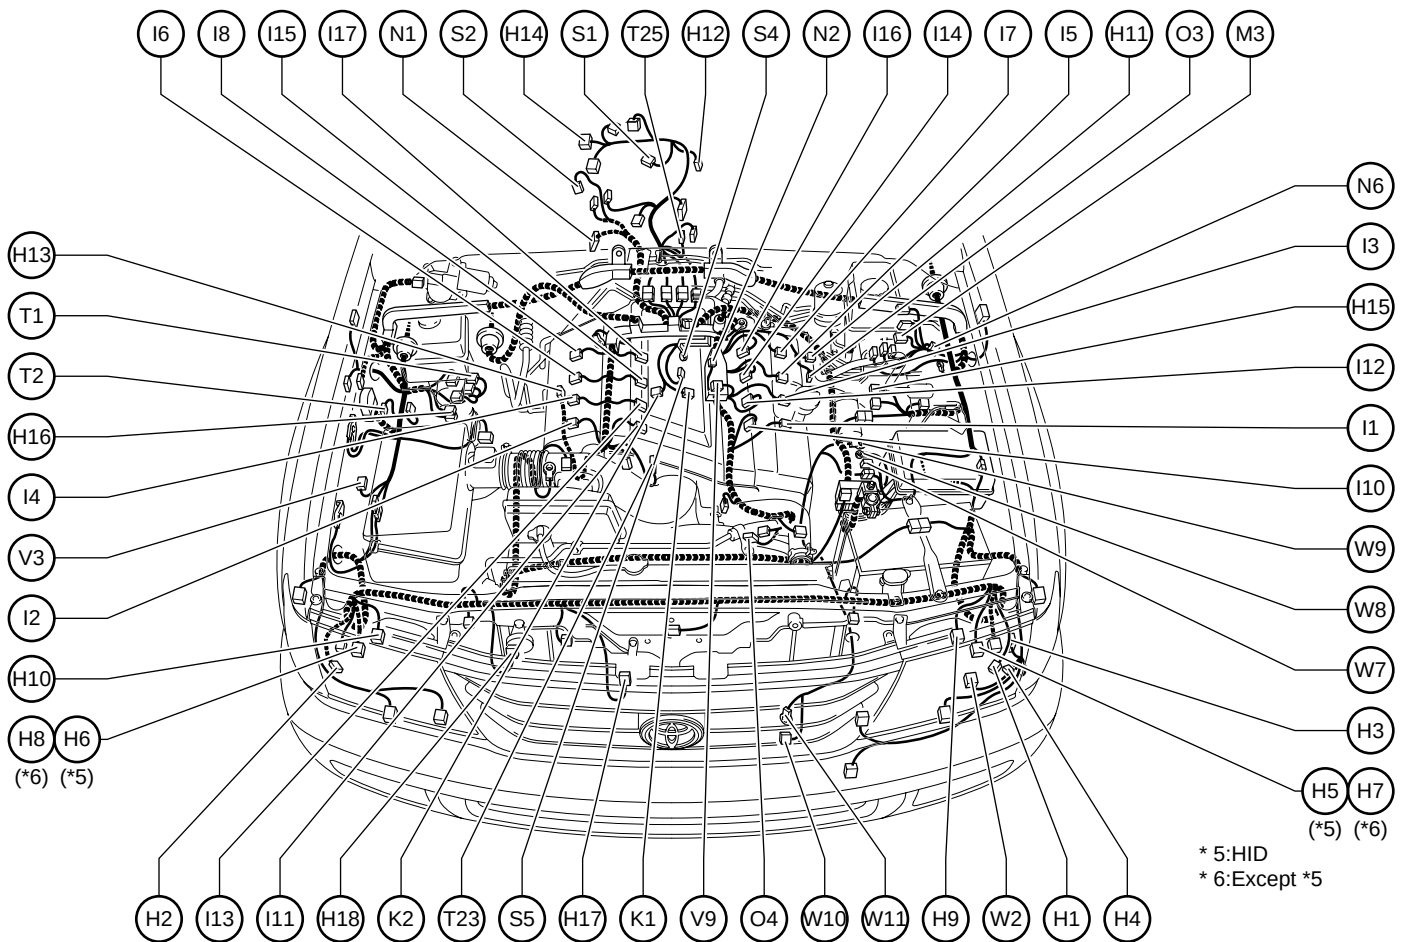

* 5:HID

* 6:Except *5

H 1 Headlight Beam Level Control Actuator LH
 H 2 Headlight Beam Level Control Actuator RH
 H 3 Headlight Cleaner Control Relay
 H 4 Headlight Cleaner Motor
 H 5 Headlight Control ECU LH
 H 6 Headlight Control ECU RH
 H 7 Headlight LH (High)
 H 8 Headlight RH (High)
 H 9 Headlight LH (Low)
 H 10 Headlight RH (Low)
 H 11 Heated Oxygen Sensor (Bank 1 Sensor 1)
 H 12 Heated Oxygen Sensor (Bank 1 Sensor 2)
 H 13 Heated Oxygen Sensor (Bank 2 Sensor 1)
 H 14 Heated Oxygen Sensor (Bank 2 Sensor 2)
 H 15 Height Control Sensor Front LH
 H 16 Height Control Sensor Front RH
 H 17 Horn LH
 H 18 Horn RH

I 1 Ignition Coil and Igniter No.1
 I 2 Ignition Coil and Igniter No.2
 I 3 Ignition Coil and Igniter No.3
 I 4 Ignition Coil and Igniter No.4
 I 5 Ignition Coil and Igniter No.5
 I 6 Ignition Coil and Igniter No.6
 I 7 Ignition Coil and Igniter No.7
 I 8 Ignition Coil and Igniter No.8
 I 10 Injector No.1
 I 11 Injector No.2
 I 12 Injector No.3
 I 13 Injector No.4
 I 14 Injector No.5
 I 15 Injector No.6
 I 16 Injector No.7
 I 17 Injector No.8

K 1 Knock Sensor (Bank 1)
 K 2 Knock Sensor (Bank 2)

M 3 Master Cylinder Pressure Sensor

N 1 A/T Indicator Light SW
 Neutral Start SW
 N 2 Noise Filter (Ignition)
 N 6 Noise Filter (ABS)

O 3 Oil Level Sensor
 O 4 Oil Pressure Sender

S 1 Speed Sensor (Combination Meter)
 S 2 Speed Sensor (ECT)
 S 4 Starter
 S 5 Starter

T 1 Temp. Sensor (AHC)
 T 2 Theft Deterrent Horn
 T 23 Throttle Control Motor and Sensor
 T 25 Turbine Speed Sensor

V 3 Variable Resistor
 V 9 VSV (EVAP)

W 2 Washer Motor
 W 7 Winch Main Relay
 W 8 Winch Main Relay
 W 9 Winch Main Relay
 W10 Winch Motor and Magnetic SW
 W11 Winch Motor and Magnetic SW