


Position of Parts in Engine Compartment

[LHD : 1FZ-FE]

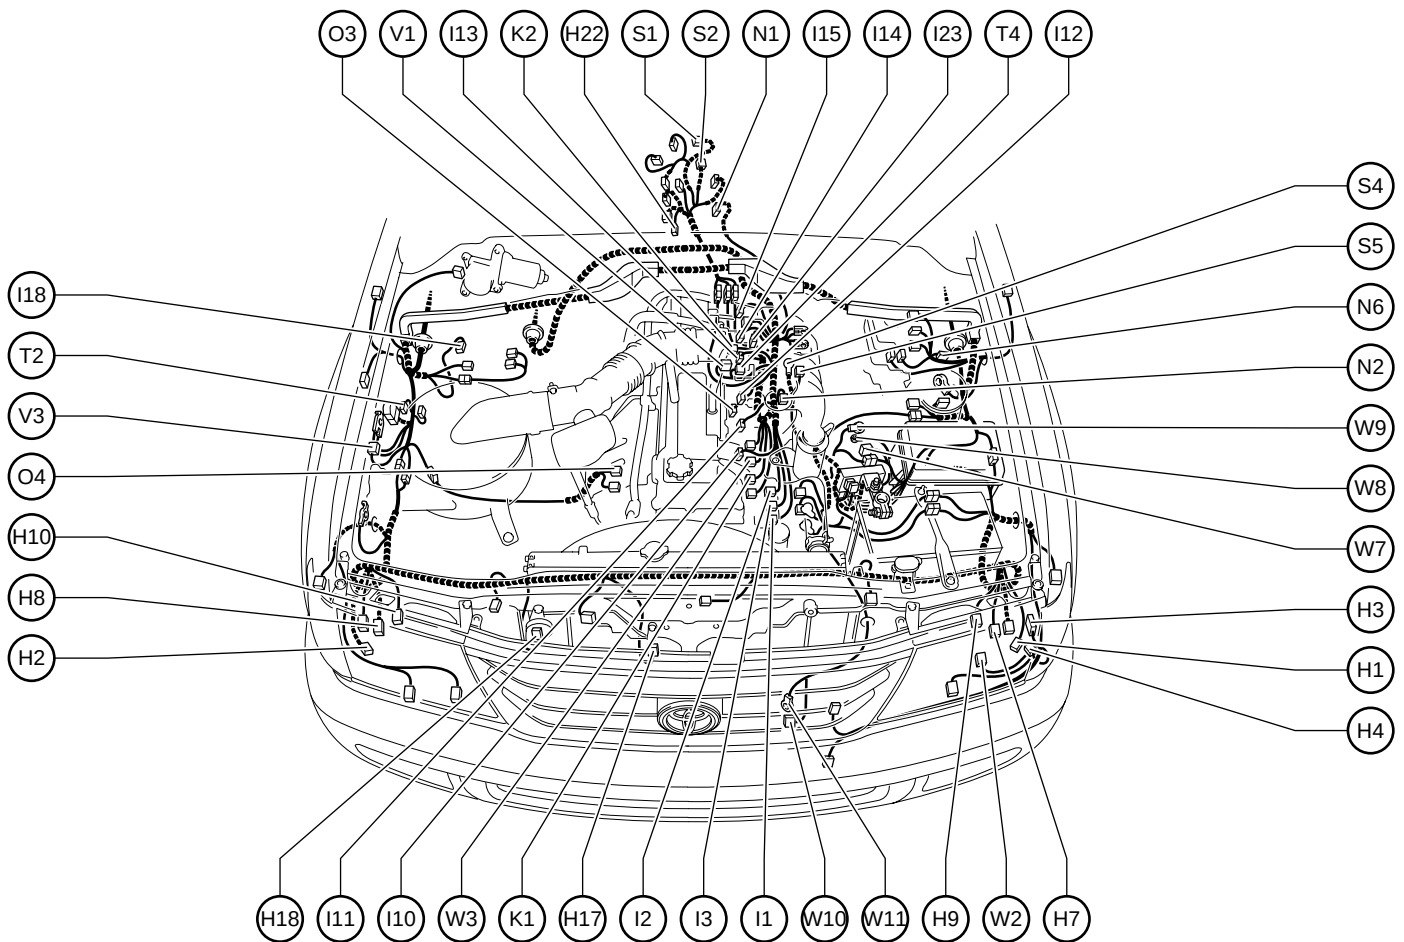

H 1 Headlight Beam Level Control Actuator LH
 H 2 Headlight Beam Level Control Actuator RH
 H 3 Headlight Cleaner Control Relay
 H 4 Headlight Cleaner Motor
 H 7 Headlight LH (High)
 H 8 Headlight RH (High)
 H 9 Headlight LH (Low)
 H10 Headlight RH (Low)
 H17 Horn LH
 H18 Horn RH
 H22 Heated Oxygen Sensor

I 1 Ignition Coil and Igniter No.1
 I 2 Ignition Coil and Igniter No.2
 I 3 Ignition Coil and Igniter No.3
 I 10 Injector No.1
 I 11 Injector No.2
 I 12 Injector No.3
 I 13 Injector No.4
 I 14 Injector No.5
 I 15 Injector No.6
 I 18 Intake Air Temp. Sensor
 I 23 ISC Valve

K 1 Knock Sensor (Bank 1)
 K 2 Knock Sensor (Bank 2)

N 1 A/T Indicator Light SW
 Neutral Start SW
 N 2 Noise Filter (Ignition)
 N 6 Noise Filter (ABS)
 O 3 Oil Pressure Sensor
 O 4 Oil Pressure Sender
 S 1 Speed Sensor (Combination Meter)
 S 2 Speed Sensor (ECT)
 S 4 Starter
 S 5 Starter

T 2 Theft Deterrent Horn
 T 4 Throttle Position Sensor

V 1 Vacuum Sensor
 V 3 Variable Resistor

W 2 Washer Motor
 W 3 Water Temp. Sender
 W 7 Winch Main Relay
 W 8 Winch Main Relay
 W 9 Winch Main Relay
 W10 Winch Motor and Magnetic SW
 W11 Winch Motor and Magnetic SW