


E ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel

[LHD]

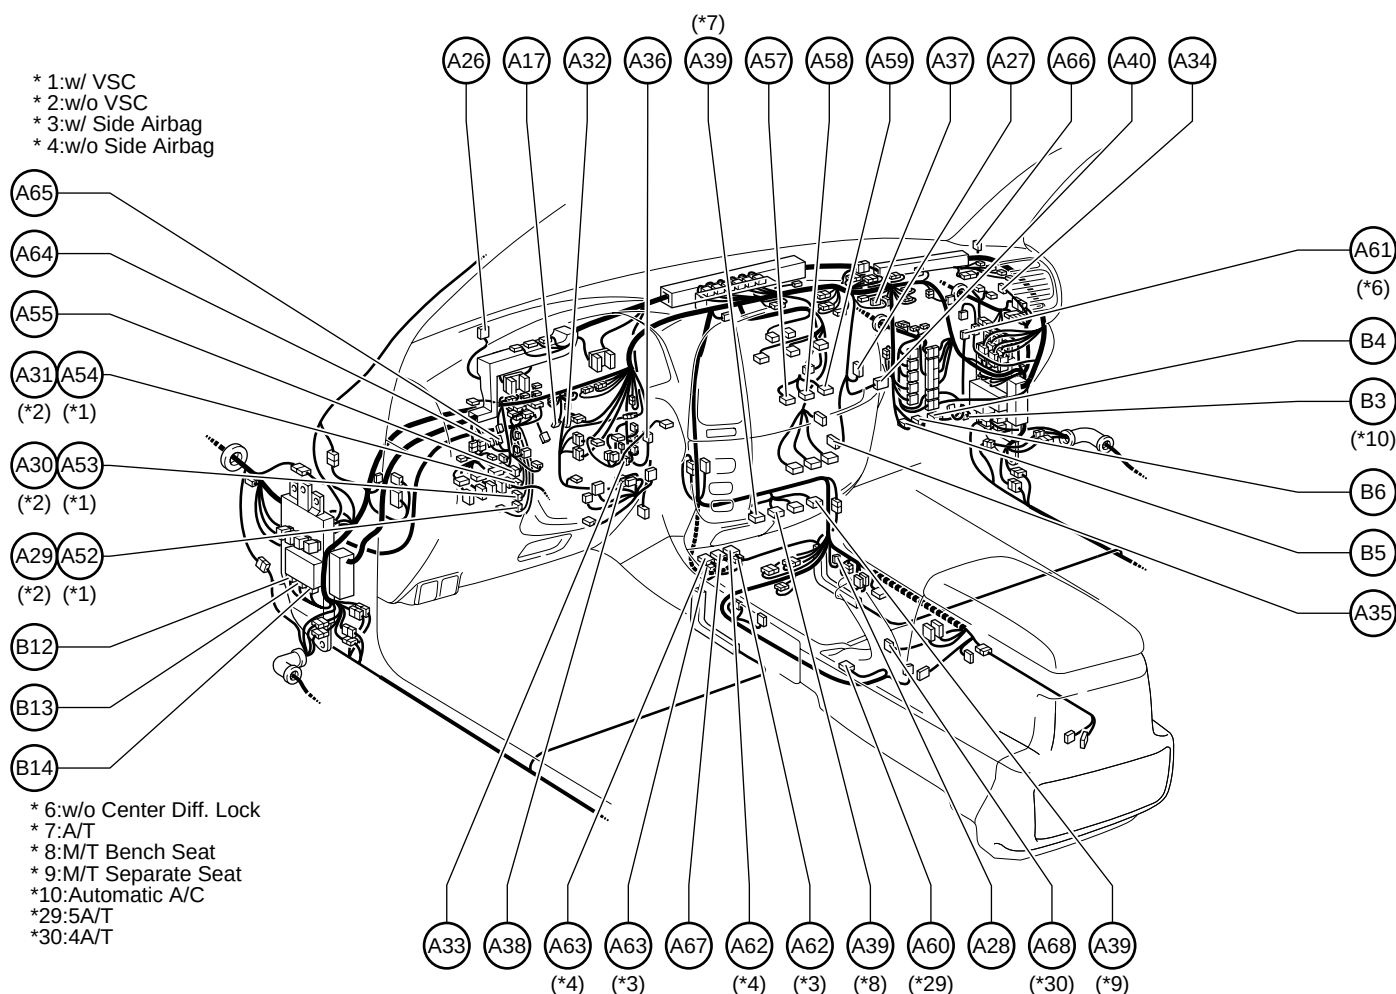

A 17 Accel Position Sensor
 A 26 A/C Solar Sensor
 A 27 A/C Thermistor
 A 28 ABS Deceleration Sensor
 A 29 ABS ECU
 A 30 ABS ECU
 A 31 ABS ECU
 A 32 Accelerator Pedal SW
 A 33 AHC Main Relay
 A 34 Air Inlet Control Servo Motor
 A 35 Air Mix Control Servo Motor
 A 36 Air Vent Mode Control Servo Motor
 A 37 Airbag Squib (Front Passenger Airbag Assembly)
 A 38 Airbag Squib (Steering Wheel Pad)
 A 39 Ashtray Illumination
 A 40 Auto Antenna Control Relay
 A 52 ABS & BA & TRC & VSC ECU
 A 53 ABS & BA & TRC & VSC ECU
 A 54 ABS & BA & TRC & VSC ECU
 A 55 ABS & BA & TRC & VSC ECU
 A 57 A/C Control Assembly
 A 58 A/C Control Assembly

A 59 A/C Control Assembly
 A 60 A/T Shift Lever Illumination
 Shift Lock Control ECU
 A 61 ADD Control Relay
 A 62 Airbag Sensor Assembly
 A 63 Airbag Sensor Assembly
 A 64 Auto Wiper ECU
 Short Connector
 A 65 Auto Wiper ECU
 A 66 Automatic Light Control Sensor
 A 67 Airbag Sensor Assembly
 A 68 A/T Shift Lever Illumination
 O/D Main SW
 Shift Lock Control ECU
 B 3 Blower Motor Controller
 B 4 Blower HI Relay
 B 5 Blower LO Relay
 B 6 Blower ME Relay
 B 12 Body ECU
 B 13 Body ECU
 B 14 Body ECU