


## Position of Parts in Body

[LHD : Liftgate Type]

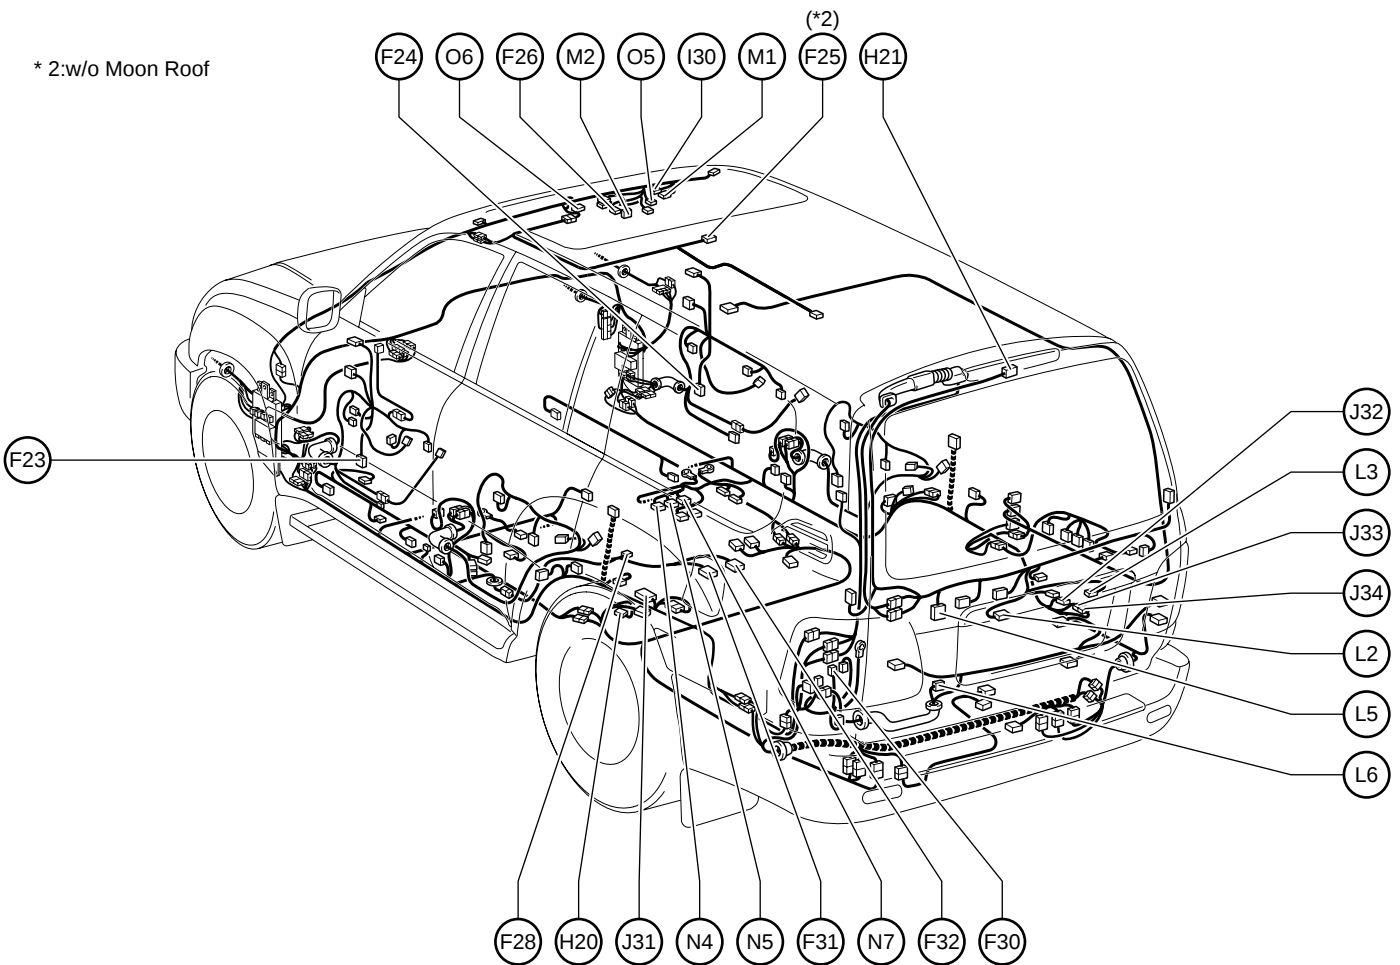

F 23 Front Door Speaker LH  
 F 24 Front Door Speaker RH  
 F 25 Front Interior Light  
 F 26 Front Personal Light  
 F 28 Fuel Pump  
     Fuel Sender  
 F 30 Fuel Pump Select Relay  
 F 31 Fuel Solenoid Valve 1  
 F 32 Fuel Solenoid Valve 2

H 20 Height Control Sensor Rear  
 H 21 High Mounted Stop Light

I 30 Inner Mirror

J 31 Junction Connector  
 J 32 Junction Connector  
 J 33 Junction Connector  
 J 34 Junction Connector

L 2 License Plate Light LH  
 L 3 License Plate Light RH  
 L 5 License Plate Light No.1  
 L 6 License Plate Light No.2

M 1 Moon Roof Control ECU  
 M 2 Moon Roof Control SW

N 4 Navigation ECU  
 N 5 Navigation ECU  
 N 7 Navigation ECU

O 5 Overhead J/B  
 O 6 Overhead J/B