


## Position of Parts in Engine Compartment

[RHD : 1FZ-FE]

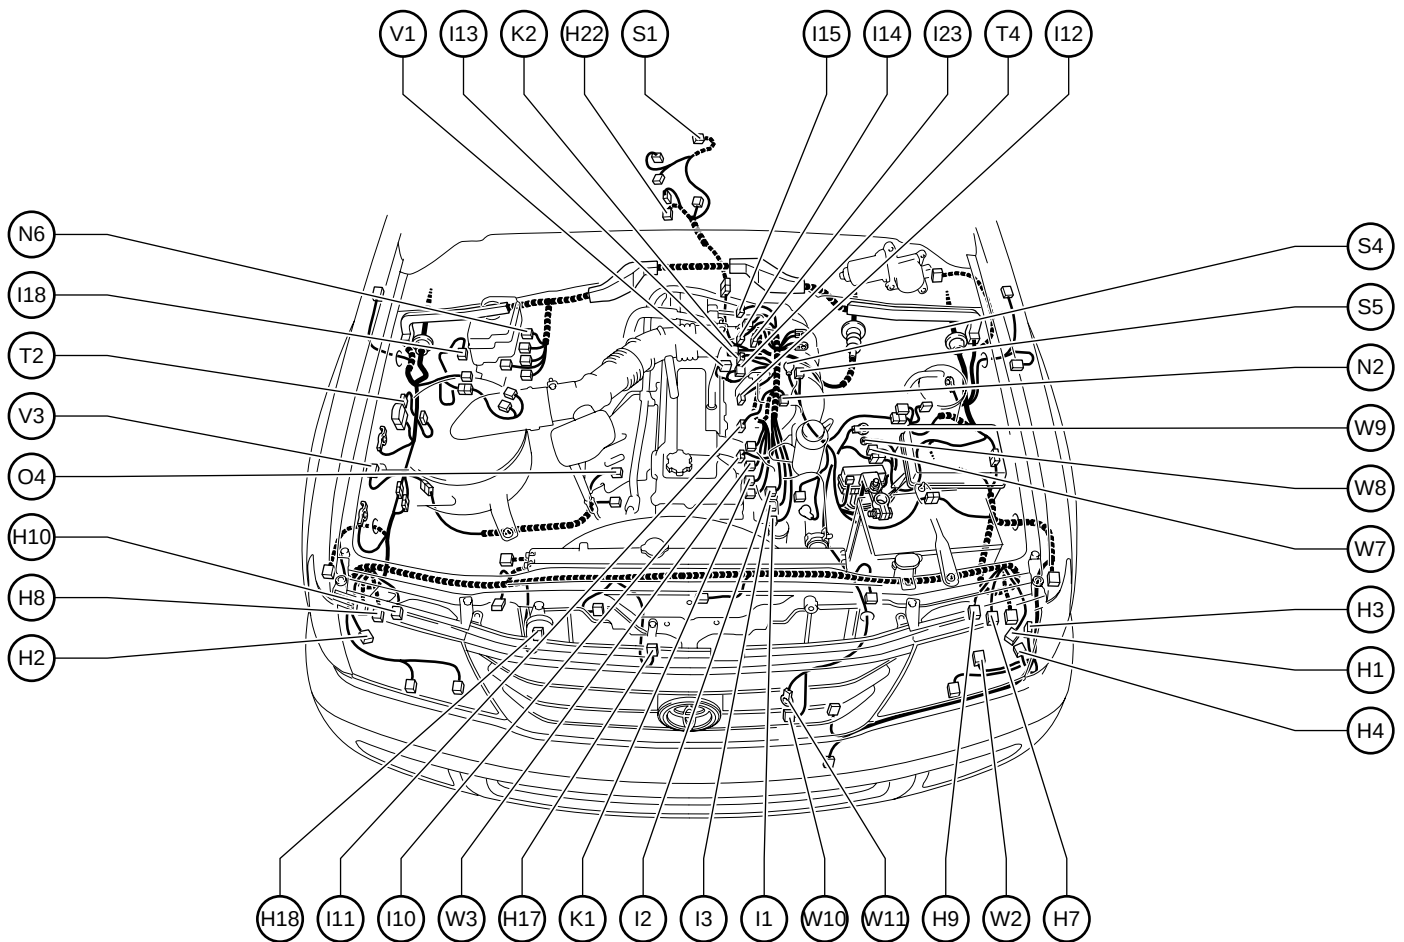

H 1 Headlight Beam Level Control Actuator LH  
 H 2 Headlight Beam Level Control Actuator RH  
 H 3 Headlight Cleaner Control Relay  
 H 4 Headlight Cleaner Motor  
 H 7 Headlight LH (High)  
 H 8 Headlight RH (High)  
 H 9 Headlight LH (Low)  
 H10 Headlight RH (Low)  
 H17 Horn LH  
 H18 Horn RH  
 H22 Heated Oxygen Sensor

I 1 Ignition Coil and Igniter No.1  
 I 2 Ignition Coil and Igniter No.2  
 I 3 Ignition Coil and Igniter No.3  
 I 10 Injector No.1  
 I 11 Injector No.2  
 I 12 Injector No.3  
 I 13 Injector No.4  
 I 14 Injector No.5  
 I 15 Injector No.6  
 I 18 Intake Air Temp. Sensor  
 I 23 ISC Valve

K 1 Knock Sensor (Bank 1)  
 K 2 Knock Sensor (Bank 2)  
 N 2 Noise Filter (Ignition)  
 N 6 Noise Filter (ABS)  
 O 4 Oil Pressure Sender  
 S 1 Speed Sensor (Combination Meter)  
 S 4 Starter  
 S 5 Starter

T 2 Theft Deterrent Horn  
 T 4 Throttle Position Sensor

V 1 Vacuum Sensor  
 V 3 Variable Resistor

W 2 Washer Motor  
 W 3 Water Temp. Sender  
 W 7 Winch Main Relay  
 W 8 Winch Main Relay  
 W 9 Winch Main Relay  
 W10 Winch Motor and Magnetic SW  
 W11 Winch Motor and Magnetic SW