


E ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[RHD : 1HZ]

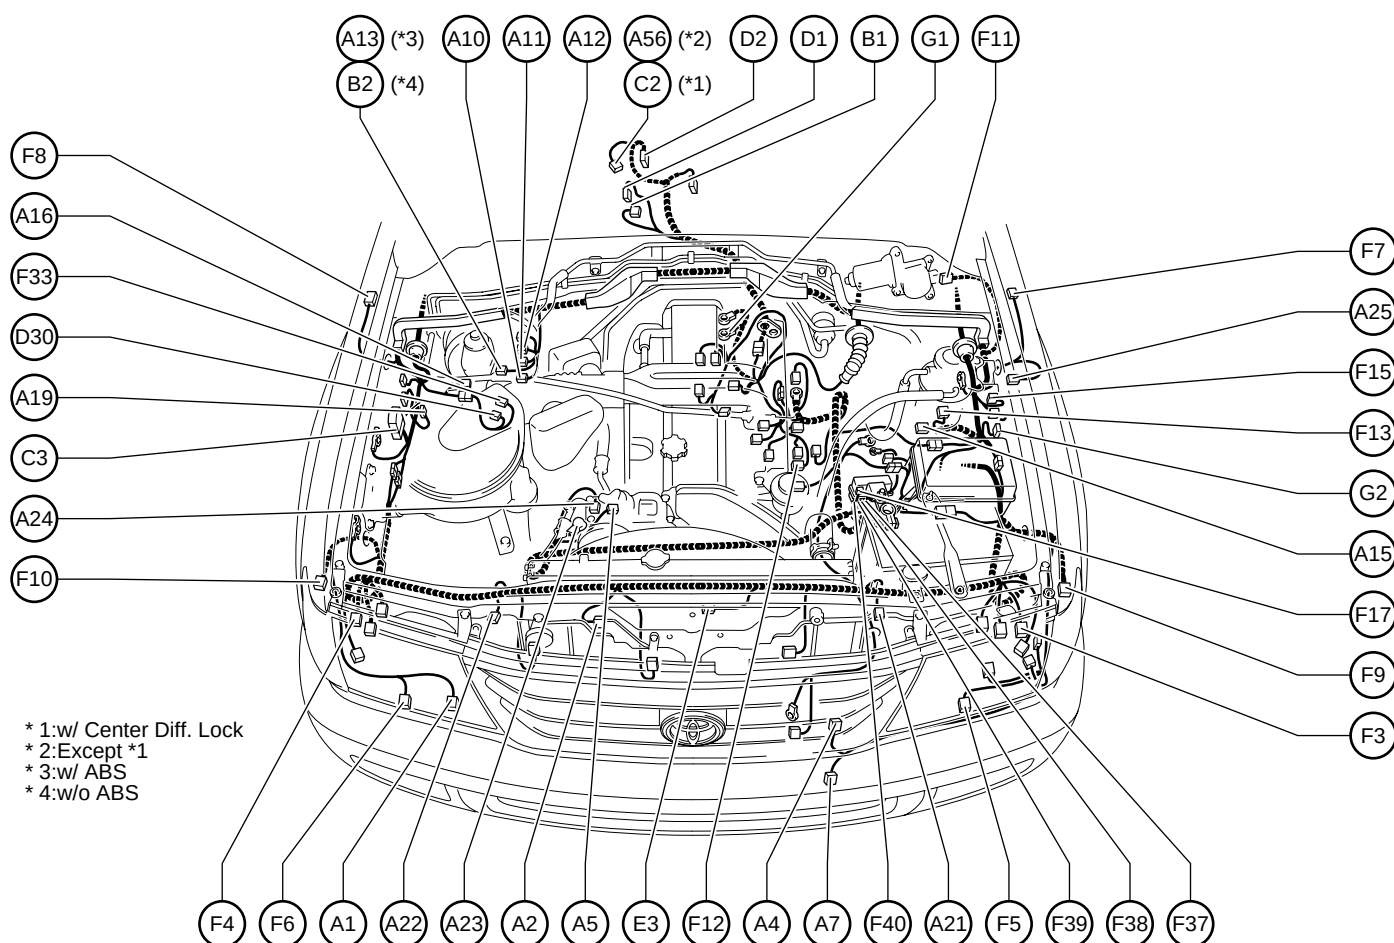

* 1:w/ Center Diff. Lock
 * 2:Except *1
 * 3:w/ ABS
 * 4:w/o ABS

A 1 A/C Ambient Temp. Sensor
 A 2 A/C Condenser Fan Motor
 A 4 Pressure SW
 A 5 A/C Magnetic Clutch
 A 7 A/C Magnetic Valve
 A10 ABS Actuator
 A11 ABS Actuator
 A12 ABS Actuator
 A13 ABS Actuator
 A15 ABS Speed Sensor Front LH
 A16 ABS Speed Sensor Front RH
 A19 Air Cleaner Warning Sensor
 A21 Airbag Sensor Front LH
 A22 Airbag Sensor Front RH
 A23 Alternator
 A24 Alternator
 A25 Auto Antenna Motor
 A56 ADD Control Motor

B 1 Back-Up Light SW
 B 2 Brake Fluid Level Warning SW

C 2 Center Diff. Lock Control Motor
 C 3 Check Connector

D 1 Detection SW (Center Diff. Lock)
 D 2 Detection SW (Transfer L Position)
 D30 Detection SW (Front Diff. Lock)

E 3 Engine Hood Courtesy SW

F 3 Front Clearance Light LH
 F 4 Front Clearance Light RH
 F 5 Front Fog Light LH
 F 6 Front Fog Light RH
 F 7 Front Side Turn Signal Light LH
 F 8 Front Side Turn Signal Light RH
 F 9 Front Turn Signal Light LH
 F10 Front Turn Signal Light RH
 F11 Front Wiper Motor
 F12 Fuel Cut Valve Controller
 F13 Fuel Heater SW
 F15 Fuel Sediment SW
 F17 Fusible Link Block
 F33 Front Diff. Lock Motor
 F37 Fusible Link Block
 F38 Fusible Link Block
 F39 Fusible Link Block
 F40 Fusible Link Block

G 1 Glow Plug
 G 2 Glow Plug Relay