


## Position of Parts in Instrument Panel

[RHD]

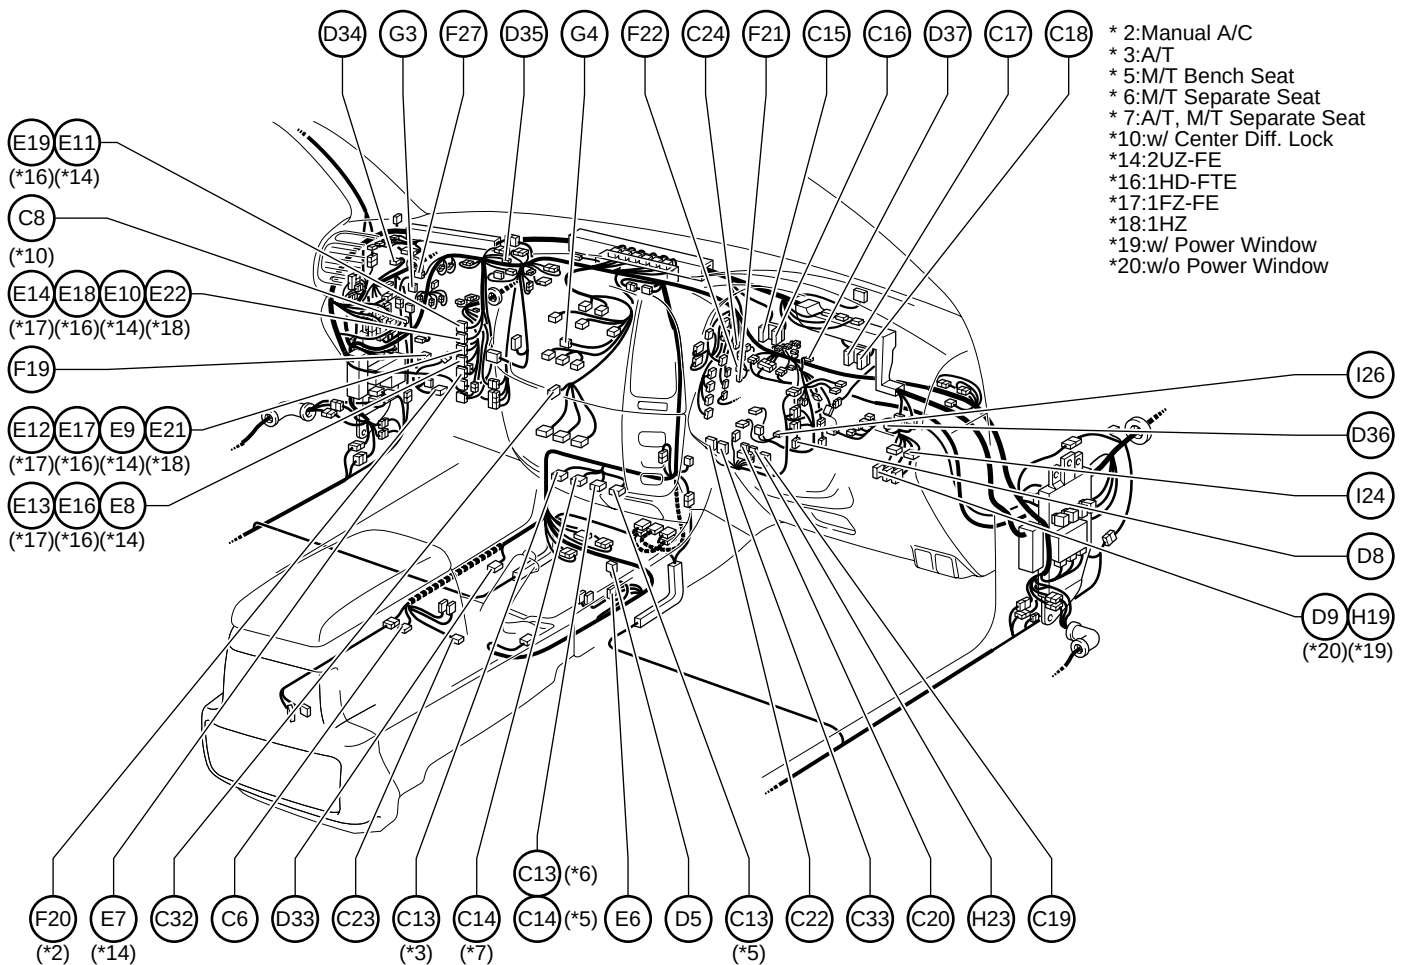

- \* 2: Manual A/C
- \* 3: A/T
- \* 5: M/T Bench Seat
- \* 6: M/T Separate Seat
- \* 7: A/T, M/T Separate Seat
- \* 10: w/ Center Diff. Lock
- \* 14: 2UZ-FE
- \* 16: 1HD-FTE
- \* 17: 1FZ-FE
- \* 18: 1HZ
- \* 19: w/ Power Window
- \* 20: w/o Power Window

- C 6 CD Automatic Changer
- C 8 Center Diff. Lock Control Relay
- C 13 Cigarette Lighter
- C 14 Cigarette Lighter Illumination
- C 15 Combination Meter
- C 16 Combination Meter
- C 17 Combination Meter
- C 18 Combination Meter
- C 19 Combination SW
- C 20 Combination SW
- C 22 Combination SW
- C 23 Cooler Box
- C 24 Cruise Control Clutch SW
- C 32 Center Cluster Integration Panel
- C 33 Combination SW

- D 5 Damping Mode Select SW and Height Control SW
- D 8 DLC3
- D 9 Door Lock Control SW
- D 33 Deceleration Sensor
- D 34 Diode (Front Fog No.2)
- D 35 Diode (Viscous Heater1)
- D 36 Diode (Viscous Heater2)
- D 37 Double Lock Control Relay

- E 6 ECT Pattern Select SW
- E 7 Engine and ECT ECU  
Engine ECU
- E 8 Engine and ECT ECU  
Engine ECU
- E 9 Engine and ECT ECU  
Engine ECU
- E 10 Engine and ECT ECU  
Engine ECU

- E 11 Engine and ECT ECU  
Engine ECU
- E 12 Engine and ECT ECU  
Engine ECU
- E 13 Engine and ECT ECU  
Engine ECU
- E 14 Engine and ECT ECU  
Engine ECU
- E 16 Engine and ECT ECU  
Engine ECU
- E 17 Engine and ECT ECU  
Engine ECU
- E 18 Engine and ECT ECU  
Engine ECU
- E 19 Engine and ECT ECU  
Engine ECU
- E 21 Emission Control ECU
- E 22 Emission Control ECU

- F 19 Front Blower Motor
- F 20 Front Blower Resistor
- F 21 Front/Rear Diff. Lock Control SW
- F 22 Fuel Tank Changeover SW
- F 27 Front/Rear Diff. Lock Control ECU

- G 3 Glove Box Light
- G 4 Gateway ECU

- H 19 Headlight Beam Level Control SW
- H 23 Headlight Cleaner SW

- I 24 Idle-Up SW
- I 26 Ignition SW