



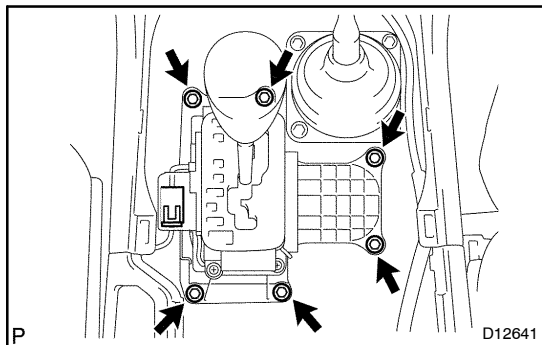

INSTALLATION

1. INSTALL FLOOR SHIFT LEVER ASSEMBLY

- (a) Install the floor shift lever assembly with the 6 bolts.
Torque: 8.3 N·m (85 kgf·cm, 73 in·lbf)
- (b) Connect the connector to the floor shift lever assembly.

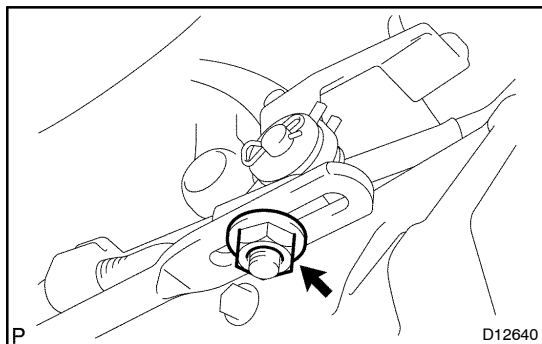

2. INSTALL No.1 FLOOR SHIFT GEAR SHIFTING ROD

- (a) Shift into the N position.
- (b) Connect the No.1 floor shift gear shifting rod and the connecting rod swivel with the nut.

Torque: 13 N·m (130 kgf·cm, 9 ft·lbf)

3. INSTALL UPPER CONSOL PANNEL

(See Page [BO-84](#))

4. INSTALL TRANSFER SHIFT LEVER KNOB