


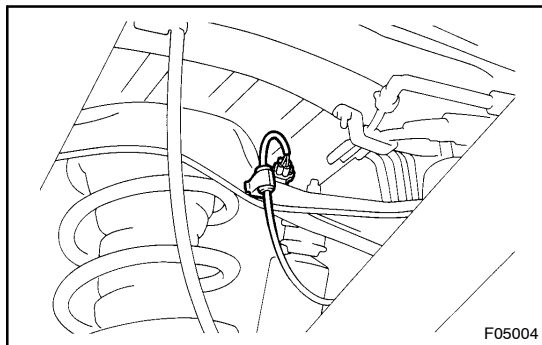

REMOVAL

REMOVE SPEED SENSOR

- (a) Disconnect the speed sensor connector.
- (b) Remove the clamp bolt from the upper control bracket.
Torque: 13 N·m (130 kgf·cm, 9 ft·lbf)
- (c) Remove the 6 resin clips, holding the sensor wire harness from the frame, upper control arm and axle housing.
- (d) Remove the mounting bolt and speed sensor.
Torque: 8.0 N·m (82 kgf·cm, 71 in·lbf)
- (e) Remove the O-ring from the speed sensor.

