


Fuel Tank and Lines COMPONENTS

Fuel Evaporative Separator

Fuel Tank Cap

Fuel Tube Connector

Fuel Tank Inlet Pipe

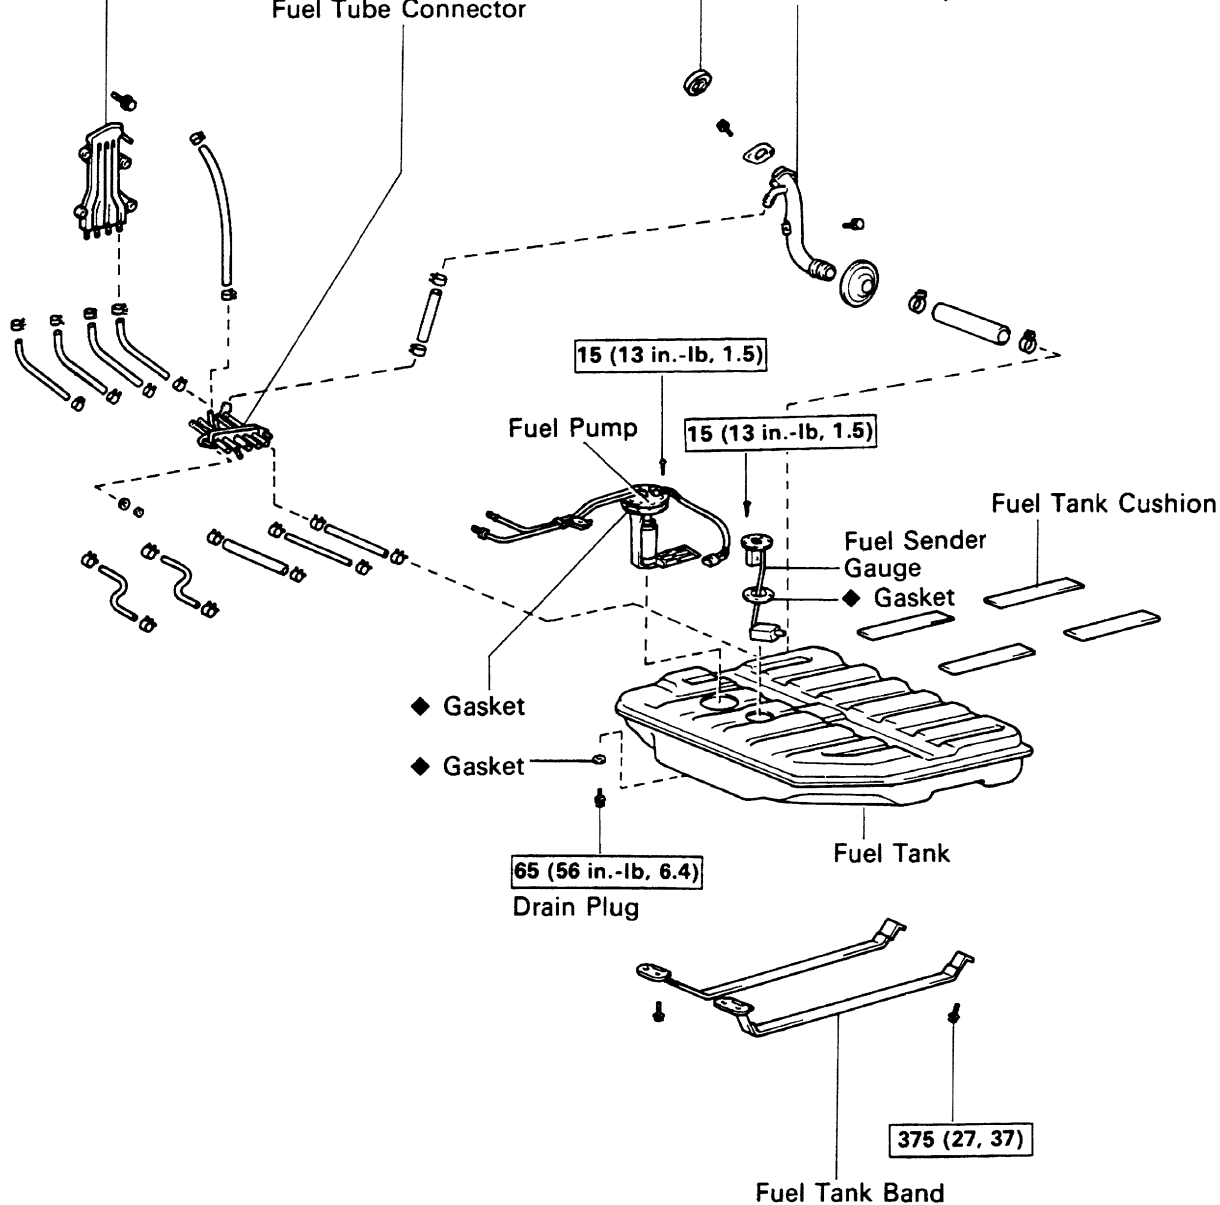


kg-cm (ft-lb, N·m) : Specified torque

◆ Non-reusable part

PRECAUTIONS

1. Always use new gaskets when replacing the fuel tank or component parts.
2. Apply the proper torque to all parts tightened.

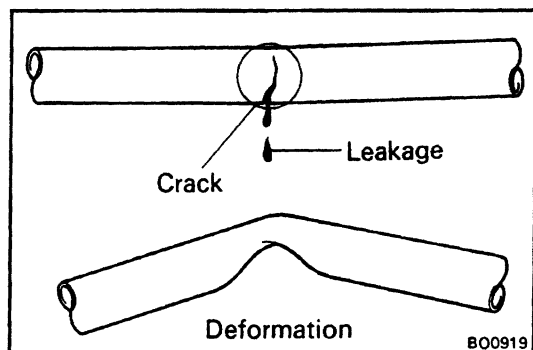

INSPECT FUEL LINES AND CONNECTIONS

- (a) Check the fuel lines for cracks or leakage, and all connections for deformation.
- (b) Check the fuel tank vapor vent system hoses and connections for looseness, kinks or damage.
- (c) Check the fuel tank for deformation, cracks, fuel leakage or tank band looseness.
- (d) Check the filler neck for damage or fuel leakage.
- (e) Hose and tube connections are as shown in the illustration.
If a problem is found, repair or replace the parts as necessary.

