
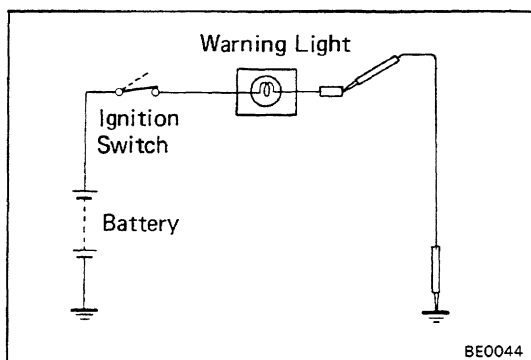


AT Fluid Temperature Warning System

A/T FLUID TEMPERATURE WARNING SYSTEM CIRCUIT

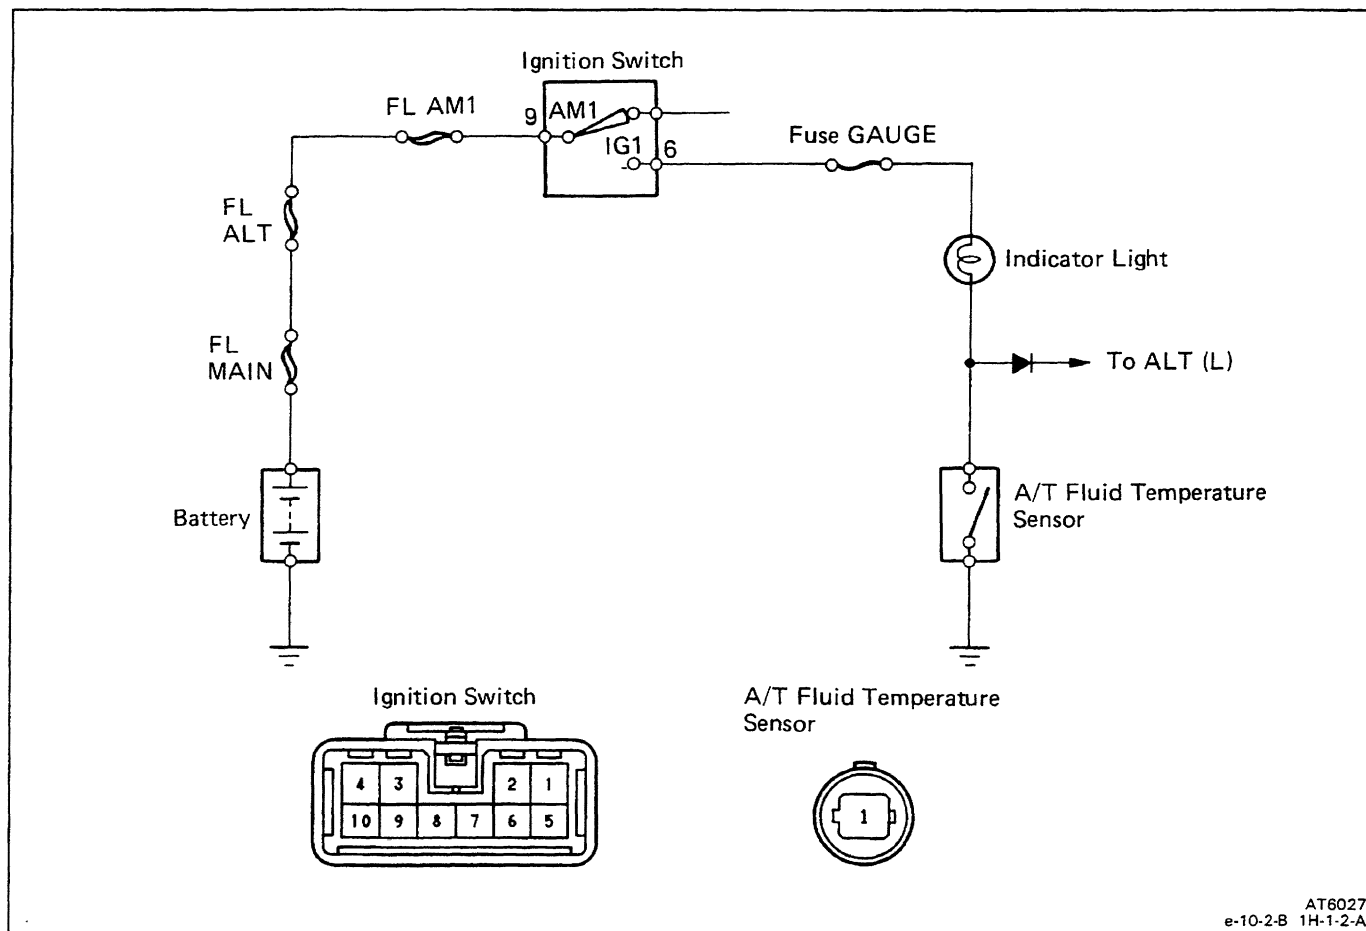

INSPECTION OF A/T FLUID TEMPERATURE WARNING SYSTEM COMPONENTS

1. INSPECT A/T FLUID TEMPERATURE WARNING LIGHT

- Disconnect the connector from the temperature sensor. Connect terminal of the wire harness side connector and body ground.
- Turn the ignition switch ON, check that the light go on. If warning light does not light, test the bulb.

2. INSPECT A/T FLUID TEMPERATURE SENSOR

Check that there is continuity at the temperature of $145^{\circ}\text{C} - 155^{\circ}\text{C}$ ($325^{\circ}\text{F} - 343^{\circ}\text{F}$).

If continuity is not as specified, replace the sensor.

