

## FUEL FILTER ON — VEHICLE INSPECTION

EG1A8-02


### INSPECT FUEL PRESSURE

(See step 2 on page EG-235)

EG1A9-02

## COMPONENTS FOR REMOVAL AND INSTALLATION

EG

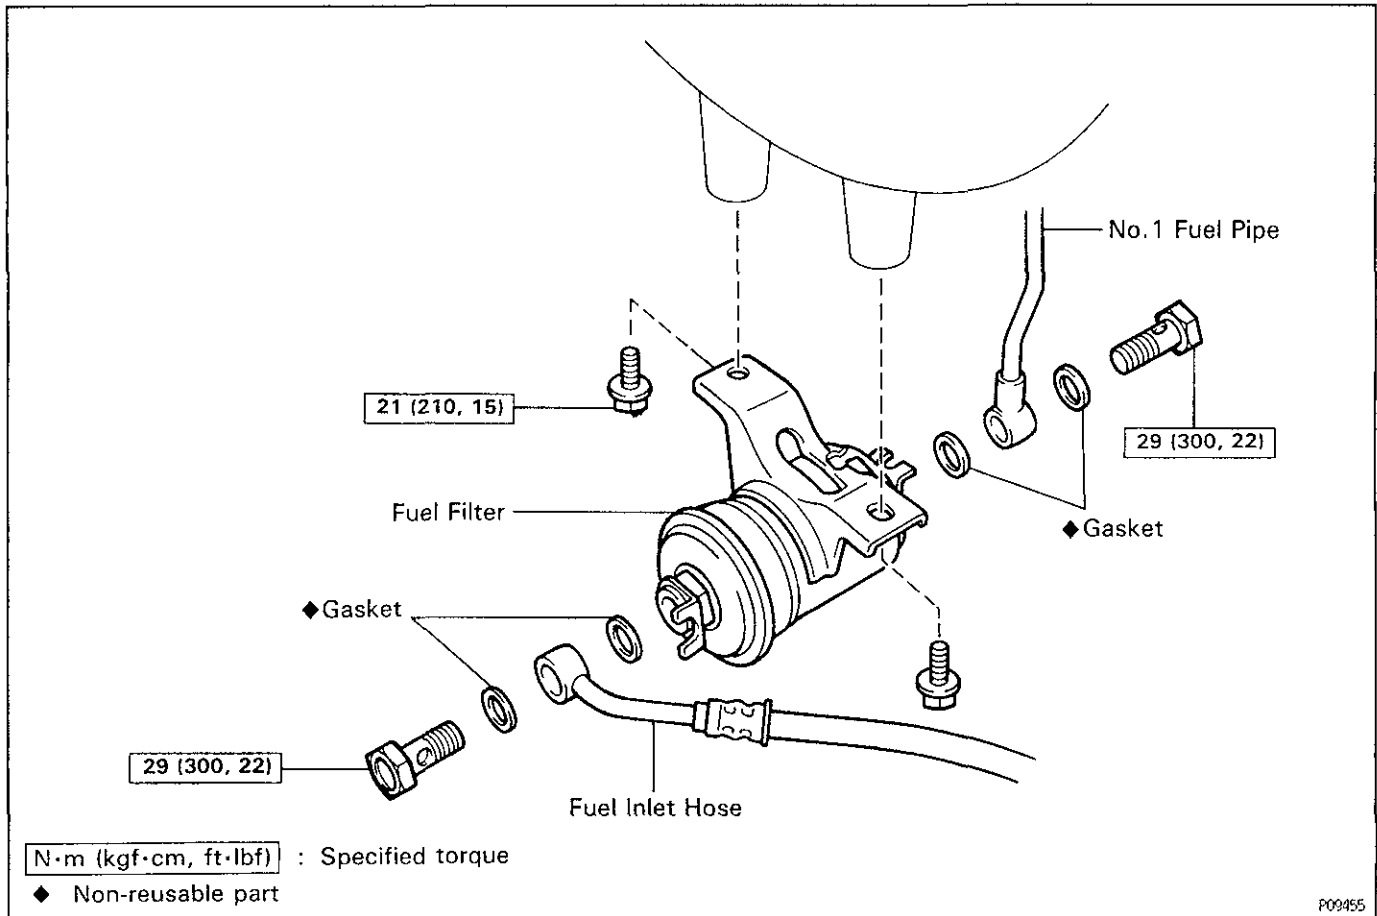

P09455