

78

78



SYSTEM OUTLINE

WITH THE IGNITION SW TURNED ON, THE CURRENT FLOWS TO **TERMINAL 18** OF THE WIPER AND WASHER SW, **TERMINAL 2** OF THE WASHER MOTOR AND **TERMINAL 4** OF THE FRONT WIPER MOTOR THROUGH THE WIPER FUSE.

1. LOW SPEED POSITION

WITH WIPER SW TURNED TO **LOW** POSITION, THE CURRENT FLOWS FROM **TERMINAL 18** OF THE WIPER AND WASHER SW → **TERMINAL 7** → **TERMINAL 2** OF THE FRONT WIPER MOTOR → FRONT WIPER MOTOR → TO **GROUND** AND CAUSES TO THE WIPER MOTOR TO RUN AT LOW SPEED.

2. HIGH SPEED POSITION

WITH WIPER SW TURNED TO **HIGH** POSITION, THE CURRENT FLOWS FROM **TERMINAL 18** OF THE WIPER AND WASHER SW → **TERMINAL 13** → **TERMINAL 1** OF THE FRONT WIPER MOTOR → FRONT WIPER MOTOR → TO **GROUND** AND CAUSES TO THE WIPER MOTOR TO RUN AT HIGH SPEED.

3. INT POSITION

WITH WIPER SW TURNED TO **INT** POSITION, THE RELAY OPERATES AND THE CURRENT WHICH IS CONNECTED BY RELAY FUNCTION FLOWS FROM **TERMINAL 18** OF THE WIPER AND WASHER SW → **TERMINAL 16** → TO GROUND. THIS FLOW OF CURRENT OPERATES THE INTERMITTENT CIRCUIT AND THE CURRENT FLOWS FROM **TERMINAL 18** OF THE WIPER AND WASHER SW → **TERMINAL 7** → **TERMINAL 2** OF THE FRONT WIPER MOTOR → FRONT WIPER MOTOR → TO **GROUND** AND FUNCTIONS.

THE INTERMITTENT OPERATION IS CONTROLLED BY A CONDENSER'S CHARGED AND DISCHARGED FUNCTION INSTALLED IN RELAY.

4. WASHER CONTINUOUS OPERATION

WITH WASHER SW TURNED TO ON, THE CURRENT FLOWS FROM **TERMINAL 2** OF THE WIPER AND WASHER SW → **TERMINAL 1** → **TERMINAL 8** OF THE WIPER AND WASHER SW → **TERMINAL 16** → TO **GROUND** AND CAUSES TO THE WASHER MOTOR TO RUN, AND WINDOW WASHER IS JET. THIS CAUSES THE CURRENT TO FLOW WASHER CONTINUOUS OPERATION CIRCUIT IN **TERMINAL 18** OF THE WIPER AND WASHER SW → **TERMINAL 7** → **TERMINAL 2** OF THE FRONT WIPER MOTOR → FRONT WIPER MOTOR → TO **GROUND** AND FUNCTION.

SERVICE HINTS

C16 FRONT WIPER AND WASHER SW (W/ WIPER RELAY)

16-GROUND : ALWAYS CONTINUITY

18-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ON** POSITION

7-GROUND : APPROX. 12 VOLTS WITH WIPER AND WASHER SW AT **LOW** POSITION

APPROX. 12 VOLTS EVERY APPROX. 1 TO 10 SECONDS INTERMITTENTLY WITH WIPER SW AT **INT** POSITION

4-GROUND : APPROX. 12 VOLTS WITH IGNITION SW ON UNLESS WIPER MOTOR AT **STOP** POSITION

13-GROUND : APPROX. 12 VOLTS WITH IGNITION SW ON AND AFTER WIPER SW OFF UNTIL WIPER MOTOR STOPS

F 7 FRONT WIPER CONTROL MOTOR

3-4 : CLOSED UNLESS WIPER MOTOR AT **STOP** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C16	22	F 7	21	J 2	22
F 6	21	F13	22		


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
ID	26	LEFT KICK PANEL

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E12	24	COWL WIRE	I11	26	COWL WIRE

C16 BLACK

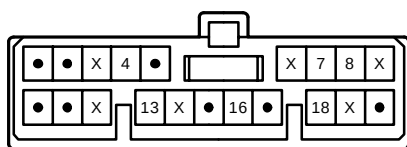

F 6 BLACK



F 7 BLACK



F13

(SEE PAGE 20)

J 2



(HINT : SEE PAGE 7)