


POWER MIRROR CONTROL SYSTEM PARTS LOCATION

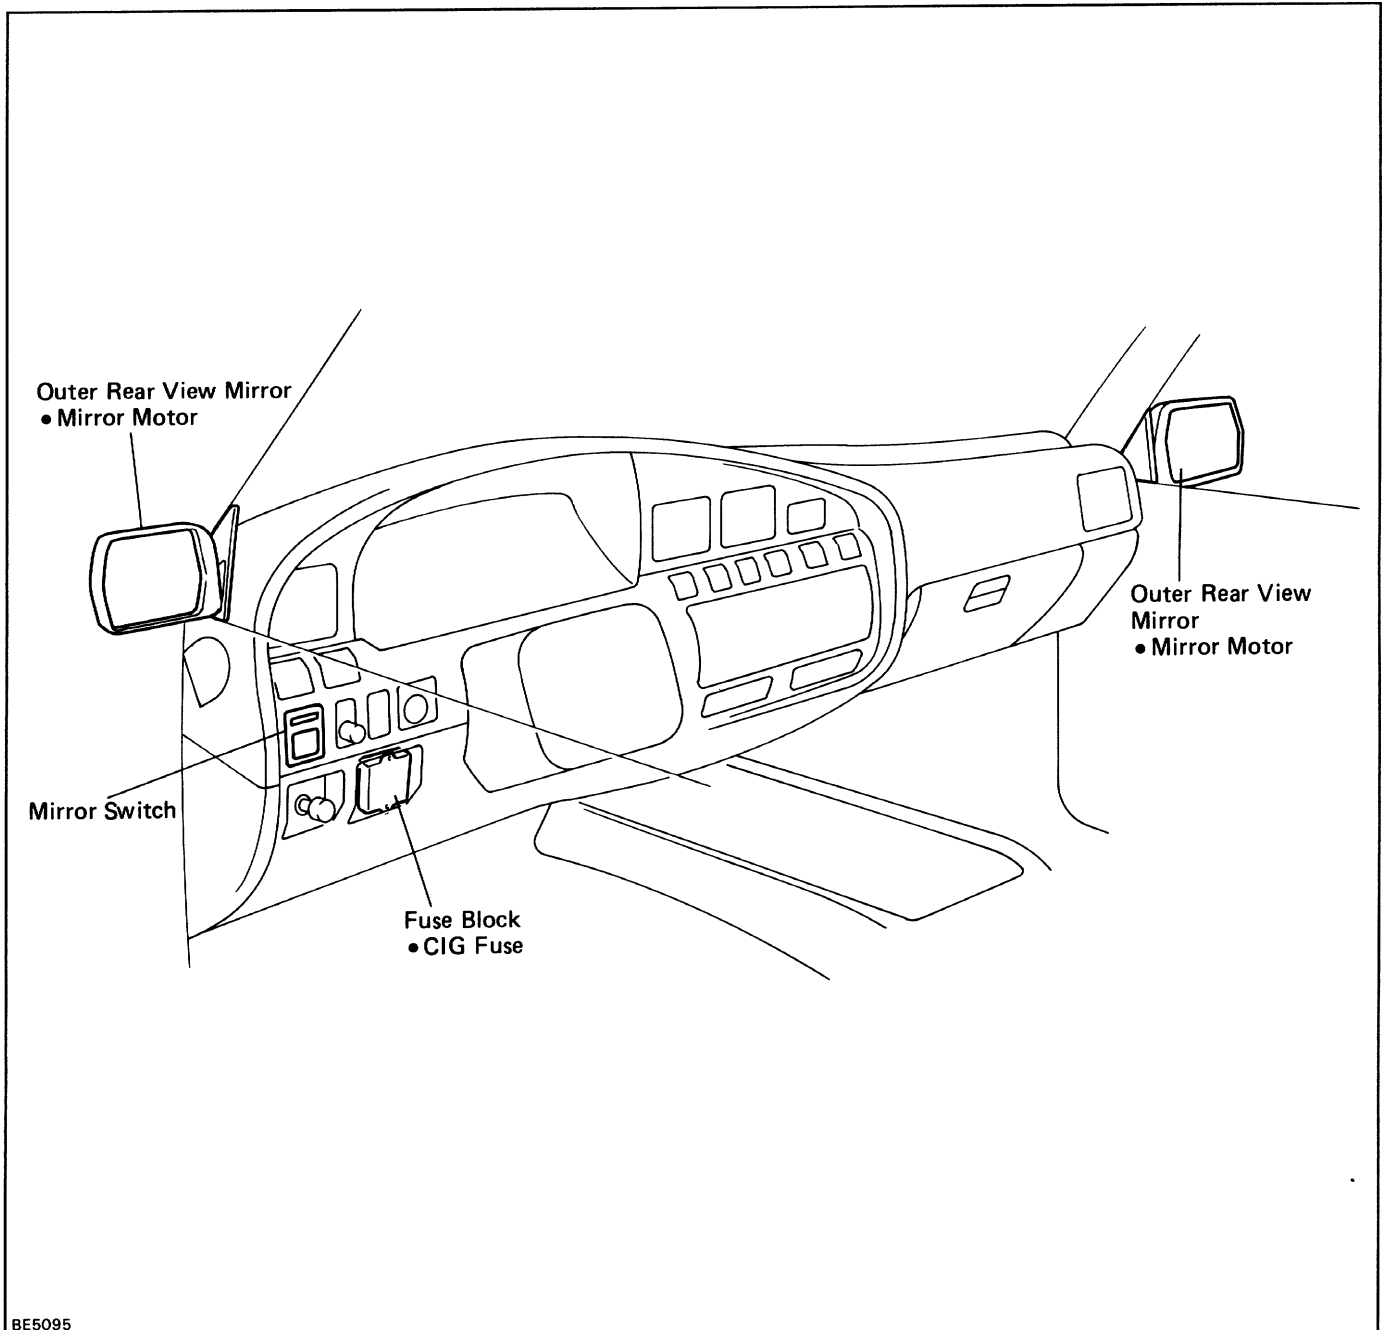

BE5095

TROUBLESHOOTING


The table below will be useful for you in troubleshooting these electrical problems. The most likely causes of the malfunction are shown in the order of their probability. Inspect each part in the order shown, and replace the part when it is found to be faulty.

Trouble	Part name	See page
Remote control mirror system does not operate	1. CIG Fuse 2. Mirror Switch 3. Mirror Motor 4. Wire Harness	BE-6, BE-10 BE-87 BE-87 —

MIRROR SWITCH

MIRROR SWITCH INSPECTION

CONTINUITY

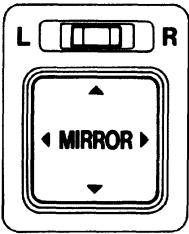


LEFT SIDE ↔ OFF ↔ RIGHT SIDE

UP

LEFT ◀ OFF ▶ RIGHT


DOWN

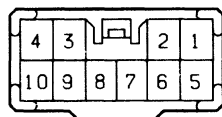

BE2357 S-10-2

Left/Right adjustment switch position	LEFT SIDE					OFF			RIGHT SIDE				
Terminal	1	3	4	9	10	1	3	4	1	2	3	4	6
Control switch position													
OFF													
UP	○	○	○	○	○		○	○	○		○	○	○
DOWN	○	○	○	○	○	○	○		○		○	○	○
LEFT	○	○	○	○			○	○	○	○	○	○	
RIGHT	○	○	○	○		○	○		○	○	○	○	

If continuity is not as specified, replace switch.

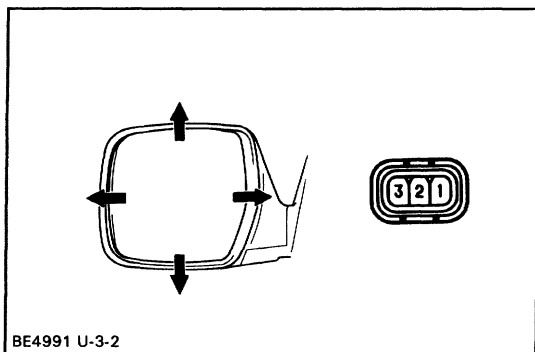

MIRROR MOTOR

MIRROR MOTOR INSPECTION

Connect the positive (+) lead from the battery to terminal in column "A" and the negative (-) lead to terminal in column "B", check that the mirror operates in column "C".

A (+)	B (-)	C (Operation)
2	3	Mirror turns upward (↑)
3	2	Mirror turns downward (↓)
1	3	Mirror turns to left side (←)
3	1	Mirror turns to right side (→)

If operation is not as specified, replace the mirror assembly.