
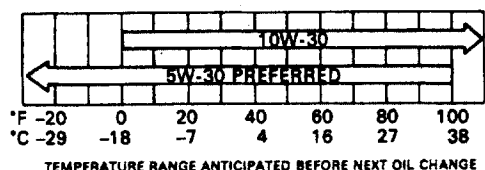
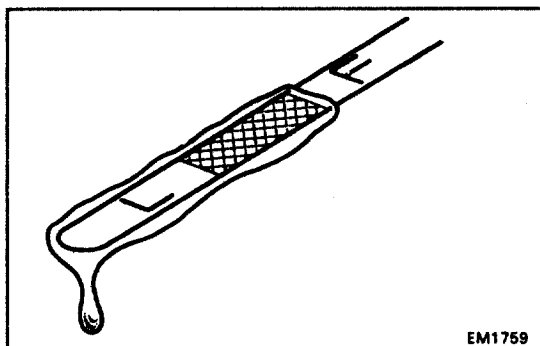


Recommended Viscosity (SAE):


LU0817

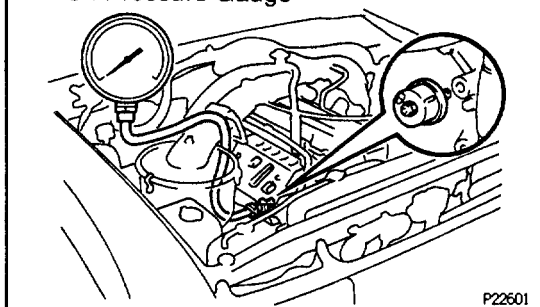

EM1759

Oil Pressure Gauge

P22601

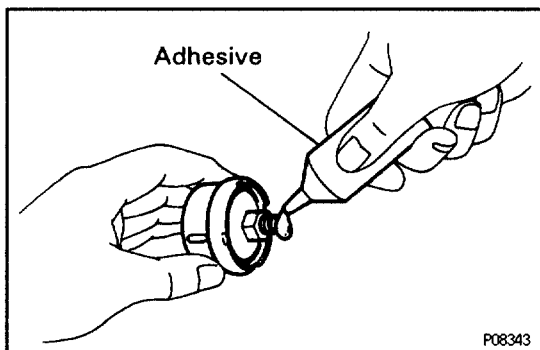

P08343

OIL PRESSURE CHECK

1. CHECK ENGINE OIL QUALITY

Check the oil for deterioration, entry of water, discoloring or thinning.

If the quality is visibly poor, replace the oil.

Oil grade:

API grade SH Energy-Conserving II multigrade engine oil or ILSAC multigrade engine oil.

Recommended viscosity is as shown in the illustration, with SAE 5W-30 being the preferred engine oil.

2. CHECK ENGINE OIL LEVEL

The oil level should be between the "L" and "F" marks on the dipstick.

If low, check for leakage and add oil up to "F" mark.

3. REMOVE OIL PRESSURE SWITCH, AND INSTALL OIL PRESSURE GAUGE**4. WARM UP ENGINE**

Allow the engine to warm up to normal operating temperature.

5. CHECK OIL PRESSURE**Oil pressure:****At idle**

29 kPa (0.3 kgf/cm², 4.3 psi) or more

At 3,000 rpm

245 - 490 kPa (2.5 - 5.0 kgf/cm², 36 - 71 psi)

6. REMOVE OIL PRESSURE GAUGE AND REINSTALL OIL PRESSURE SWITCH

(a) Remove the oil pressure gauge.

(b) Apply adhesive to 2 or 3 threads of the oil pressure switch.

Adhesive:

Part No. 08833-00080, THREE BOND 1344,

LOCTITE 242 or equivalent

(c) Reinstall the oil pressure switch.

7. START ENGINE AND CHECK FOR LEAKS