

DTC	P0130	Heated Oxygen Sensor Circuit Malfunction (Bank 1 Sensor 1)
------------	--------------	---

CIRCUIT DESCRIPTION

Refer to DTC P0125 (Insufficient Coolant Temp. for Closed Loop Fuel Control) on page [DI-40](#).

DTC No.	DTC Detecting Condition	Trouble Area
P0130	Voltage output of heated oxygen sensor (bank 1 sensor 1) remains at 0.4 V or more, or 0.55 V or less, during idling after the engine is warmed up (2 trip detection logic)	• Heated oxygen sensor (bank 1 sensor 1) • Fuel trim malfunction

HINT:


Sensor 1 refers to the sensor closer to the engine body.

The heated oxygen sensor's output voltage and the short-term fuel trim value can be read using the OBD II scan tool or TOYOTA hand-held tester.

WIRING DIAGRAM

Refer to DTC P0125 (Insufficient Coolant Temp. for Closed Loop Fuel Control) on page [DI-35](#) for WIRING DIAGRAM.

CONFIRMATION DRIVING PATTERN

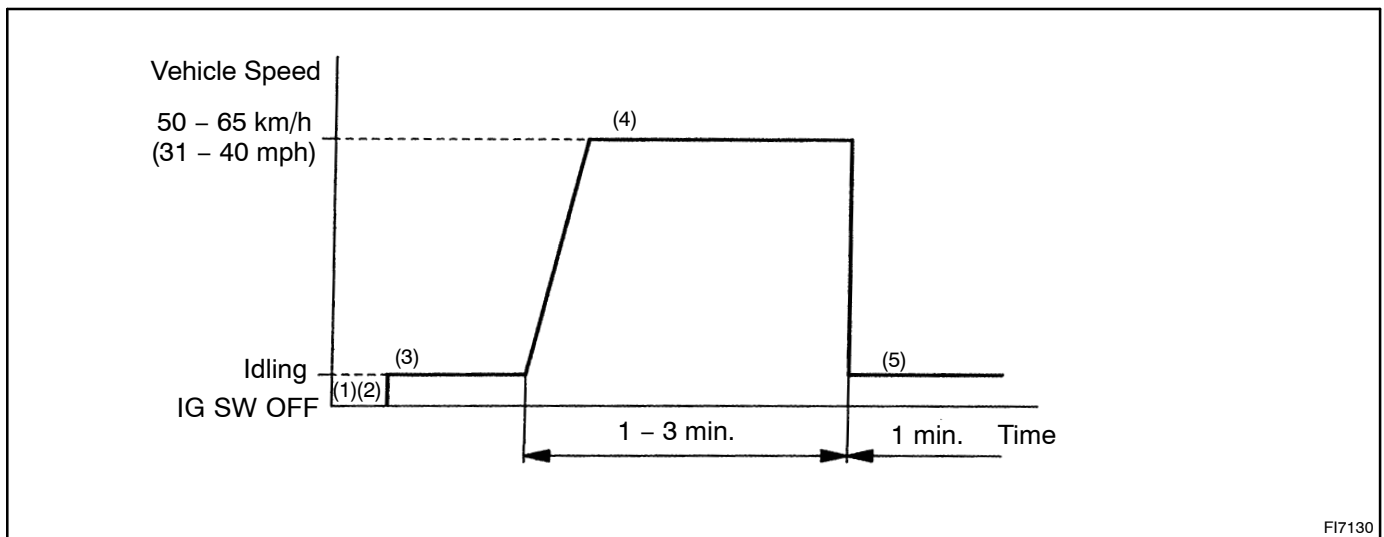

- (1) Connect the TOYOTA hand-held tester to the DLC3.
- (2) Switch the TOYOTA hand-held tester from normal mode to check mode (See page [DI-3](#)).
- (3) Start the engine and warm it up with all accessory switches OFF.
- (4) Drive the vehicle at 50 – 65 km/h (31 – 40 mph) for 1 – 3 min. to warm up the heated oxygen sensor.
- (5) Let the engine idle for 1 min.

HINT:

If a malfunction exists, the MIL will light up during step (5).

NOTICE:

If the conditions in this test are not strictly followed, detection of the malfunction will not be possible. If you do not have a TOYOTA hand-held tester, turn the ignition switch OFF after performing steps (3) to (5), then perform steps (3) to (5) again.

INSPECTION PROCEDURE

1	Check for open and short in harness and connector between ECM and heated oxygen sensor (bank 1 sensor 1) (See page IN-28).
----------	---

NG**Repair or replace harness or connector
(See page [IN-28](#)).****OK**

2	Check for heated oxygen sensor (bank 1 sensor 1) data.
----------	---

PREPARATION:

- (a) Remove the fuse cover on the instrument panel.
- (b) Connect the OBD II scan tool or TOYOTA hand-held tester to the DLC3.
- (c) Warm up engine to normal operating temp.

CHECK:

Read the heated oxygen sensor (bank 1 sensor 1) output voltage and short-term fuel trim.

RESULT:

Pattern	Heated oxygen sensor (bank 1 sensor 1) output voltage	Short-term fuel trim
1	Lean condition (Changes at 0.55 V or less)	Changes at about +20 %
2	Rich condition (Changes at 0.4 V or more)	Changes at about -20 %
3	Except 1 and 2	

1, 2**Check fuel trim system (See page [DI-51](#)).****3**

3	Check the output voltage of heated oxygen sensor (bank 1 sensor 1) during idling.
---	---

PREPARATION:


Warm up the heated oxygen sensor (bank 1 sensor 1) with the engine at 2,500 rpm for approx. 90 sec.

CHECK:

Use the OBD II scan tool or TOYOTA hand-held tester read the output voltage of the heated oxygen sensor (bank 1 sensor 1) during idling.

OK:

Heated oxygen sensor (bank 1 sensor 1) output voltage:
Alternates repeatedly between less than 0.4 V and more than 0.55 V (See the Following table).

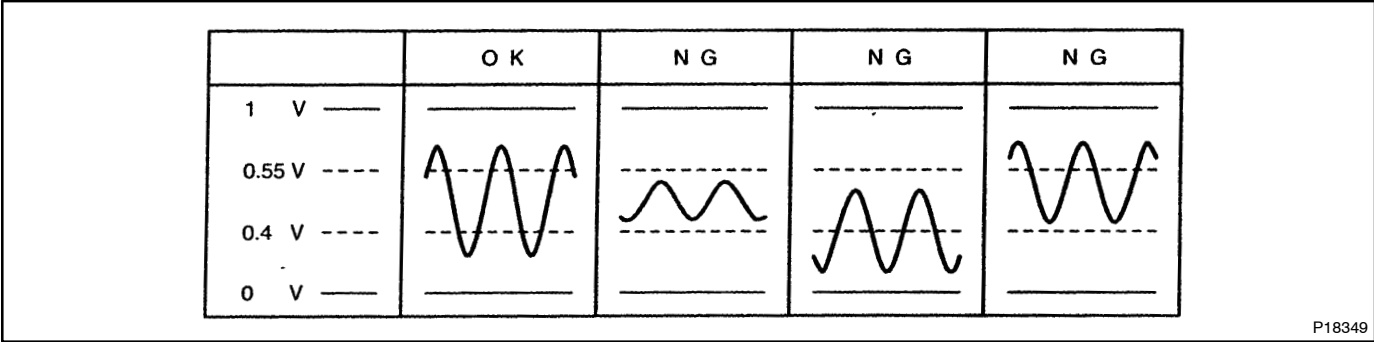

OK

Perform confirmation driving pattern
(See page [DI-43](#)).

NG

Replace heated oxygen sensor
(bank 1 sensor 1).