

DTC	41	IG Power Source Circuit
------------	-----------	--------------------------------


CIRCUIT DESCRIPTION

This is the power source for the ECU, hence the CPU and actuators.

DTC No.	DTC Detecting Condition	Trouble Area
41	Vehicle speed is 3 km/h (1.9 mph) or more and voltage of ECU terminal IG1 remains at more than 17 V or below 9.5 V for more than 10 sec.	• Battery • IC regulator • Open or short in power source circuit

Fail safe function: If trouble occurs in the power source circuit, the ECU cuts off current to the ABS control (solenoid) relay and prohibits ABS control.

WIRING DIAGRAM

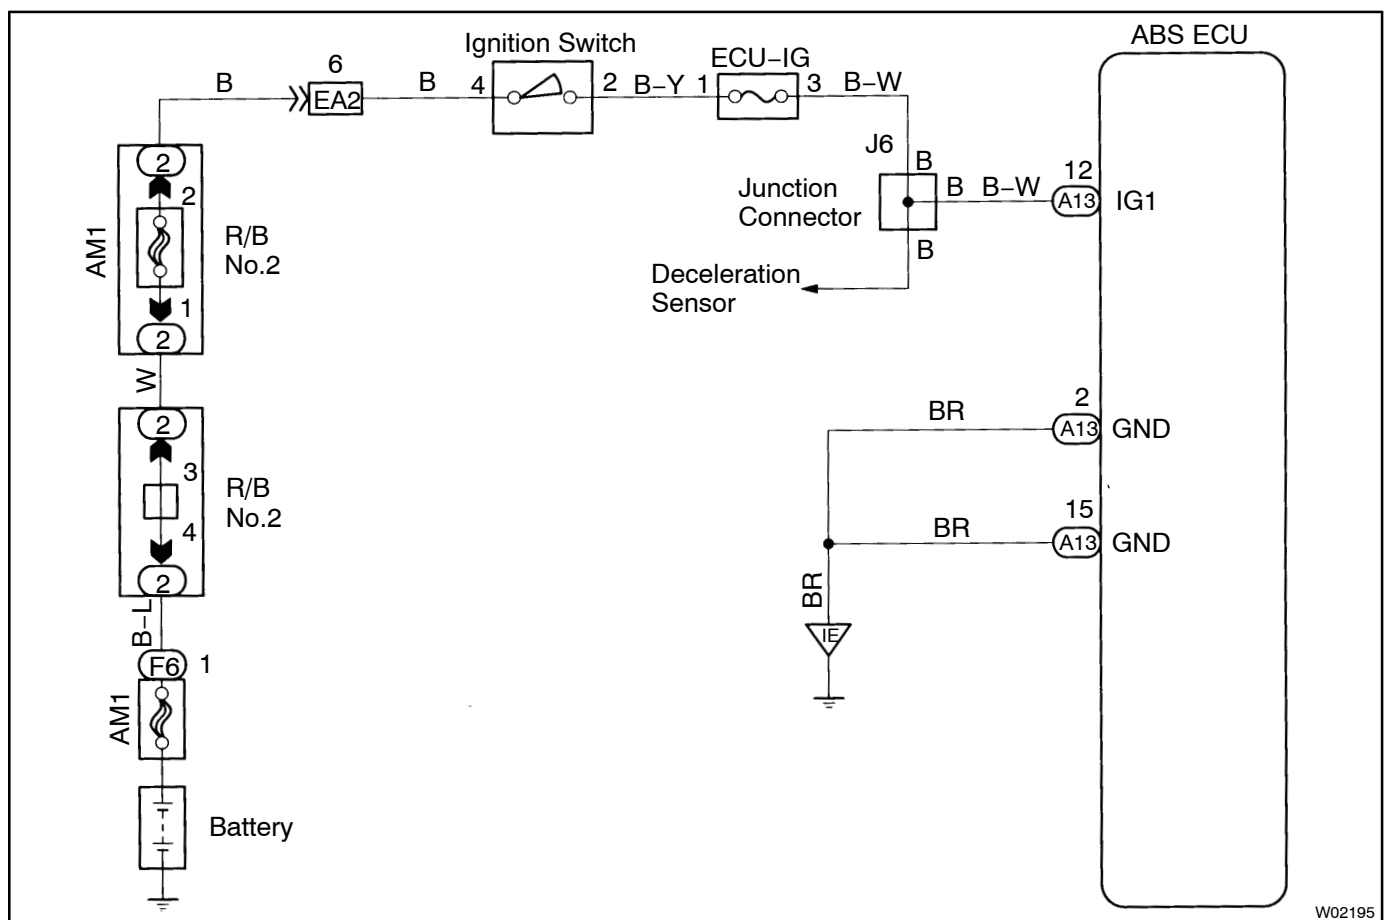

W02195

INSPECTION PROCEDURE

1	Check battery positive voltage.
---	---------------------------------

OK:


Voltage: 10 – 14 V

NG

Check and repair the charging system.

OK

2	Check voltage between terminals IG1 and GND of ABS ECU connector.
---	---

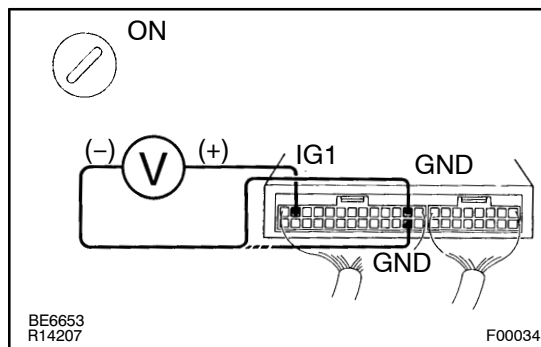**PREPARATION:**

Remove ABS ECU with connectors still connected.

CHECK:

- (a) Turn the ignition switch ON.
- (b) Measure voltage between terminals IG1 and GND of ABS ECU connector.

OK:


Voltage: 10 – 14 V

OK

Check and replace ABS ECU.

NG

3	Check continuity between terminals GND of ABS ECU connector and body ground.
---	--

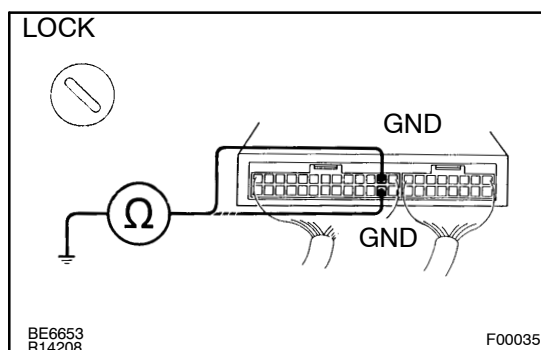**CHECK:**

Measure resistance between terminal GND of ABS ECU connector and body ground.

OK:

Resistance: 1 Ω or less


NG

Repair or replace harness or connector.

OK

4 Check ECU-IG fuse.

FUSE BLOCK

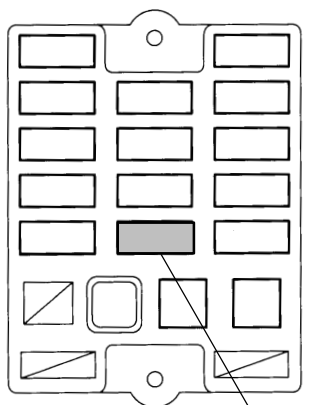

ECU-IG

W02206

PREPARATION:

Remove ECU-IG fuse from FUSE BLOCK.

CHECK:

Check continuity of ECU-IG fuse.

OK:**Continuity****NG****Check for short in all the harness and components connected to ECU-IG fuse (See attached wiring diagram).****OK****Check for open in harness and connector between ABS ECU and battery (See page [IN-27](#)).**