


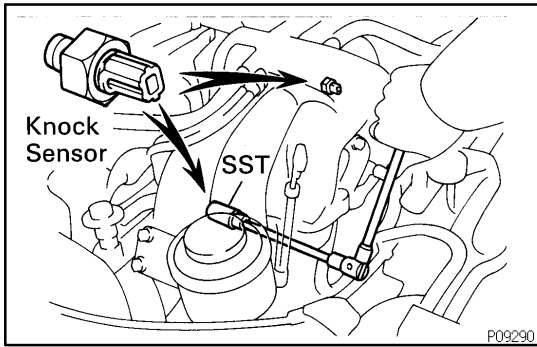


KNOCK SENSOR INSPECTION

SF1FB-01

1. REMOVE KNOCK SENSOR


- (a) Disconnect the knock sensor connector.
- (b) Using SST, remove the knock sensor.
SST 09816-30010

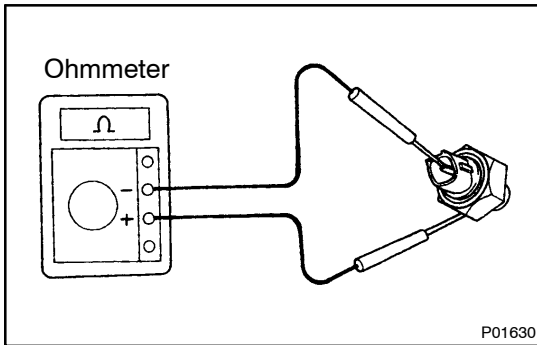

2. INSPECT KNOCK SENSOR

Using an ohmmeter, check that there is no continuity between the terminal and body.

If there is continuity, replace the sensor.

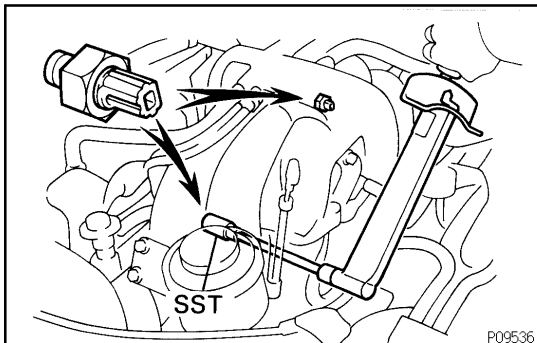

3. REINSTALL KNOCK SENSOR

- (a) Using SST, install the knock sensor.
SST 09816-30010
Torque: 44 N·m (450 kgf·cm, 33 ft·lbf)
- (b) Connect the knock sensor connector.