


F RELAY LOCATIONS

[Seat]

(LHD : Front Separate Seat)

Front Position Control ECU and
Switch Assembly LH (Front Power Seat Switch LH)

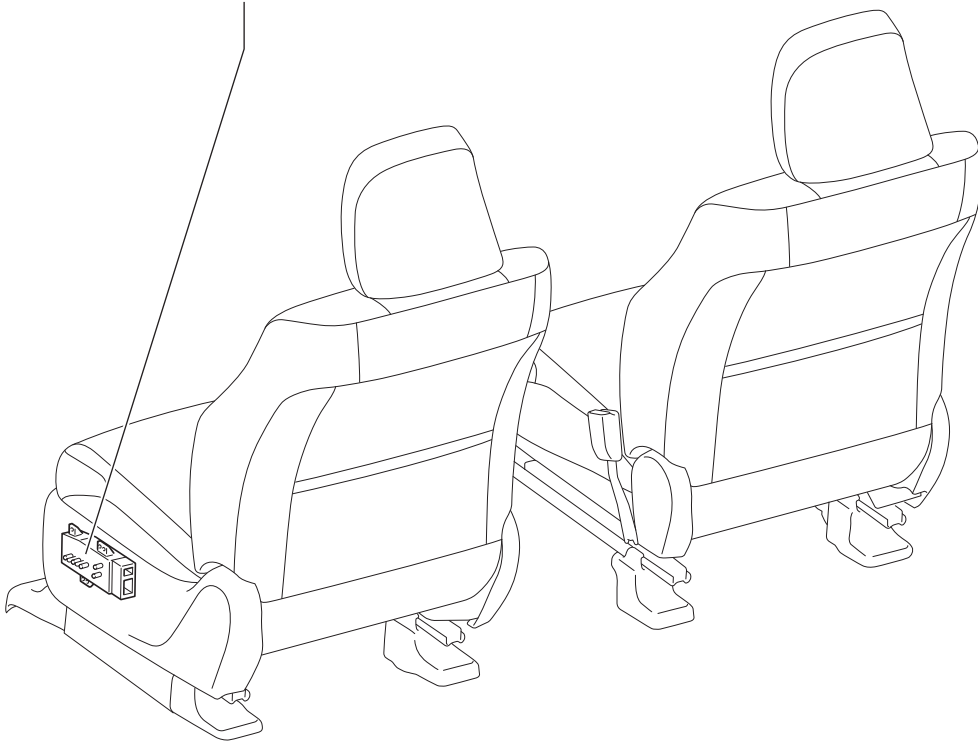

(RHD : Front Separate Seat)

Front Position Control ECU and
Switch Assembly RH (Front Power Seat Switch RH)

