


IGNITION SYSTEM

(22R –E)

PRECAUTIONS

1. Do not allow the ignition switch to be ON for more than 10 minutes if the engine will not start.

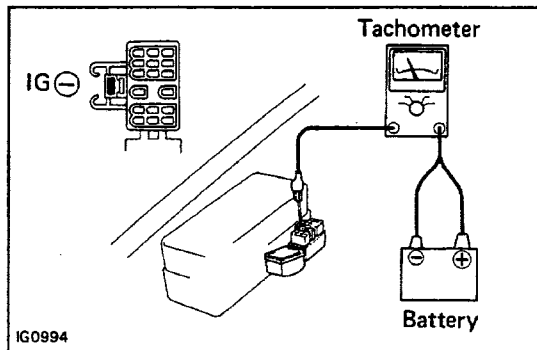

2. When a tachometer is connected to the system, connect the tachometer test probe to the IG(-) terminal of the DLC 1.
3. As some tachometers are not compatible with this ignition system, we recommend that you confirm the compatibility of your unit before use.
4. Never allow the ignition coil terminals to touch ground as it could result in damage to the igniter and/or ignition coil.
5. Do not disconnect the battery when the engine is running.
6. Make sure that the igniter properly grounded to the body.