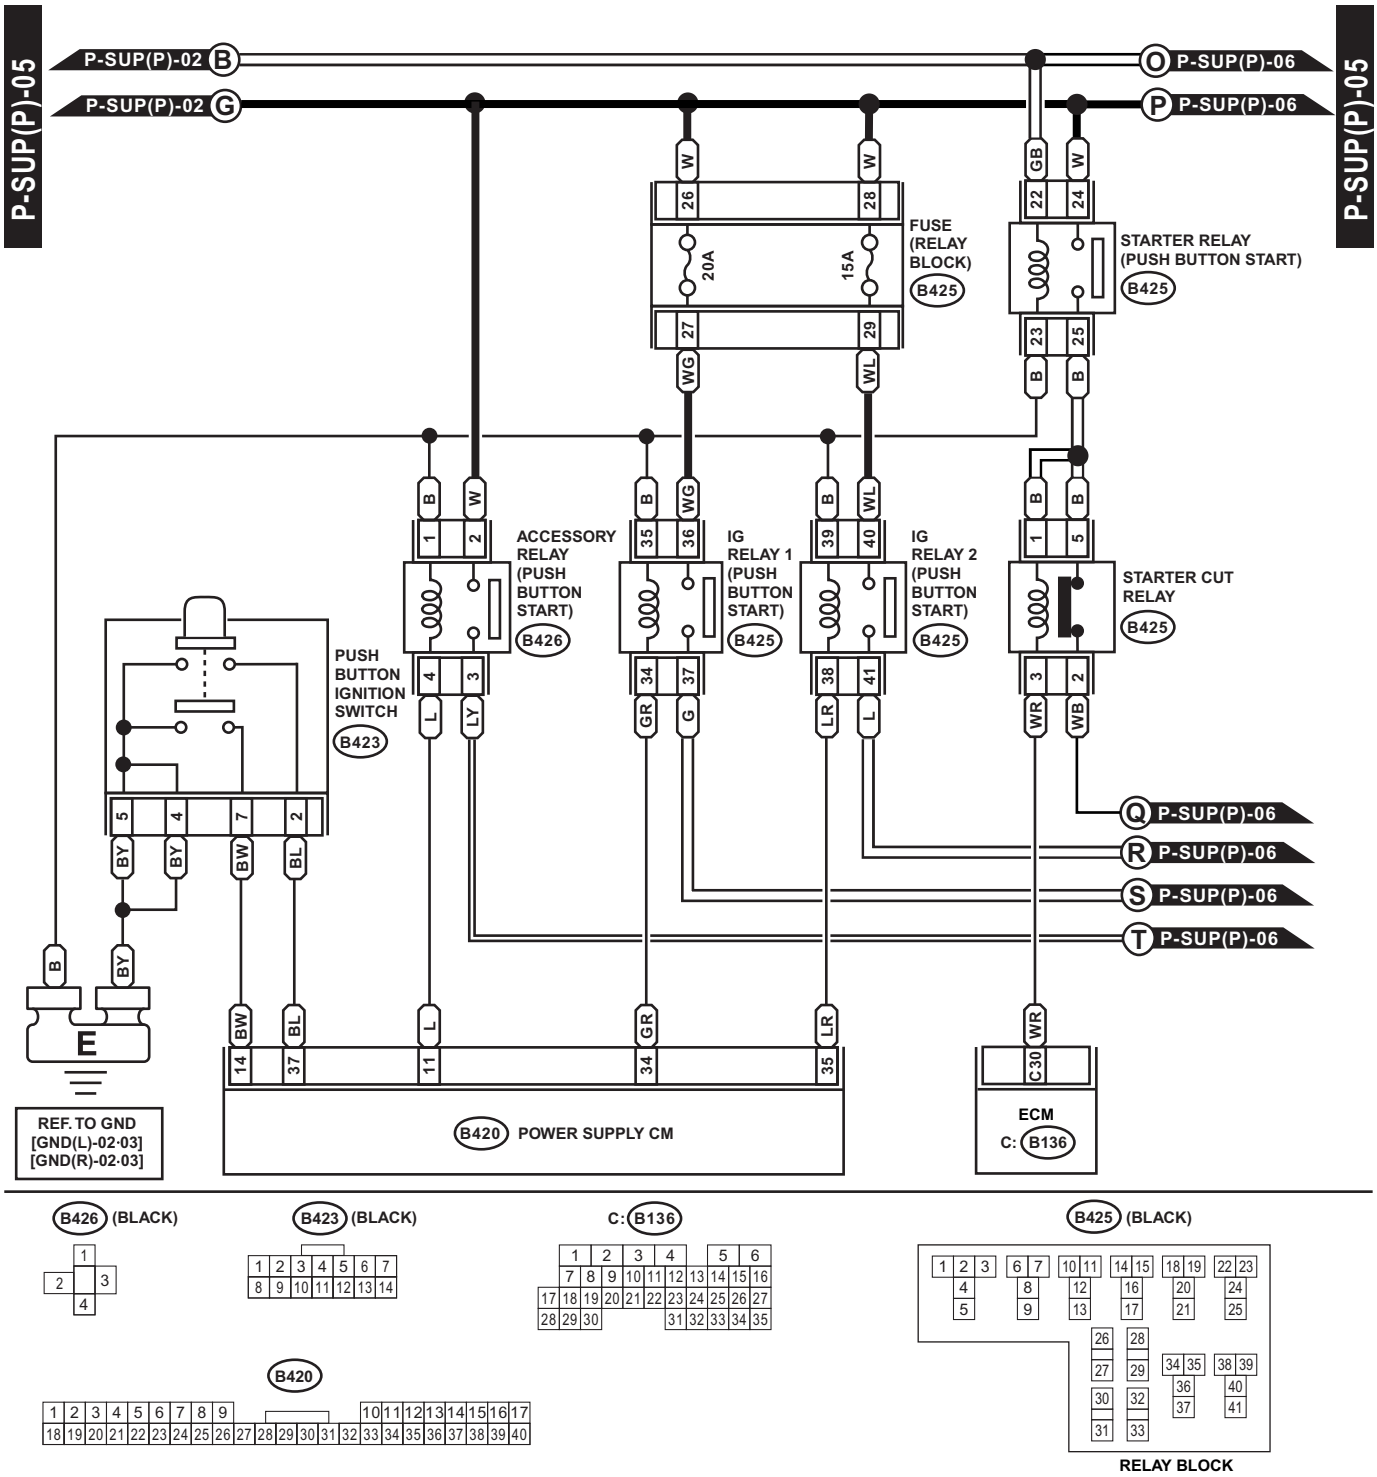
P-SUP(P)-05
P-SUP(P)-02 B
P-SUP(P)-02 G
O P-SUP(P)-06
P P-SUP(P)-06
FUSE (RELAY BLOCK) B425
20A
15A
STARTER RELAY (PUSH BUTTON START) B425
ACCESSORY RELAY (PUSH BUTTON START) B426
IG RELAY 1 (PUSH BUTTON START) B425
IG RELAY 2 (PUSH BUTTON START) B425
STARTER CUT RELAY B425
PUSH BUTTON IGNITION SWITCH B423
Q P-SUP(P)-06
R P-SUP(P)-06
S P-SUP(P)-06
T P-SUP(P)-06
E
REF. TO GND [GND(L)-02·03] [GND(R)-02·03]
B420 POWER SUPPLY CM
ECM C: B136
B426 (BLACK)
B423 (BLACK)
C: B136
B425 (BLACK)
B420
RELAY BLOCK

WI-18780