For JBS Units without On-board Door Lock Relays:

Requires (1)778 or (2) 775's

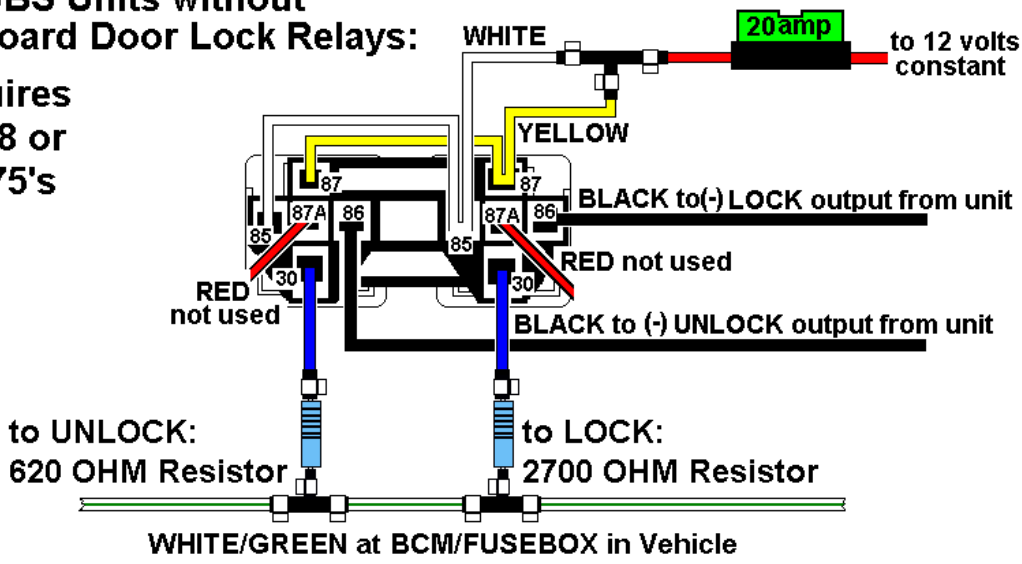

For JBS Units with On-board Door Lock Relays:

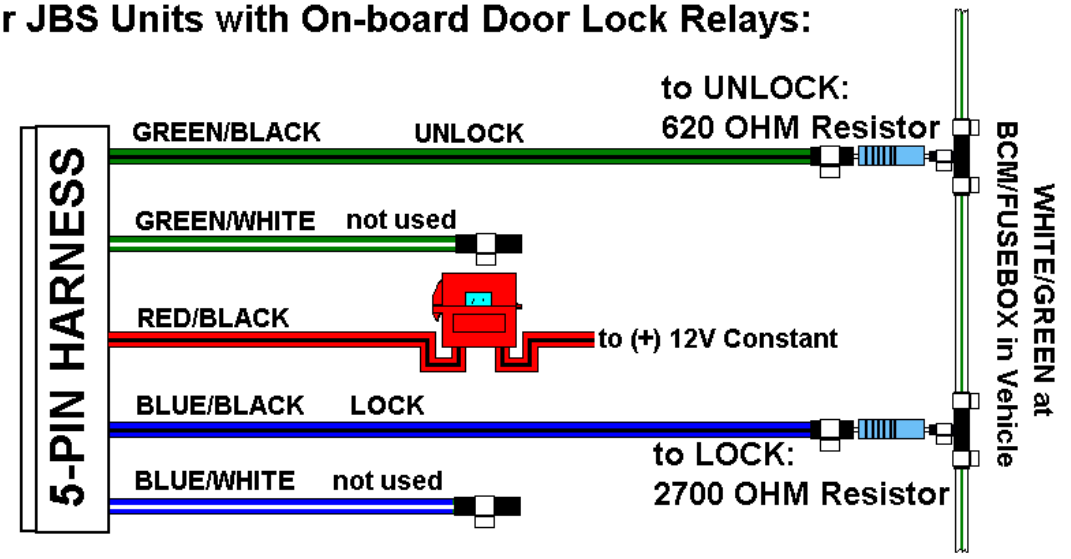

NOTE: Connect the RED WITH BLACK STRIPE **to (+) 12V Constant**
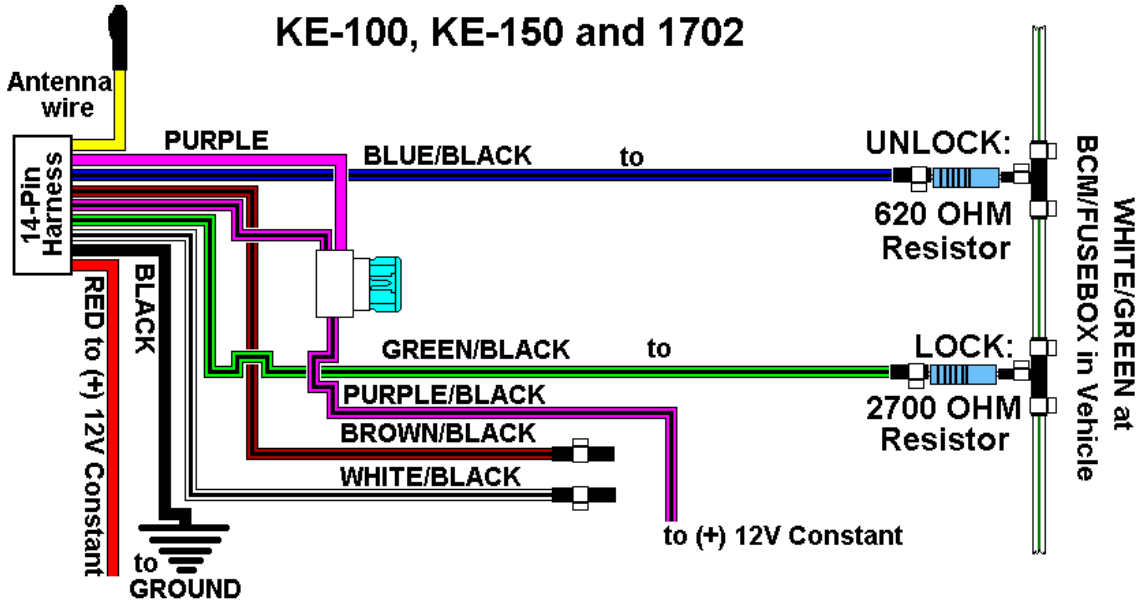
KE-100, KE-150 and 1702