(Cont. next page)

Turn Signal and Hazard Warning Light

* 5 : LHD, RHD Light Control Switch LH Side Type
* 6 : RHD Light Control Switch RH Side Type

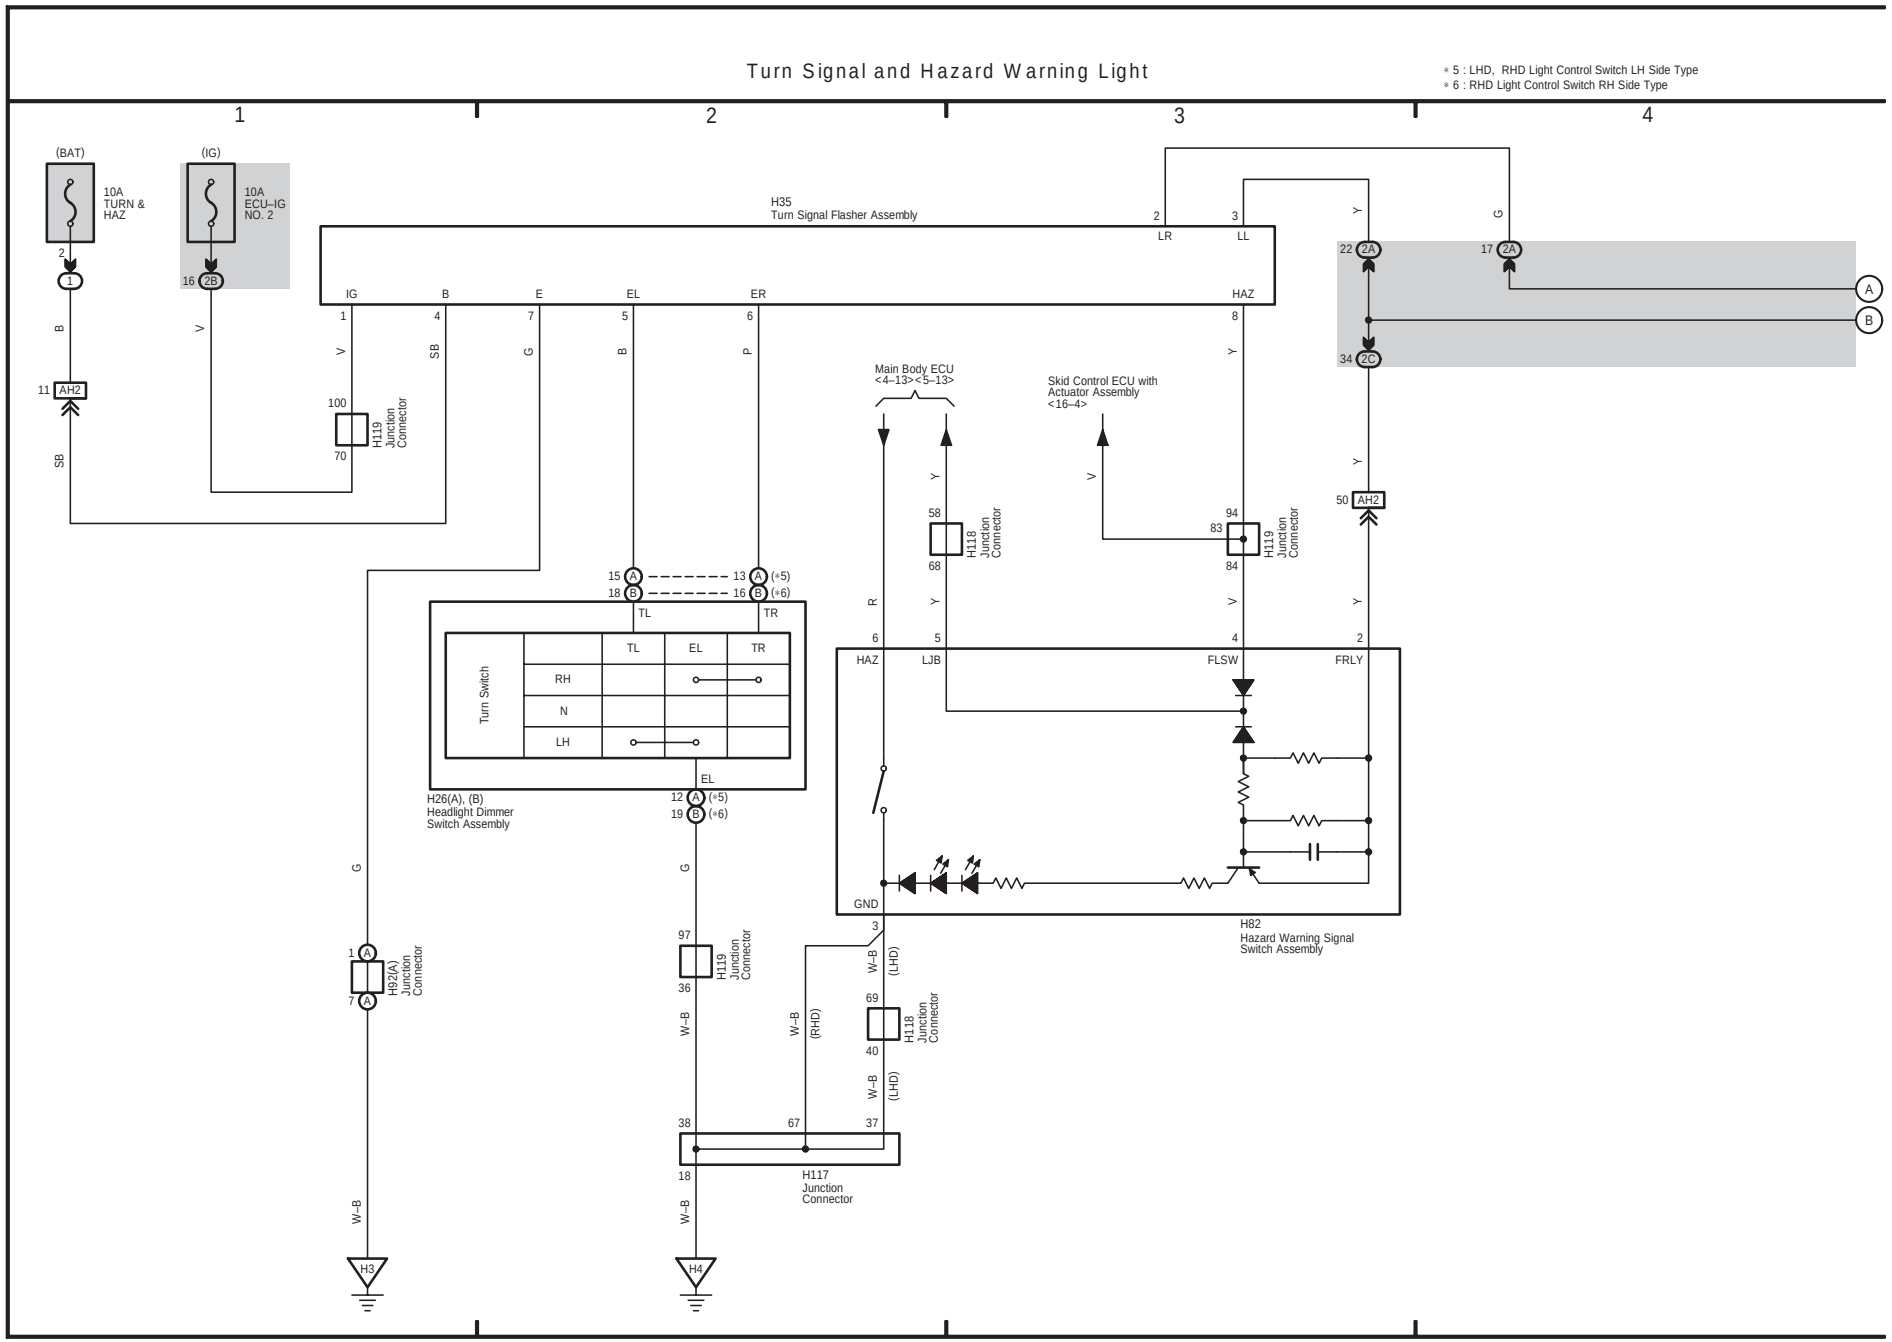

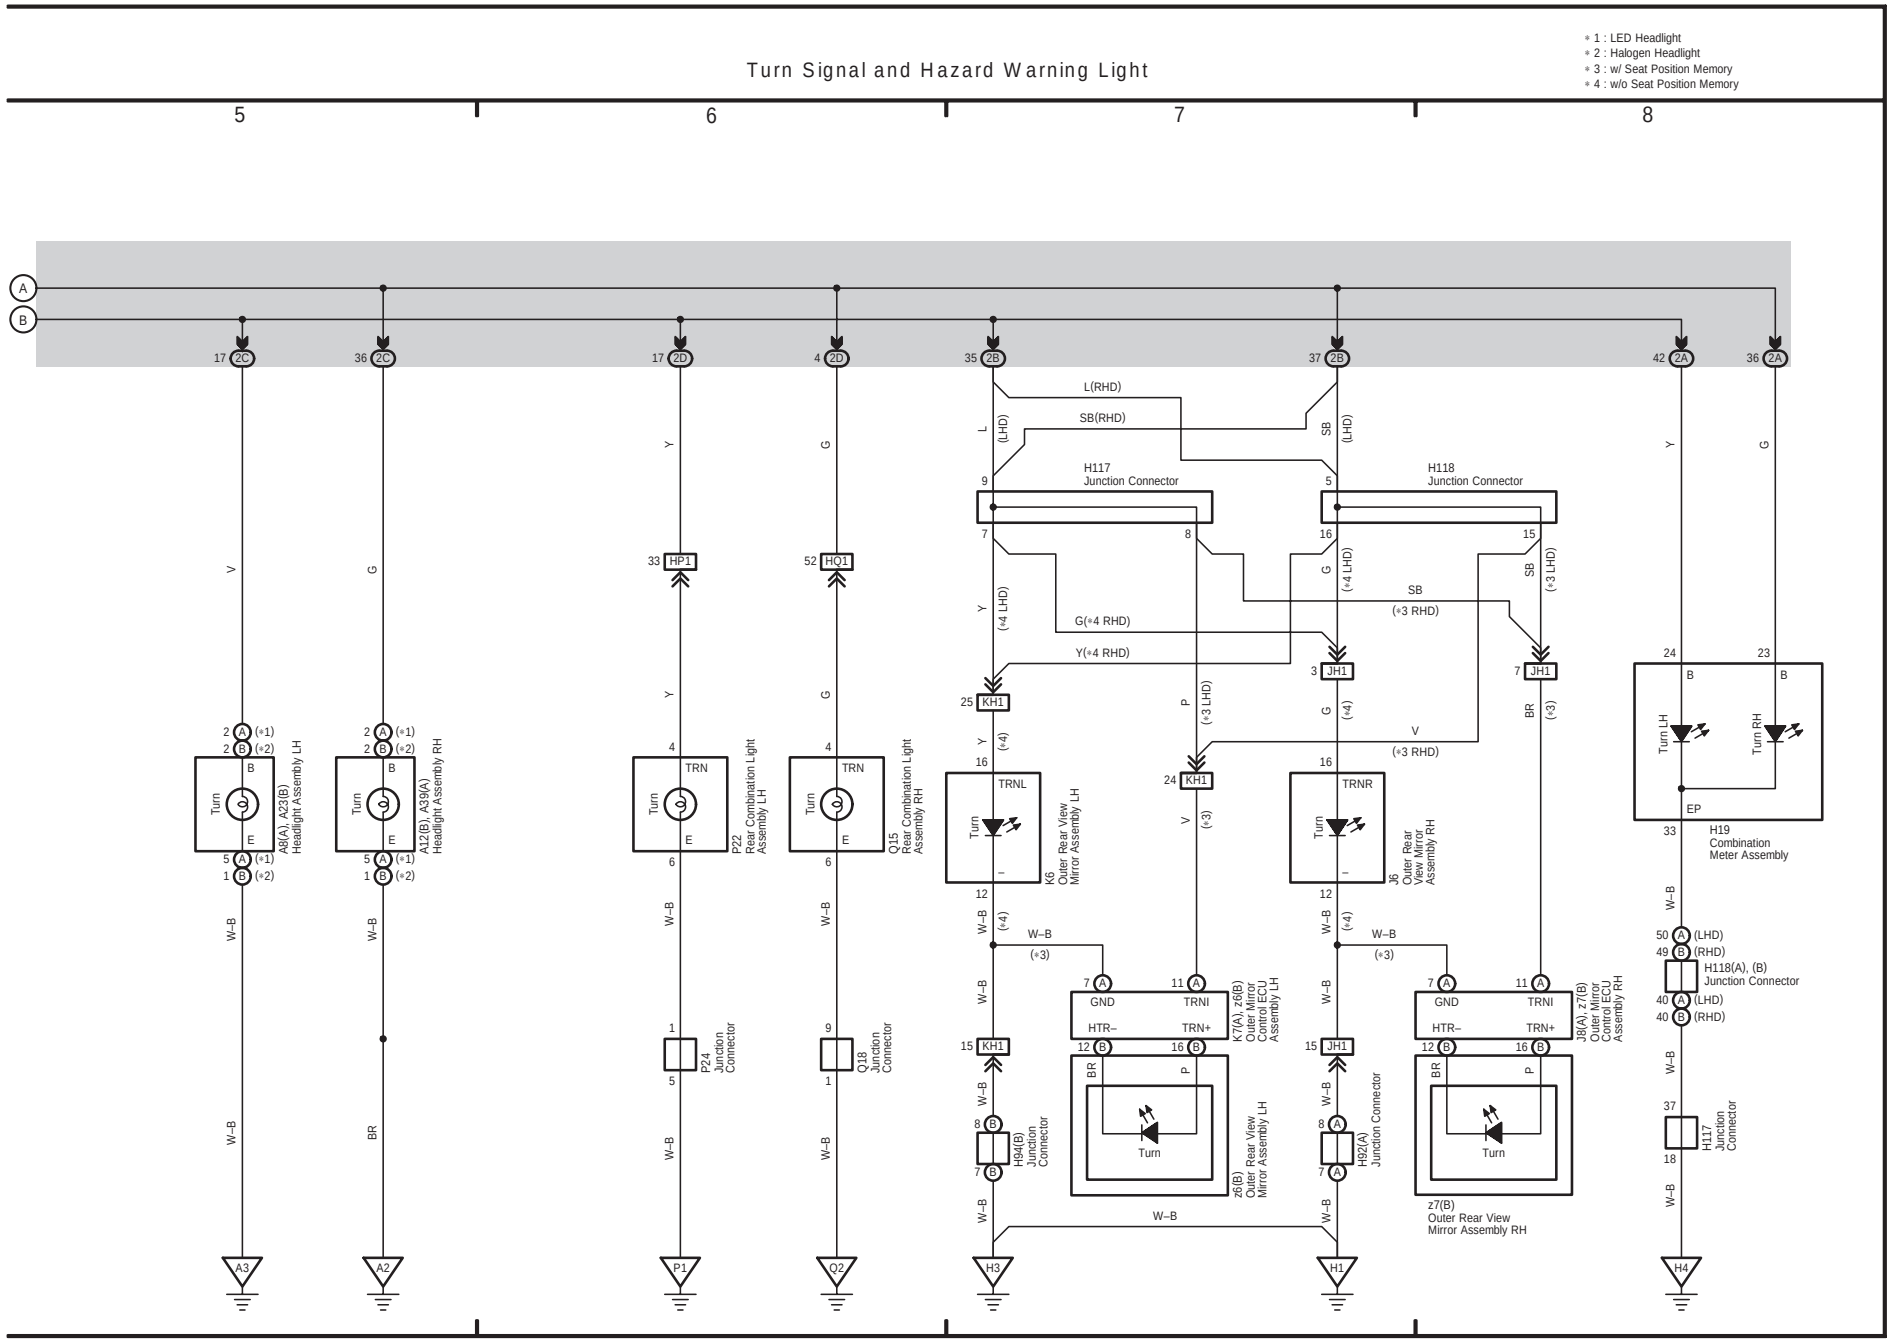
Turn Signal and Hazard Warning Light
* 1 : LED Headlight
* 2 : Halogen Headlight
* 3 : w/ Seat Position Memory
* 4 : w/o Seat Position Memory
5
6
7
8
A
B
17 2C
36 2C
17 2D
4 2D
35 2B
37 2B
42 2A
36 2A
V
G
Y
L
SB
L(RHD)
SB(RHD)
(LHD)
H117
Junction Connector
H118
Junction Connector
9
5
7
8
16
15
Y (*4 LHD)
G (*4 LHD)
SB (*3 LHD)
SB (*3 RHD)
G(*4 RHD)
Y(*4 RHD)
V (*3 RHD)
P (*3 LHD)
BR (*3)
25 KH1
3 JH1
7 JH1
24 KH1
16
TRNL
TRNR
Turn
K6
Outer Rear View Mirror Assembly LH
J6
Outer Rear View Mirror Assembly RH
12
W–B
(*4)
(*3)
15 KH1
15 JH1
GND
TRNI
HTR–
TRN+
K7(A), z8(B)
Outer Mirror Control ECU Assembly LH
J8(A), z7(B)
Outer Mirror Control ECU Assembly RH
BR
P
z6(B)
Outer Rear View Mirror Assembly LH
z7(B)
Outer Rear View Mirror Assembly RH
H94(B)
Junction Connector
H92(A)
Junction Connector
2 (*1)
2 (*2)
5 (*1)
1 (*2)
A8(A), A23(B)
Headlight Assembly LH
A12(B), A39(A)
Headlight Assembly RH
33 HP1
52 HQ1
TRN
4
6
P22
Rear Combination Light Assembly LH
Q15
Rear Combination Light Assembly RH
1
5
9
1
P24
Junction Connector
Q18
Junction Connector
24
23
B
Turn LH
Turn RH
EP
33
H19
Combination Meter Assembly
50 (LHD)
49 (RHD)
H118(A), (B)
Junction Connector
40 (LHD)
40 (RHD)
37
18
H117
Junction Connector
A3
A2
P1
Q2
H3
H1
H4