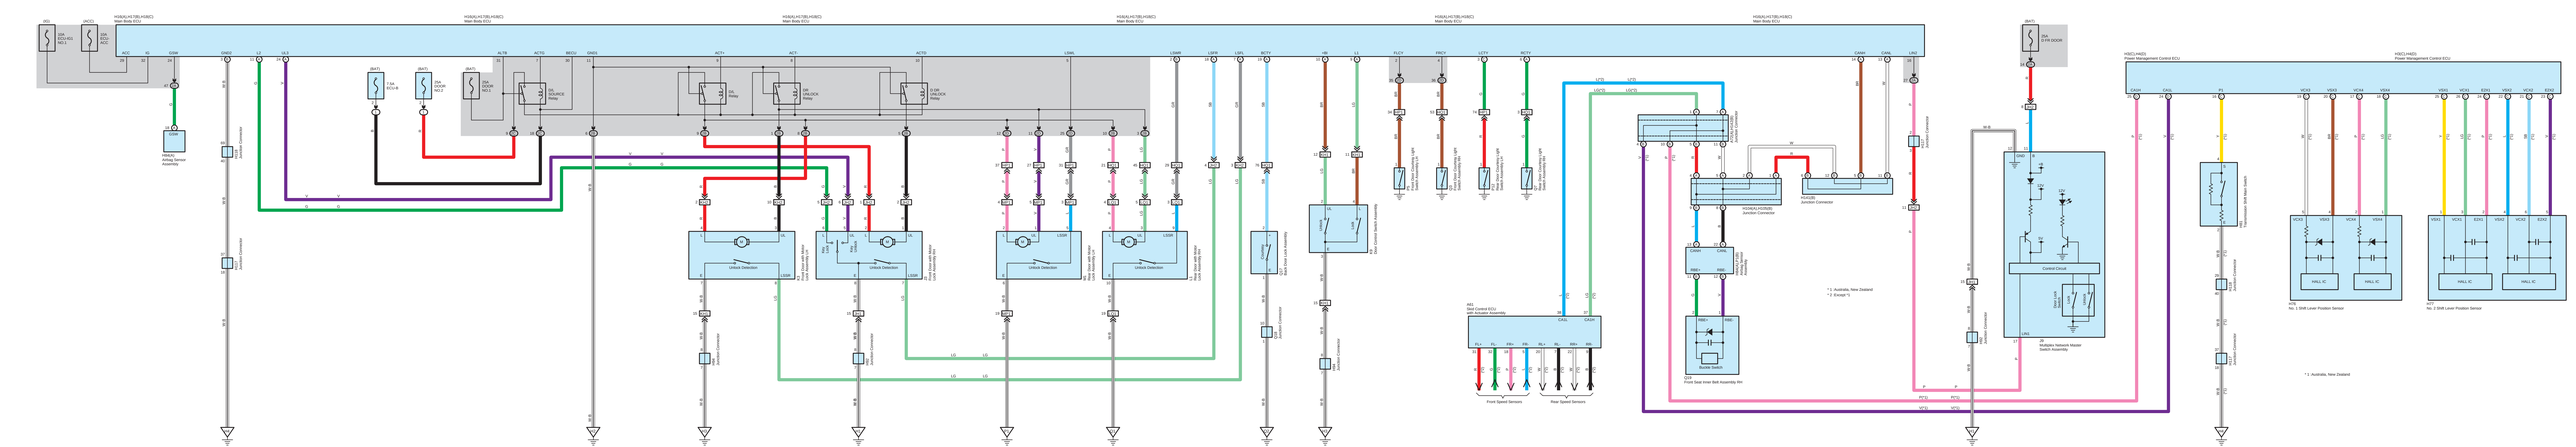
H16(LH175BL-H16C)
Main Body ECU
10A ECU-IG1 NO.1
10A ECU-ACC
ACC
IG
GSW
GND2
L2
UL3
(BAT)
7.5A ECU-B
(BAT)
15A DOOR NO.2
(BAT)
15A DOOR RCY
ALTB
ACTG
BKOU
GND1
ACT+
ACT-
ACTD
LSWR
LSPR
LSPL
BCTY
+BI
L1
FLCY
FRCY
LCTY
RCTY
CANH
CANL
LIN2
(BAT)
15A R FR DOOR
DL SOURCE Relay
DR UNLOCK Relay
P DOOR UNLOCK Relay
DL Relay
Main Body ECU
Door Control Switch Assembly
Front Door Lock Motor Assembly RH
Front Door Lock Motor Assembly LH
Rear Door Lock Motor Assembly RH
Rear Door Lock Motor Assembly LH
Unlock Detection
Front Door Lock Motor Assembly LH
Front Door Lock Motor Assembly RH
Rear Door Lock Motor Assembly LH
Rear Door Lock Motor Assembly RH
Junction Connector
Door Lock Motor Assembly
Front Door Outside Handle Assembly LH
Front Door Outside Handle Assembly RH
Rear Door Outside Handle Assembly LH
Rear Door Outside Handle Assembly RH
Front Door Inside Handle Assembly LH
Front Door Inside Handle Assembly RH
Rear Door Inside Handle Assembly LH
Rear Door Inside Handle Assembly RH
A41
Skid Control ECU
(w/ Hydraulic Assembly)
Front Speed Sensors
Rear Speed Sensors
H14(LH)
H15(RH)
Junction Connector
Junction Connector
Junction Connector