


(Cont. next page)

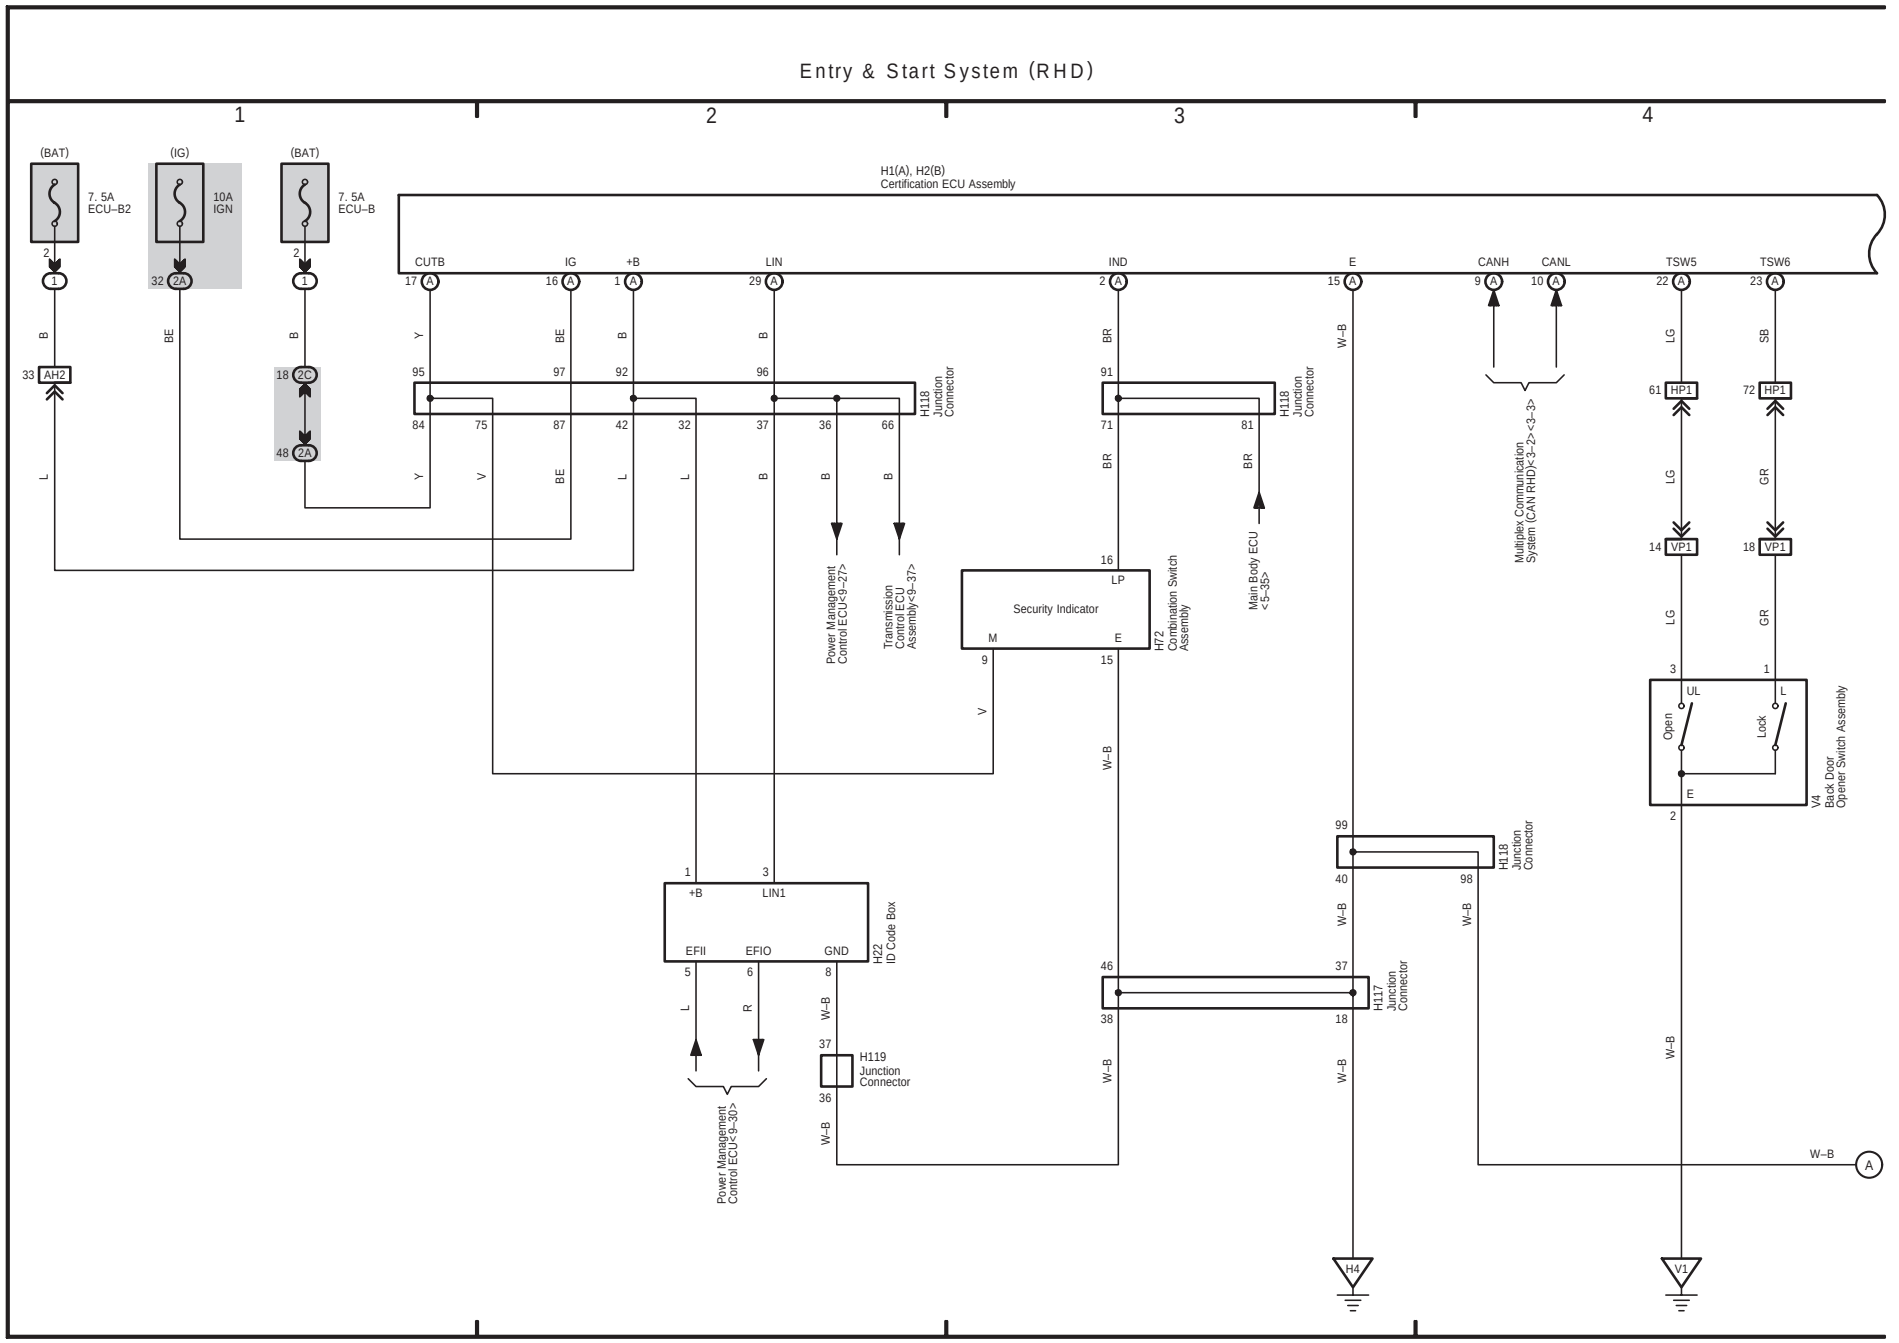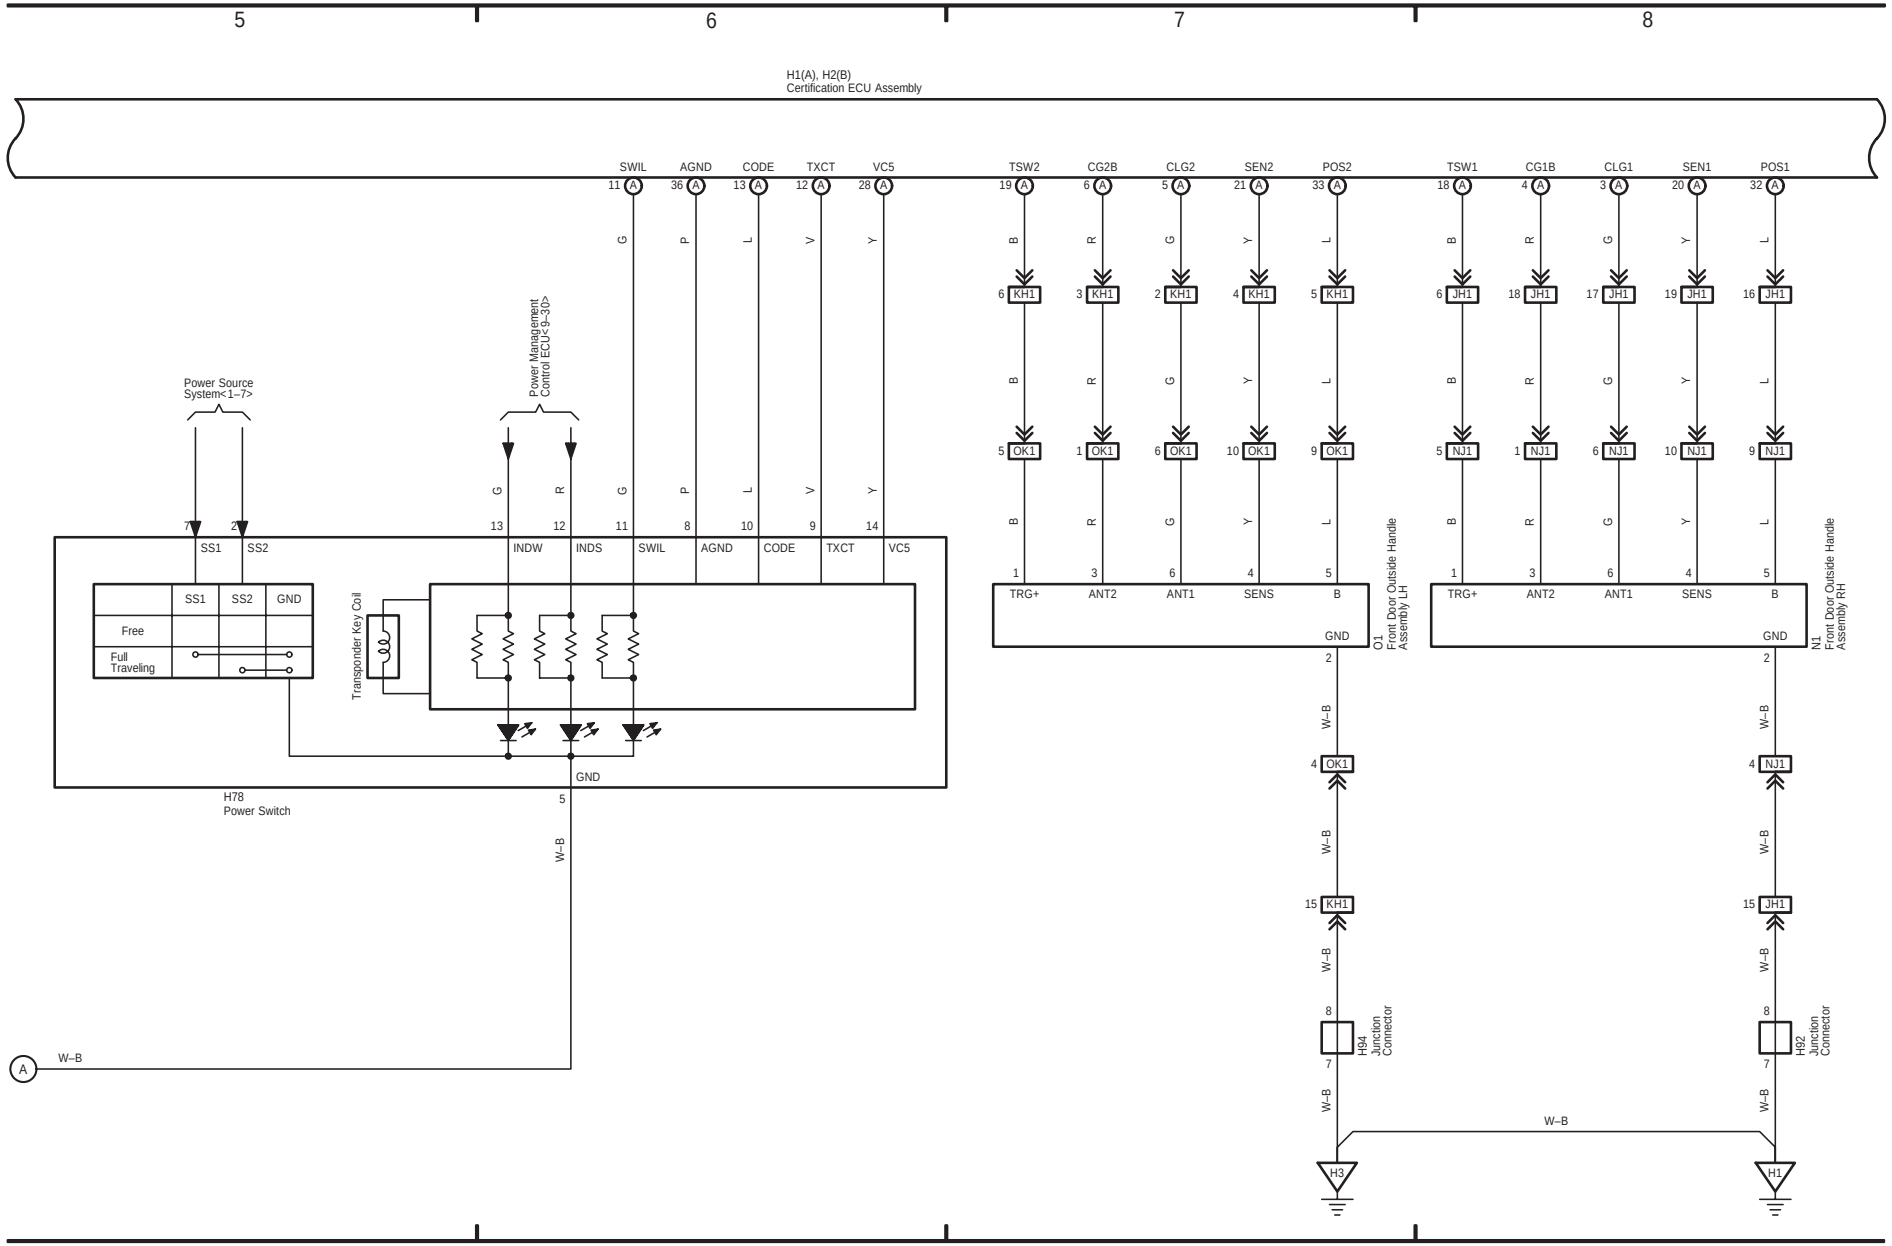

(Cont. next page)

Entry & Start System (RHD)

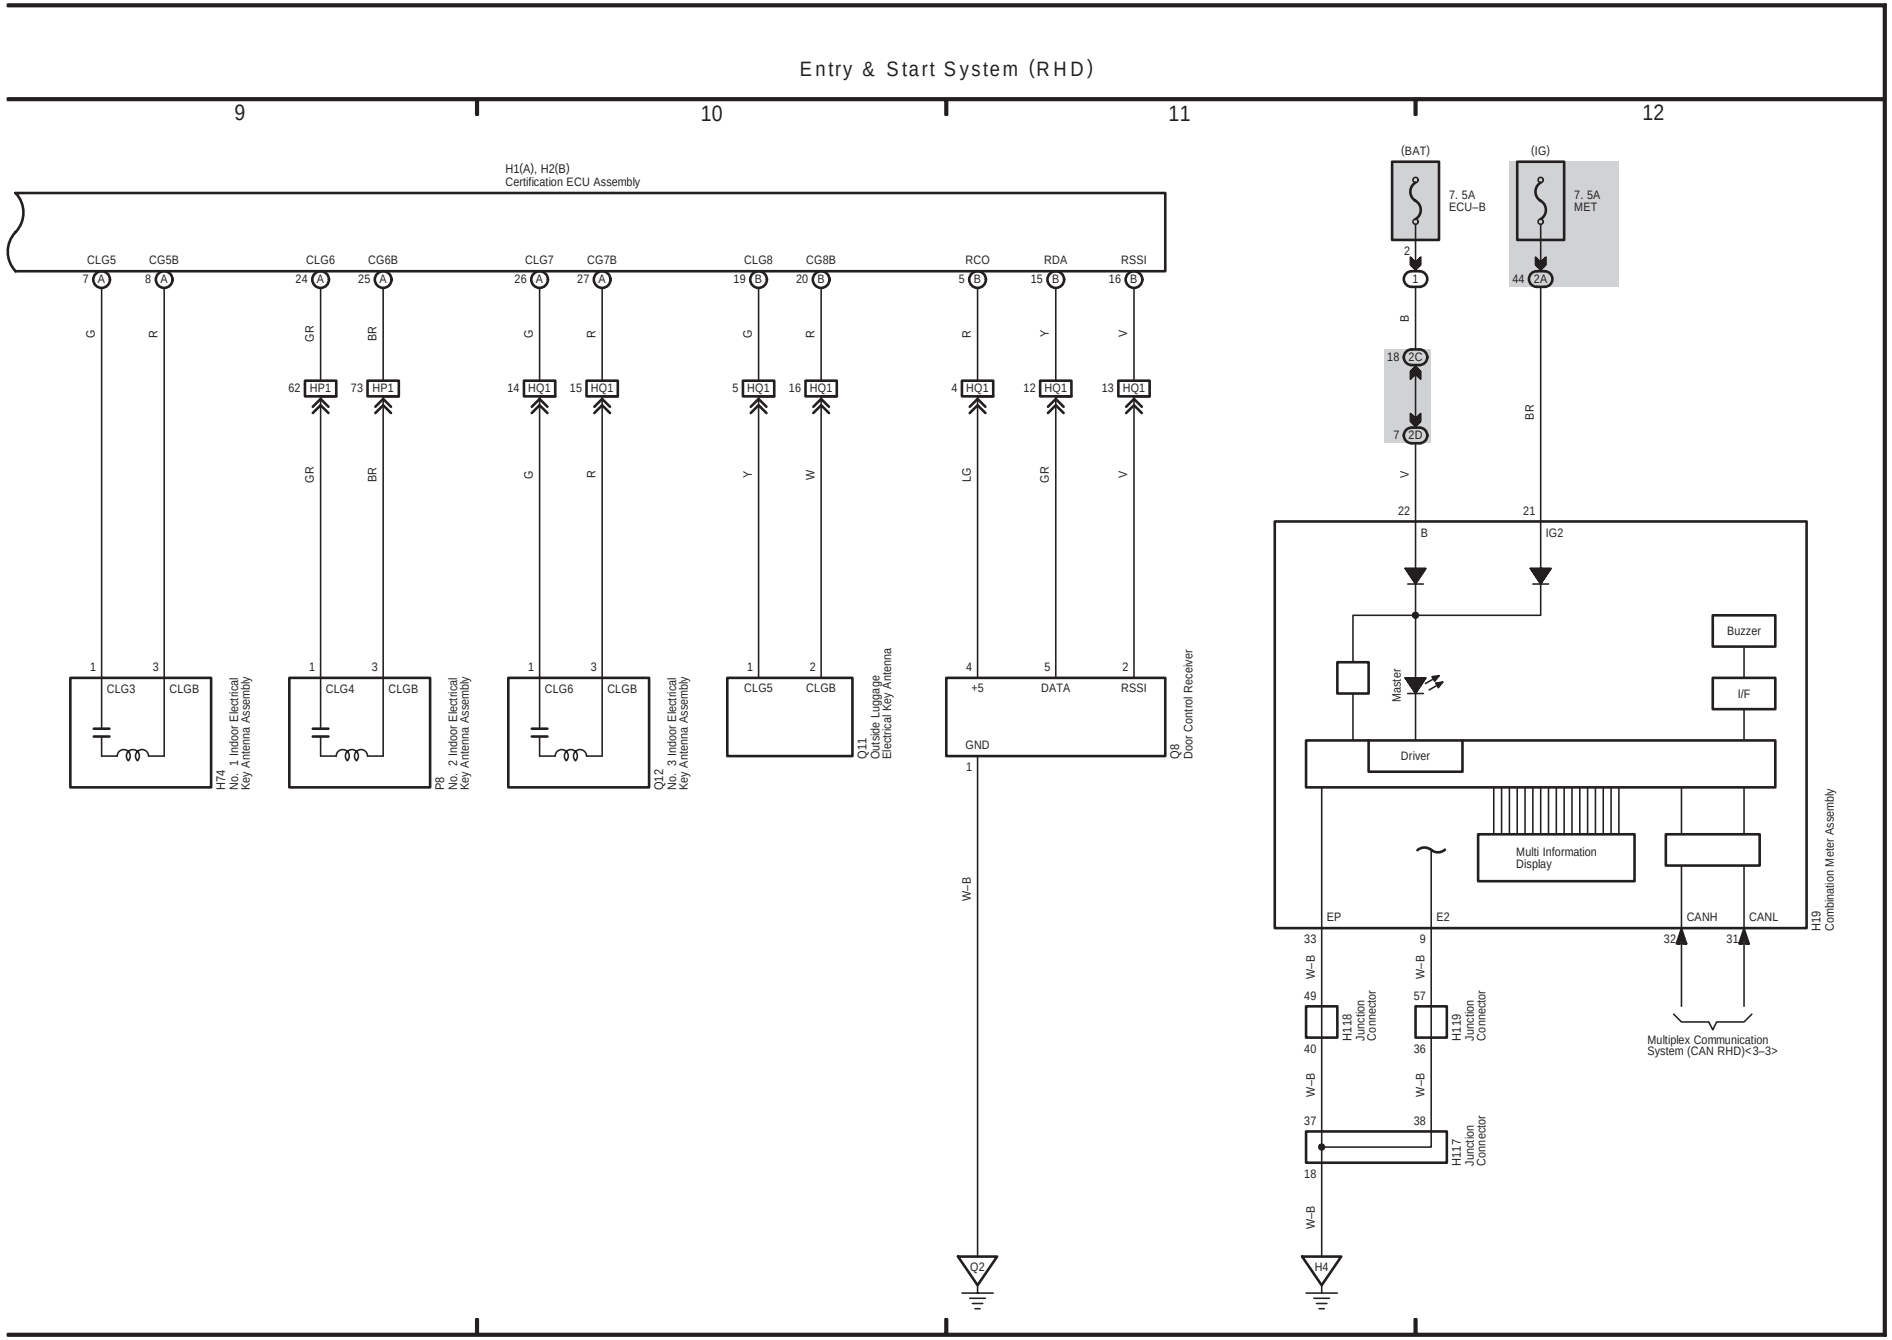


Entry & Start System (RHD)
9
10
11
12
H1(A), H2(B)
Certification ECU Assembly
CLG5
CG5B
CLG6
CG6B
CLG7
CG7B
CLG8
CG8B
RCO
RDA
RSSI
H74
No. 1 Indoor Electrical Key Antenna Assembly
P8
No. 2 Indoor Electrical Key Antenna Assembly
Q12
No. 3 Indoor Electrical Key Antenna Assembly
Q11
Outside Luggage Electrical Key Antenna
Q8
Door Control Receiver
CLG3
CLG4
CLG6
CLG5
+5
DATA
RSSI
GND
CLGB
W–B
Q2
(BAT)
(IG)
7. 5A
ECU–B
7. 5A
MET
B
IG2
Buzzer
I/F
Master
Driver
Multi Information Display
EP
E2
CANH
CANL
H19
Combination Meter Assembly
H118
Junction Connector
H119
Junction Connector
H117
Junction Connector
Multiplex Communication System (CAN RHD)<3–3>
H4