
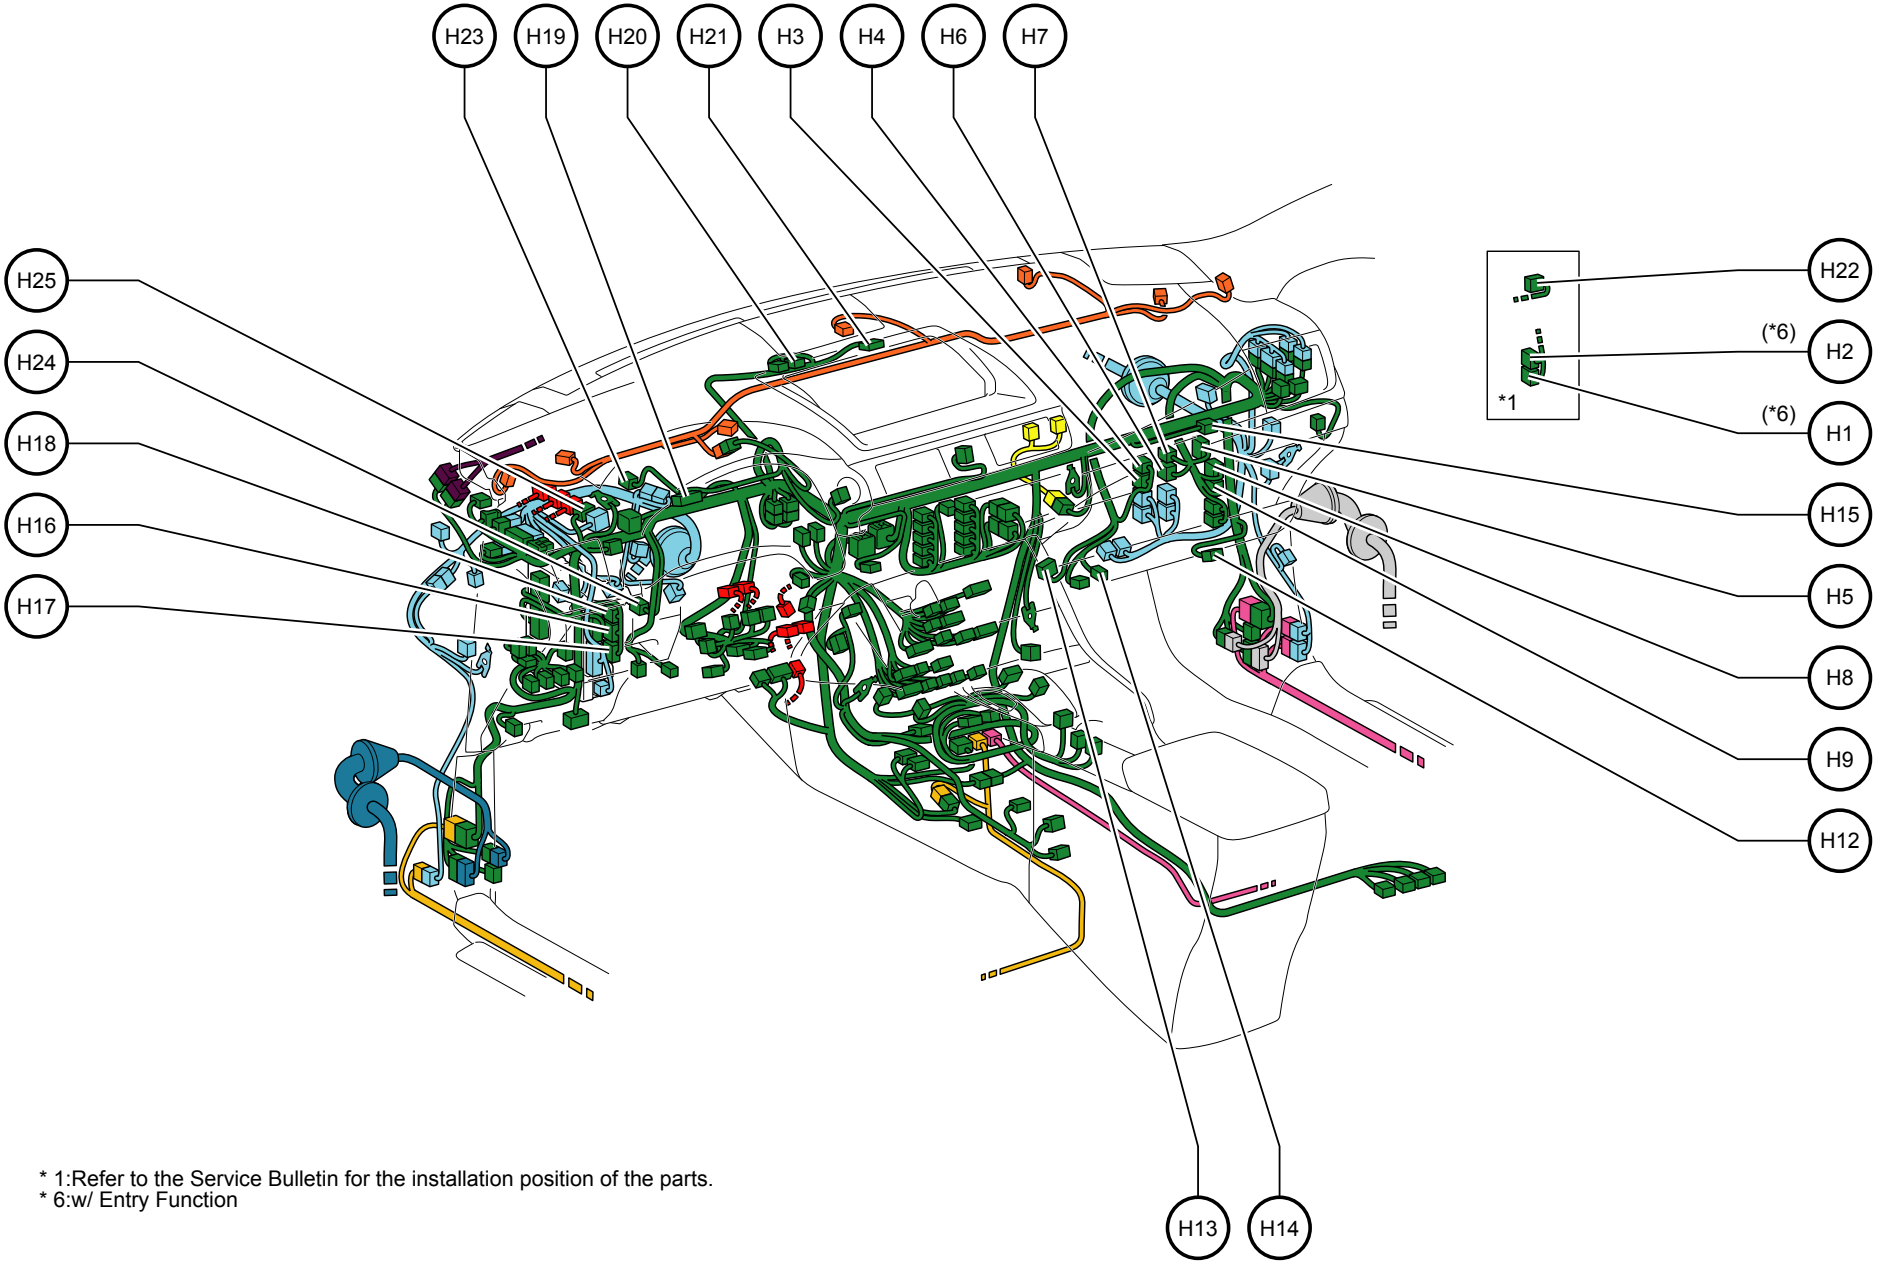



* 1:Refer to the Service Bulletin for the installation position of the parts.
* 6:w/ Entry Function

H 1 Certification ECU Assembly
H 2 Certification ECU Assembly
H 3 Power Management Control ECU
H 4 Power Management Control ECU
H 5 Driving Support ECU Assembly
H 6 Seat Belt Control ECU
H 7 Seat Belt Control ECU
H 8 Parking Assist ECU
H 9 Parking Assist ECU
H 12 Lower No. 2 Instrument Panel Airbag Assembly
H 13 Blower with Fan Motor Sub-Assembly
H 14 No. 1 Interior Illumination Light Assembly RH
H 15 Glove Box Light Assembly
H 16 Main Body ECU
H 17 Main Body ECU
H 18 Main Body ECU
H 19 Combination Meter Assembly
H 20 Multi-Display
H 21 Multi-Display
H 22 ID Code Box
H 23 No. 1 Clearance Warning Buzzer
H 24 Skid Control Buzzer Assembly
H 25 Power Steering ECU Assembly


H 1
White

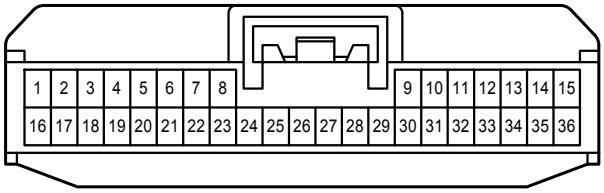


H 2
White

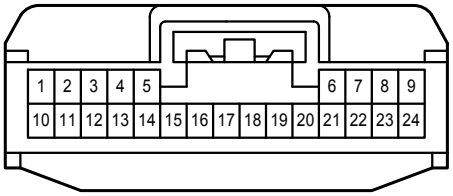


H 3
Gray

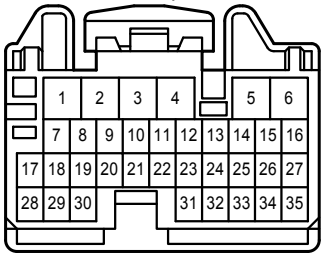


H 4
Gray

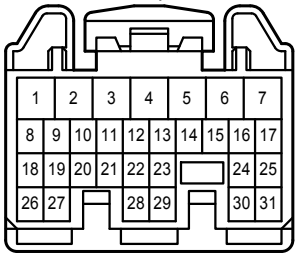


H 5
White

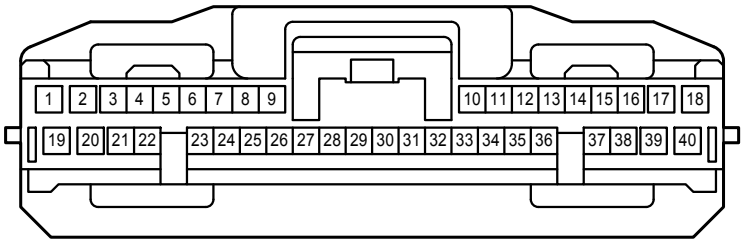


H 6
White

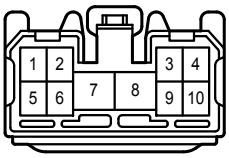


H 7
White

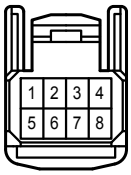


H 8
White

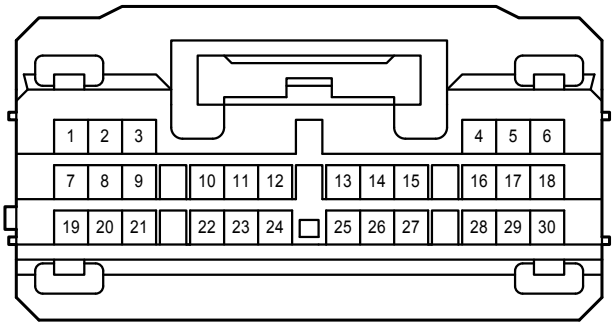


H 9
Black

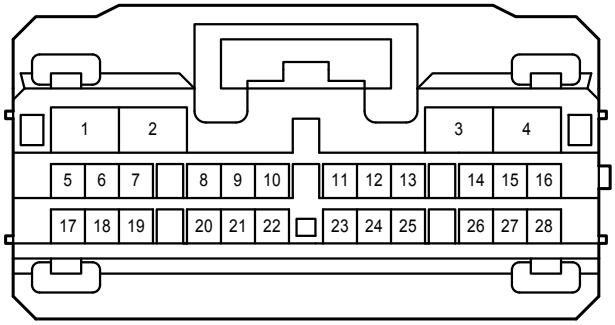

H 12
Yellow

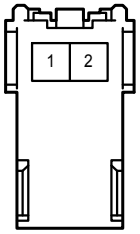


H 13
Black

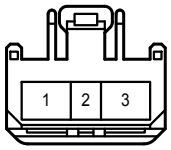


H 14
Gray




H 15
Gray




H 16
Black

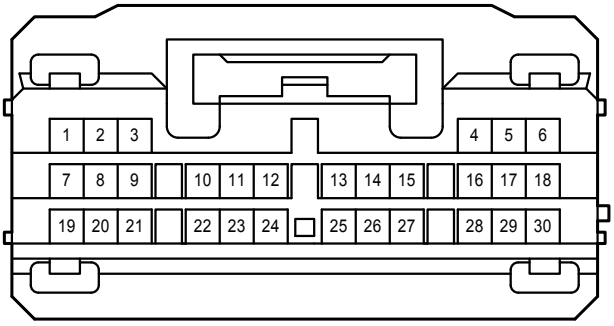


H 17
White

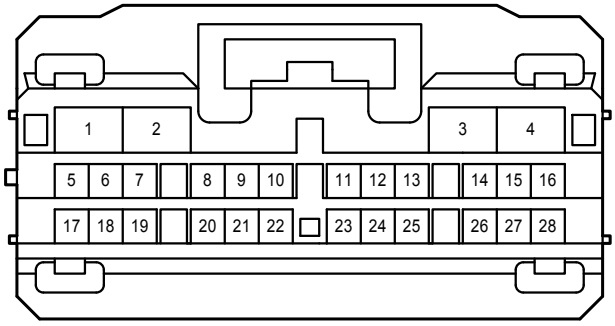


H 18
White

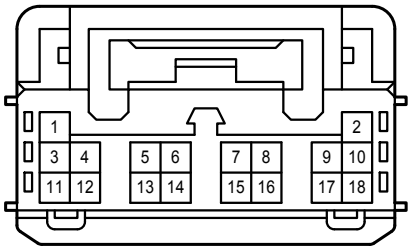


H 19
White

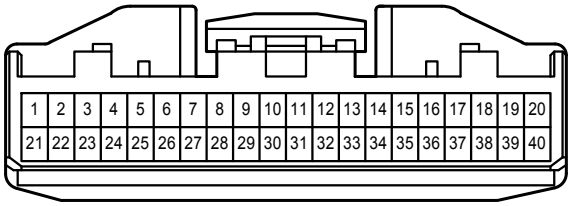


H 20
White

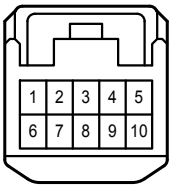


H 21
White

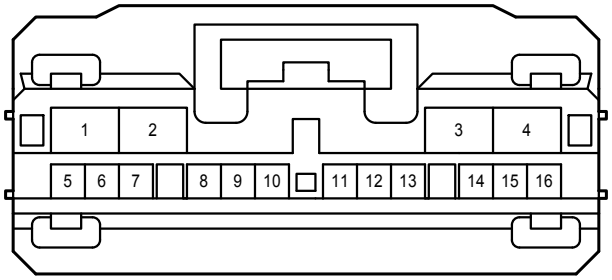


H 22
White

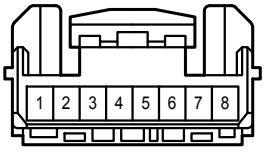

H 23
Black



H 24
Blue



H 25
White

