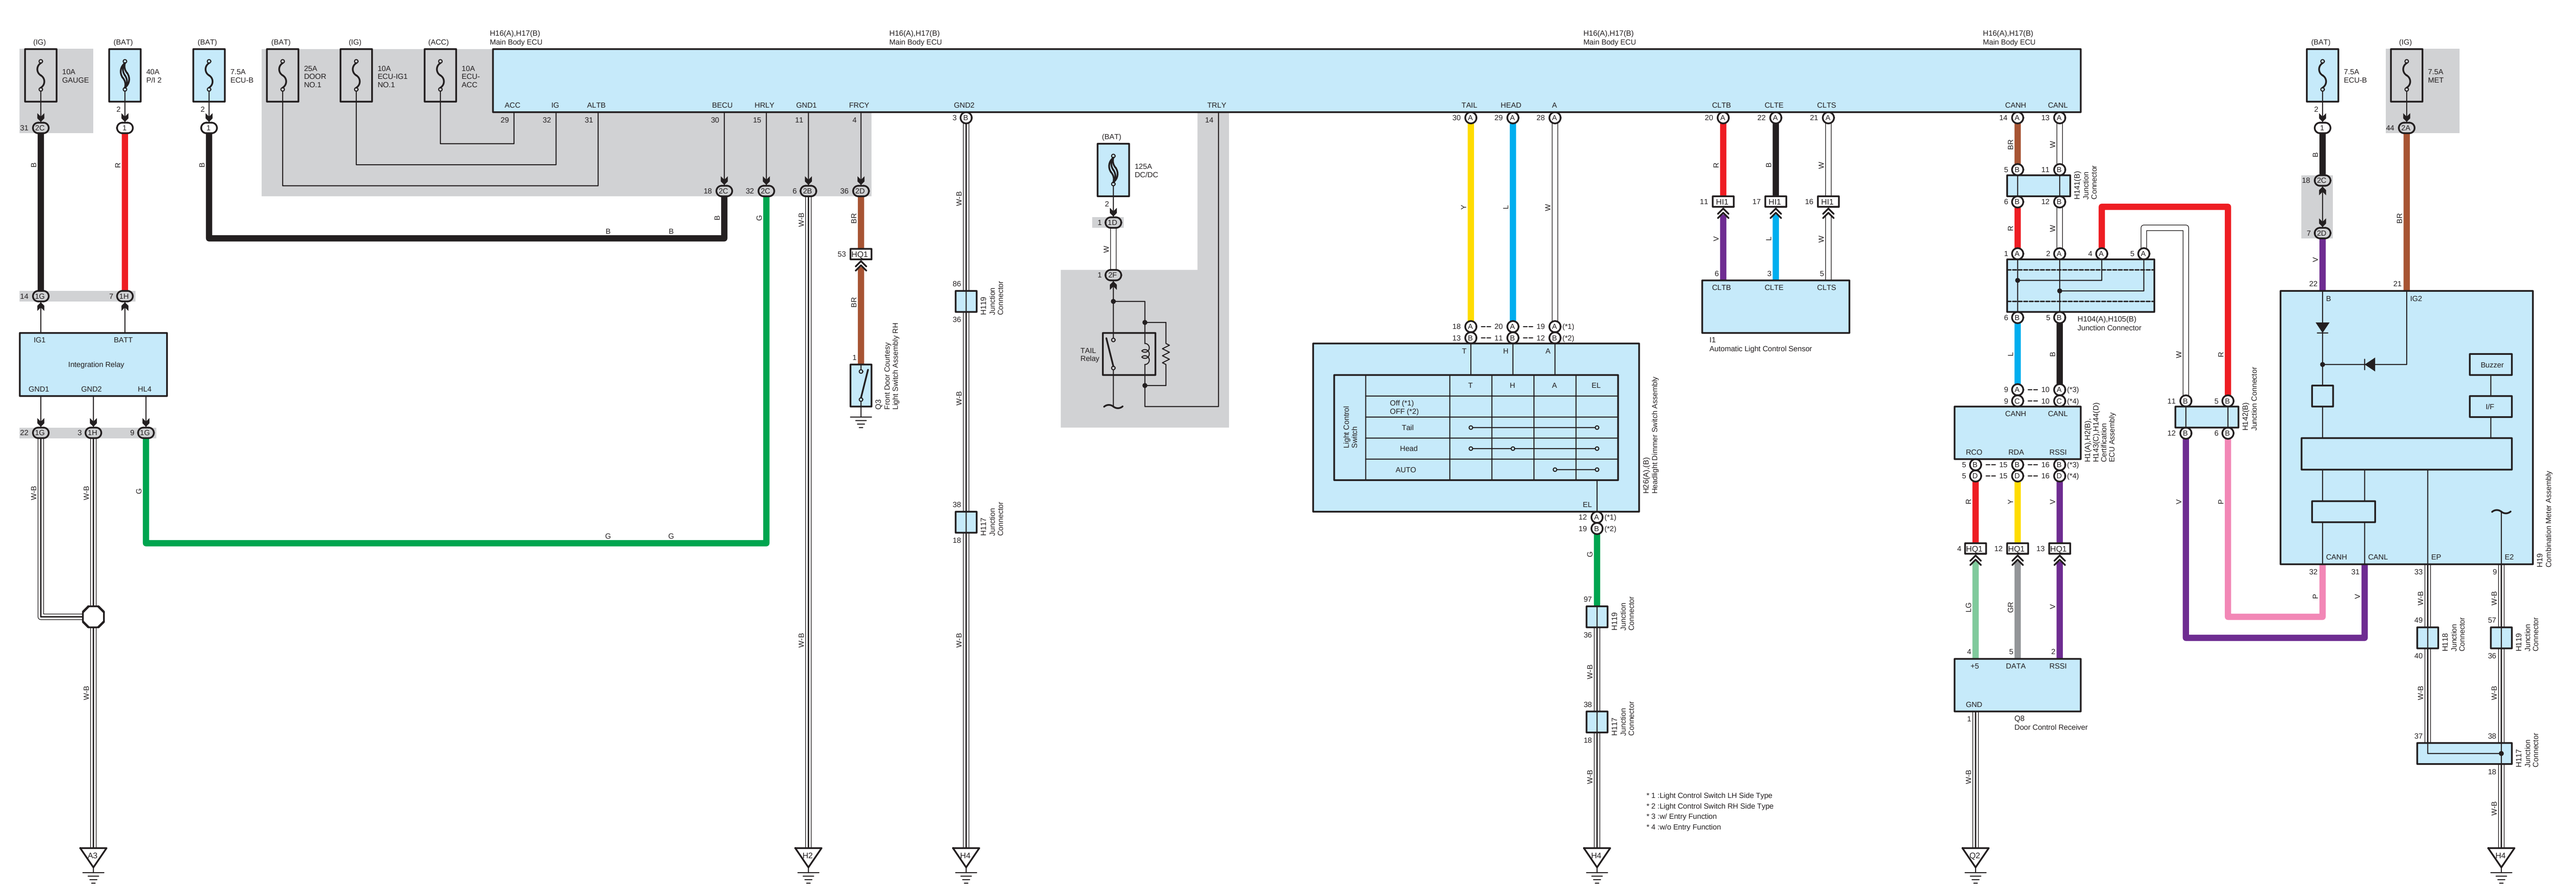

(IG)
10A GAUGE
(BAT)
40A P/I 2
(BAT)
7.5A ECU-B
(BAT)
25A DOOR NO.1
(IG)
10A ECU-IG1 NO.1
(ACC)
10A ECU-ACC
H16(A),H17(B) Main Body ECU
ACC
IG
ALTB
BECU
HRLY
GND1
FRCY
GND2
TRLY
TAIL
HEAD
A
CLTB
CLTE
CLTS
CANH
CANL
(BAT)
125A DC/DC
TAIL Relay
Integration Relay
IG1
BATT
GND1
GND2
HL4
Light Control Switch
Off (*1)
OFF (*2)
Tail
Head
AUTO
H26(A),(B) Headlight Dimmer Switch Assembly
I1 Automatic Light Control Sensor
H141(B) Junction Connector
H104(A),H105(B) Junction Connector
H140,H139, H143(C),H144(D) Certification ECU Assembly
RCO
RDA
RSSI
+5
DATA
GND
Q8 Door Control Receiver
H142(B) Junction Connector
Q3 Front Door Courtesy Light Switch Assembly RH
H119 Junction Connector
H117 Junction Connector
H118 Junction Connector
H19 Combination Meter Assembly
Buzzer
I/F
CANH
CANL
EP
E2
IG2
* 1 :Light Control Switch LH Side Type
* 2 :Light Control Switch RH Side Type
* 3 :w/ Entry Function
* 4 :w/o Entry Function