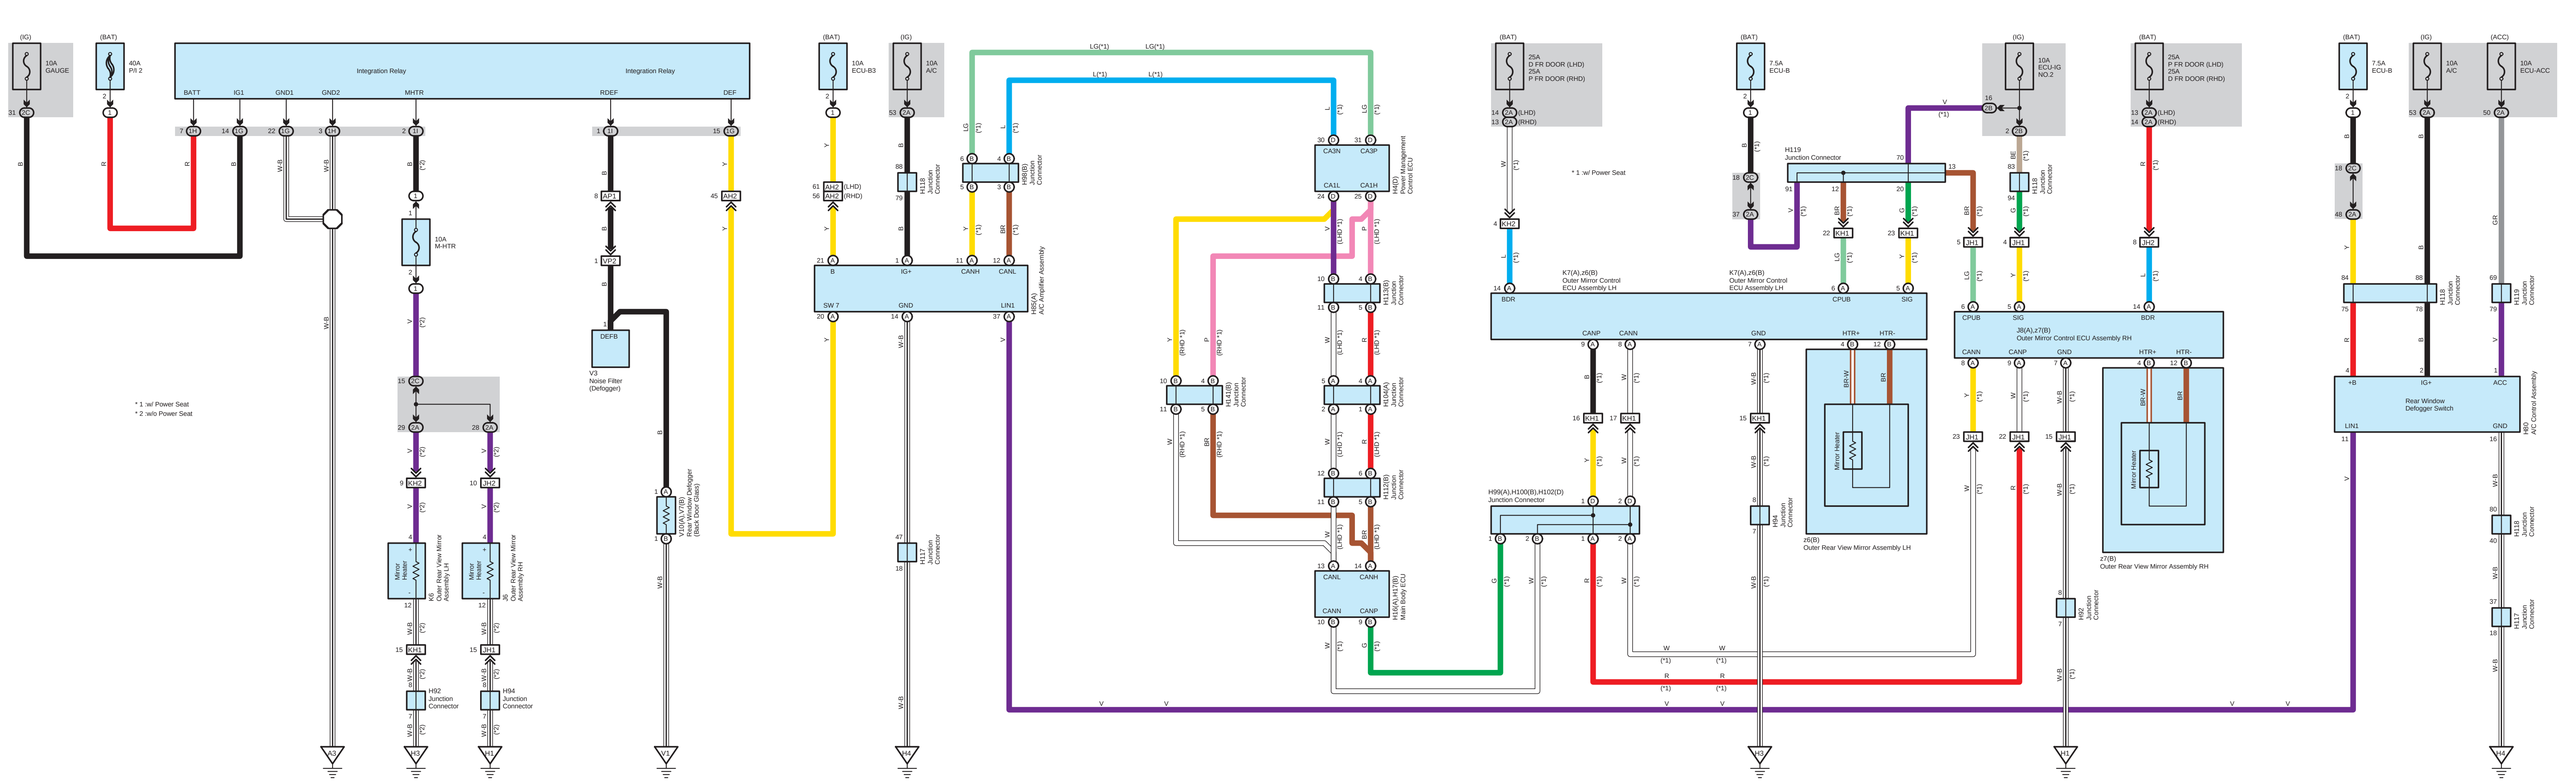

(IG)
10A
GAUGE
(BAT)
40A
P/I 2
Integration Relay
BATT
IG1
GND1
GND2
MHTR
RDEF
DEF
10A
M-HTR
DEFB
V3
Noise Filter
(Defogger)
* 1 :w/ Power Seat
* 2 :w/o Power Seat
Mirror
Heater
K6
Outer Rear View Mirror
Assembly LH
Outer Rear View Mirror
Assembly RH
H92
Junction
Connector
H94
Junction
Connector
V1(A),V7(B)
Rear Window Defogger
(Back Door Glass)
V1
V2
V3
V4
V5
(BAT)
10A
ECU-B3
(IG)
10A
A/C
H119
Junction
Connector
H118
Junction
Connector
H117
Junction
Connector
H6(A)
A/C Amplifier Assembly
H4(D)
Power Management
Control ECU
H14(B)
Junction
Connector
H14(A)
Junction
Connector
H14(B)
Junction
Connector
H14(B)
Junction
Connector
H14(B)
Junction
Connector
H15(A),H17(B)
Main Body ECU
(BAT)
25A
D FR DOOR (LHD)
25A
P FR DOOR (RHD)
(BAT)
7.5A
ECU-B
(IG)
10A
ECU-IG
NO.2
(BAT)
25A
P FR DOOR (LHD)
25A
D FR DOOR (RHD)
(BAT)
7.5A
ECU-B
(IG)
10A
A/C
(ACC)
10A
ECU-ACC
* 1 :w/ Power Seat
K7(A),z6(B)
Outer Mirror Control
ECU Assembly LH
H119
Junction
Connector
J8(A),z7(B)
Outer Mirror Control ECU Assembly RH
H99(A),H100(B),H102(D)
Junction Connector
H118
Junction
Connector
H92
Junction
Connector
z6(B)
Outer Rear View Mirror Assembly LH
z7(B)
Outer Rear View Mirror Assembly RH
Mirror Heater
Rear Window
Defogger Switch
H80
A/C Control Assembly
H118
Junction
Connector
H117
Junction
Connector
V1
V2
V3
V4
V5