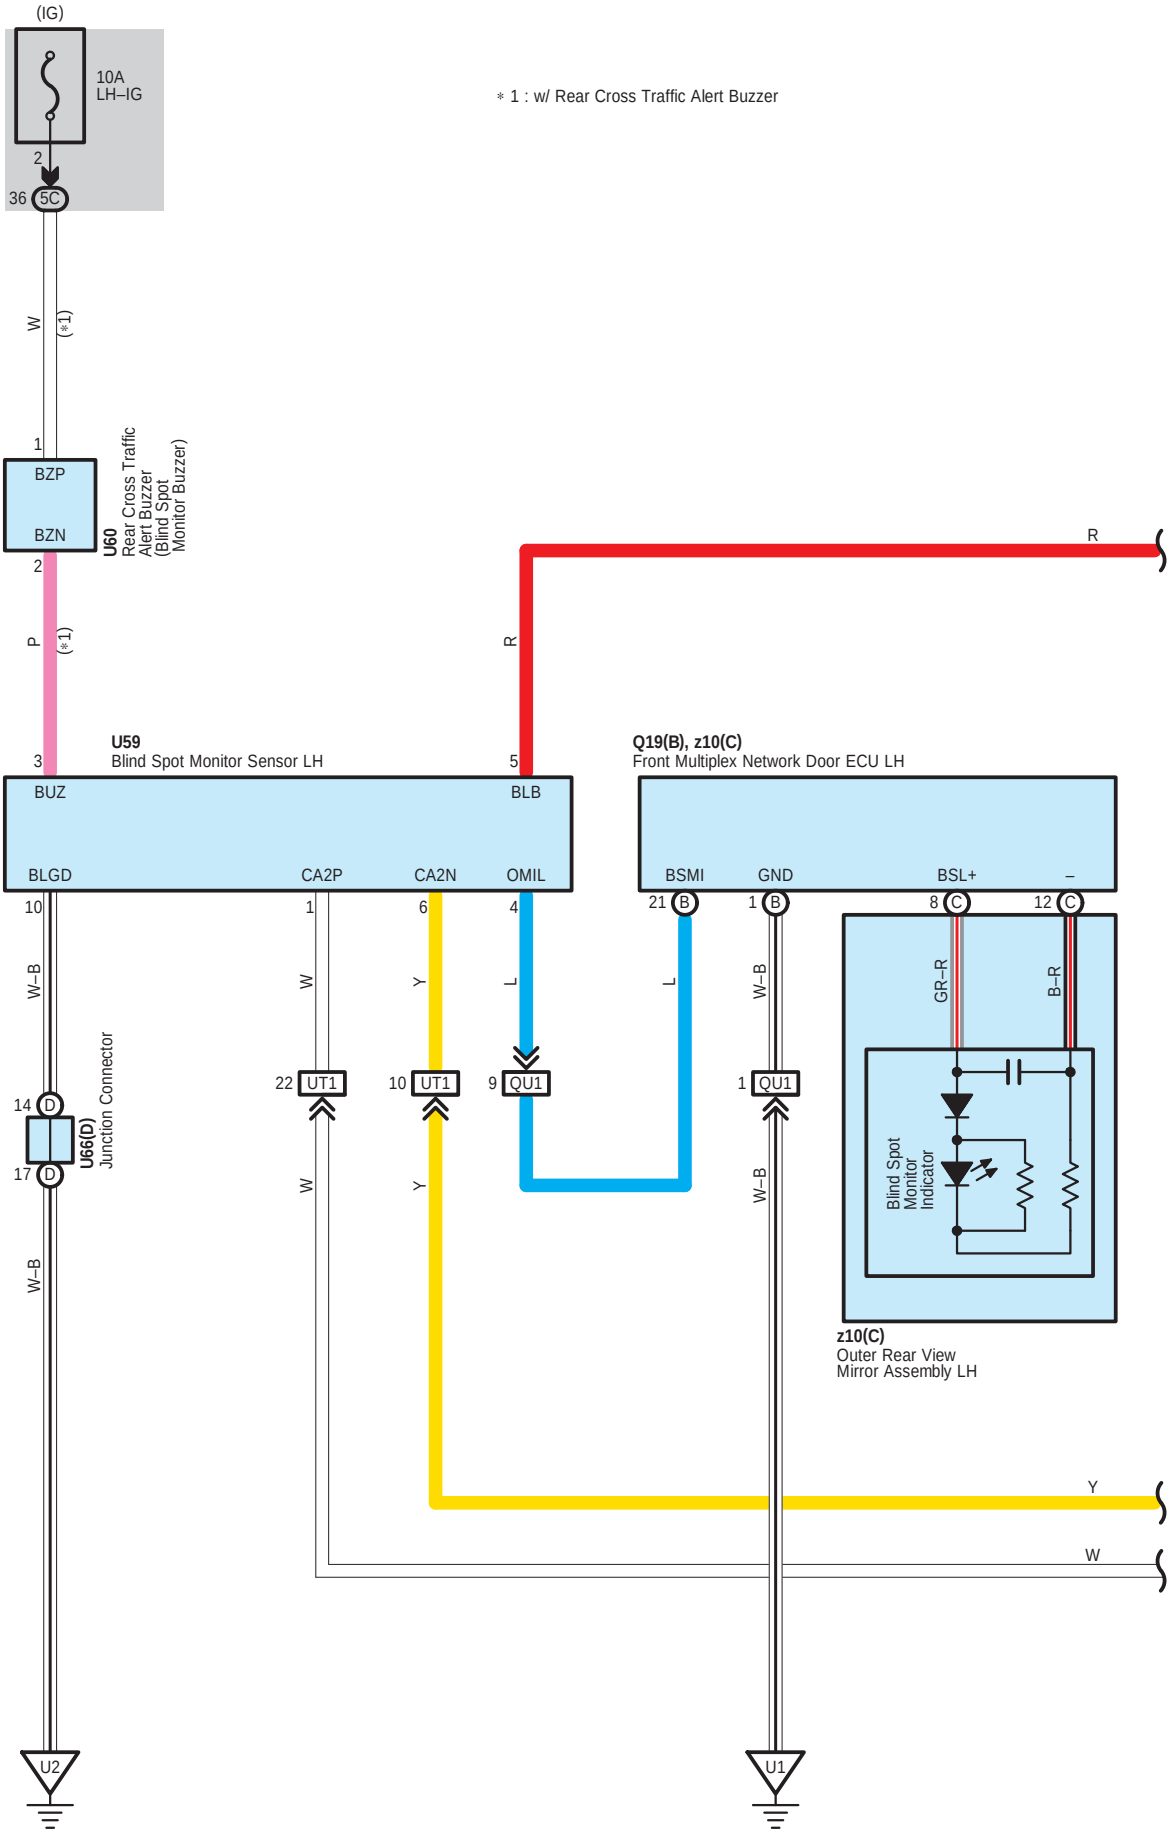
(IG)
10A
LH–IG
2
36 5C
W
(*1)
1
BZP
BZN
U60
Rear Cross Traffic Alert Buzzer (Blind Spot Monitor Buzzer)
2
P
(*1)
3
BUZ
BLGD
10
W–B
14 D
17 D
U66(D)
Junction Connector
W–B
U2
U59
Blind Spot Monitor Sensor LH
5
BLB
R
R
CA2P
CA2N
OMIL
1
W
22 UT1
W
6
Y
10 UT1
Y
4
L
9 QU1
L
Q19(B), z10(C)
Front Multiplex Network Door ECU LH
BSMI
GND
BSL+
–
21 B
1 B
8 C
12 C
1 QU1
W–B
W–B
GR–R
B–R
Blind Spot Monitor Indicator
z10(C)
Outer Rear View Mirror Assembly LH
U1
R
Y
W
＊1 : w/ Rear Cross Traffic Alert Buzzer

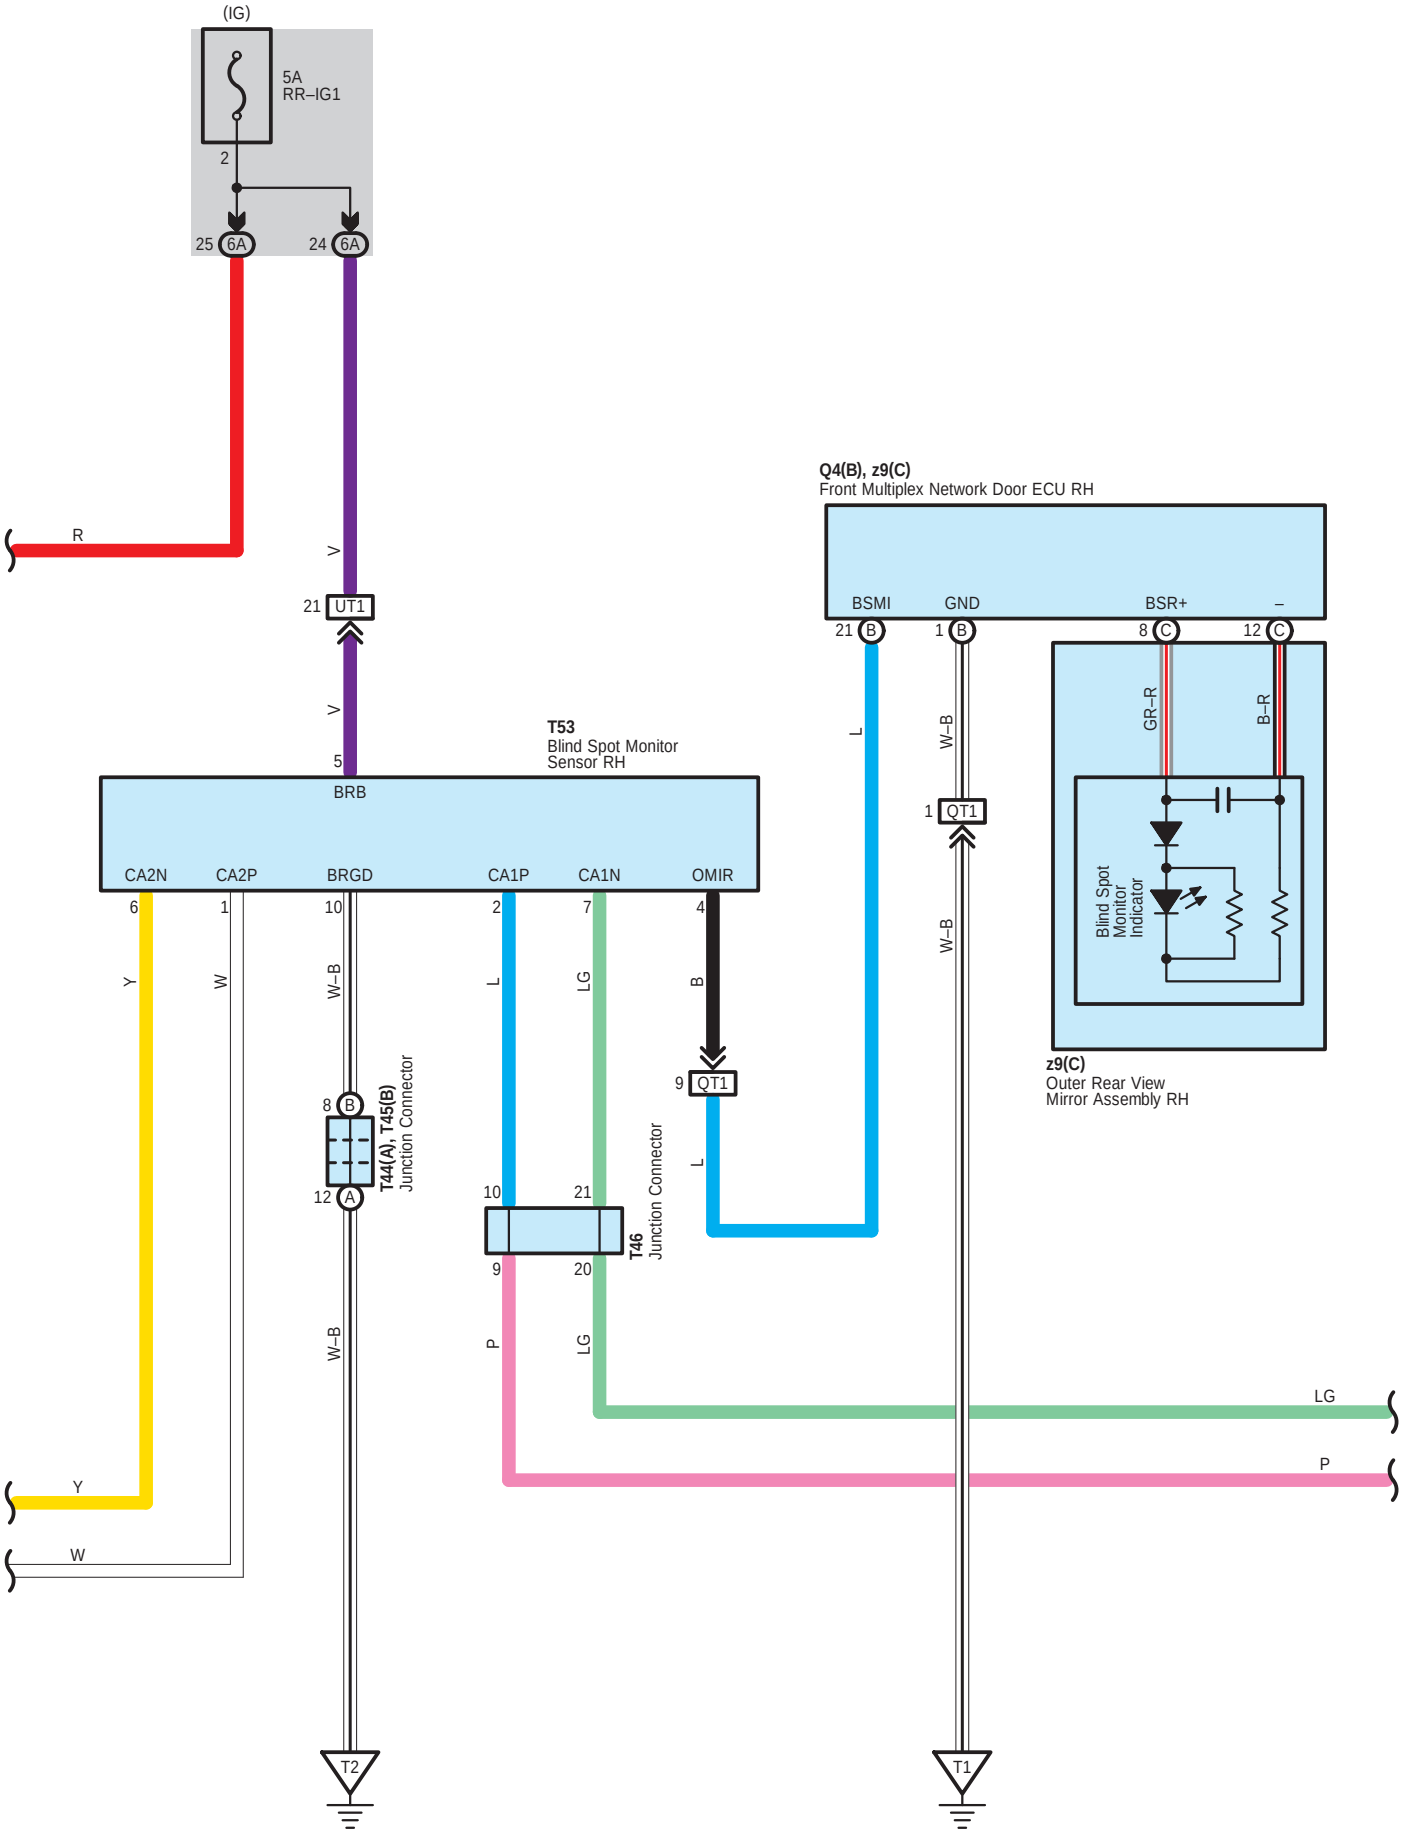
(IG)
5A
RR–IG1
2
25 6A
24 6A
R
V
21 UT1
V
5
BRB
T53
Blind Spot Monitor
Sensor RH
CA2N
CA2P
BRGD
CA1P
CA1N
OMIR
6
1
10
2
7
4
Y
W
W–B
L
LG
B
8 B
12 A
T44(A), T45(B)
Junction Connector
9 QT1
L
10
21
9
20
T46
Junction Connector
P
LG
Y
W
W–B
T2
T1
Q4(B), z9(C)
Front Multiplex Network Door ECU RH
BSMI
GND
BSR+
–
21 B
1 B
8 C
12 C
L
W–B
1 QT1
W–B
GR–R
B–R
Blind Spot
Monitor
Indicator
z9(C)
Outer Rear View
Mirror Assembly RH

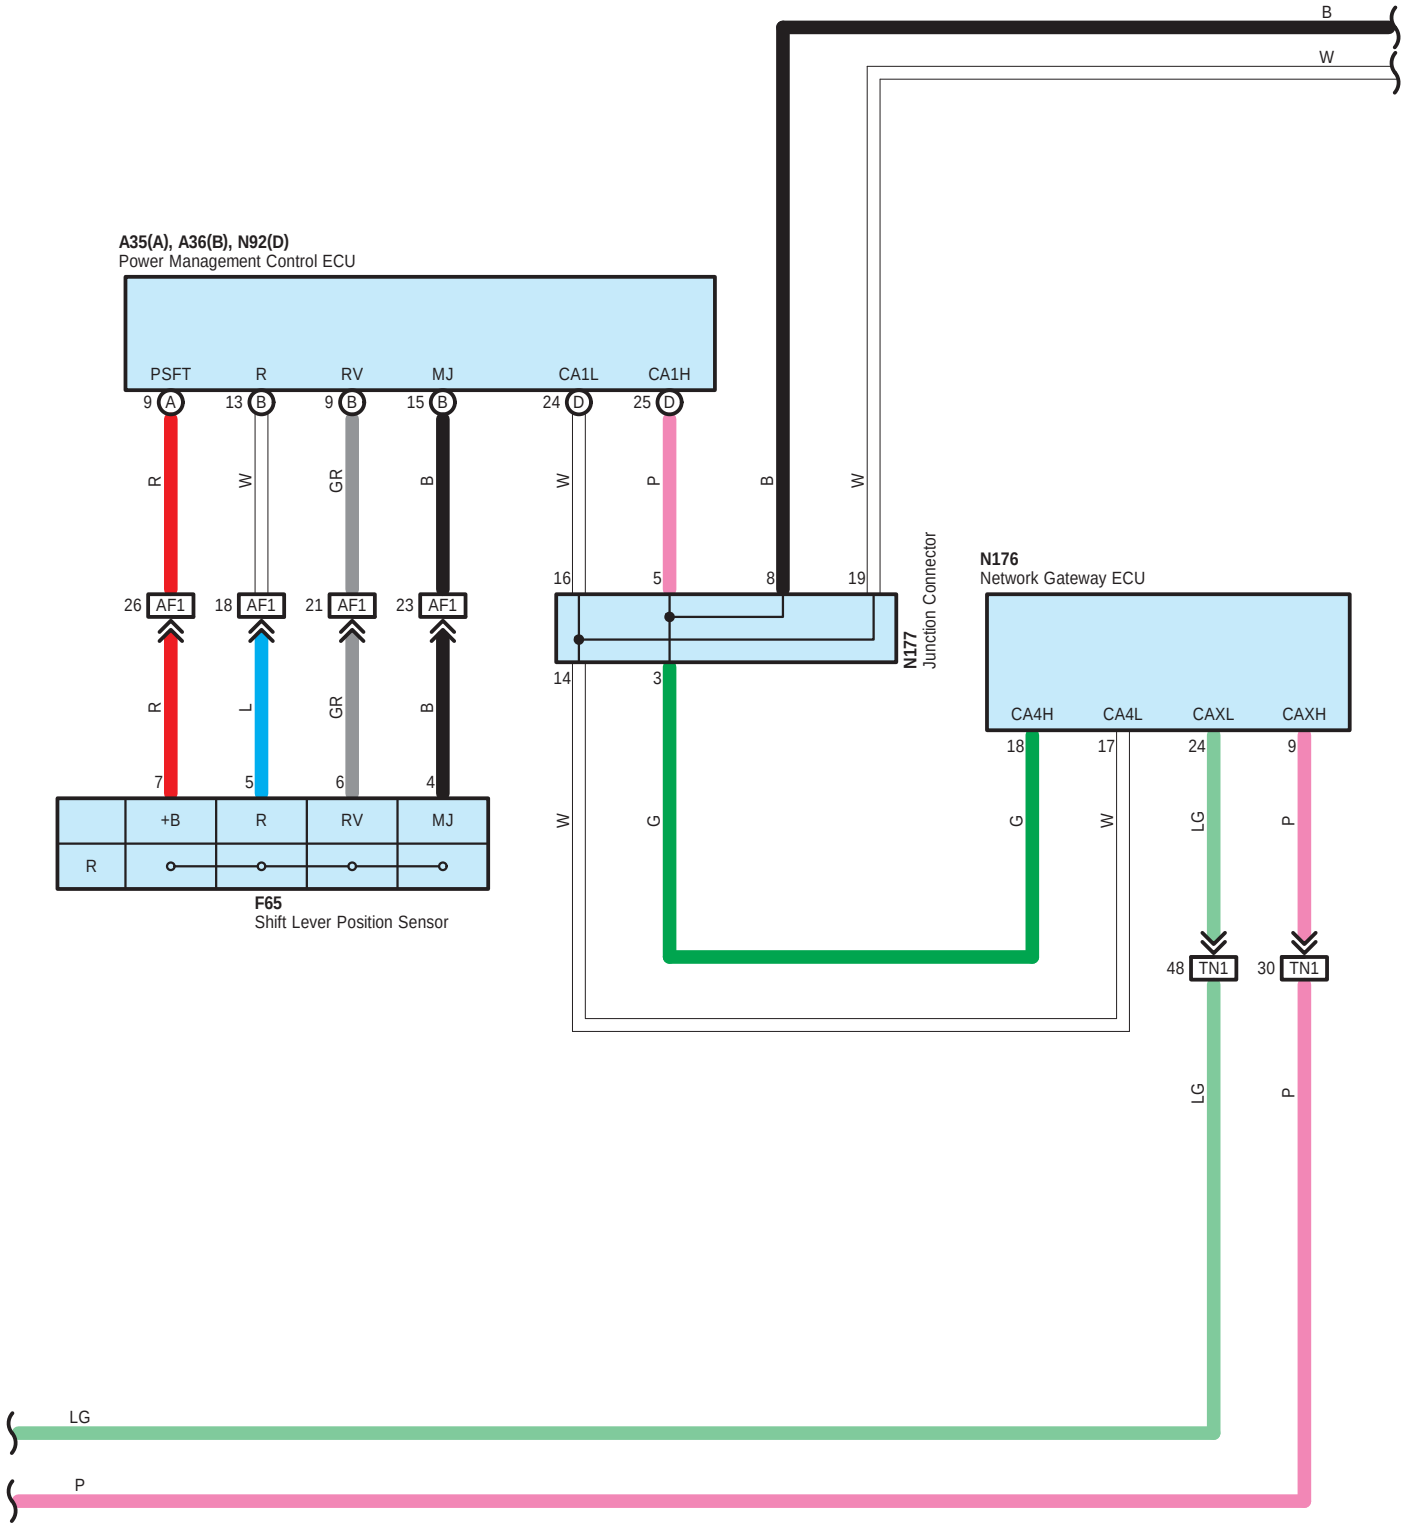
B
W
A35(A), A36(B), N92(D)
Power Management Control ECU
PSFT
R
RV
MJ
CA1L
CA1H
9 A
13 B
9 B
15 B
24 D
25 D
R
W
GR
B
W
P
B
W
26 AF1
18 AF1
21 AF1
23 AF1
16
5
8
19
N177
Junction Connector
N176
Network Gateway ECU
R
L
GR
B
14
3
CA4H
CA4L
CAXL
CAXH
18
17
24
9
7
5
6
4
+B
R
RV
MJ
R
W
G
G
W
LG
P
F65
Shift Lever Position Sensor
48 TN1
30 TN1
LG
P
LG
P

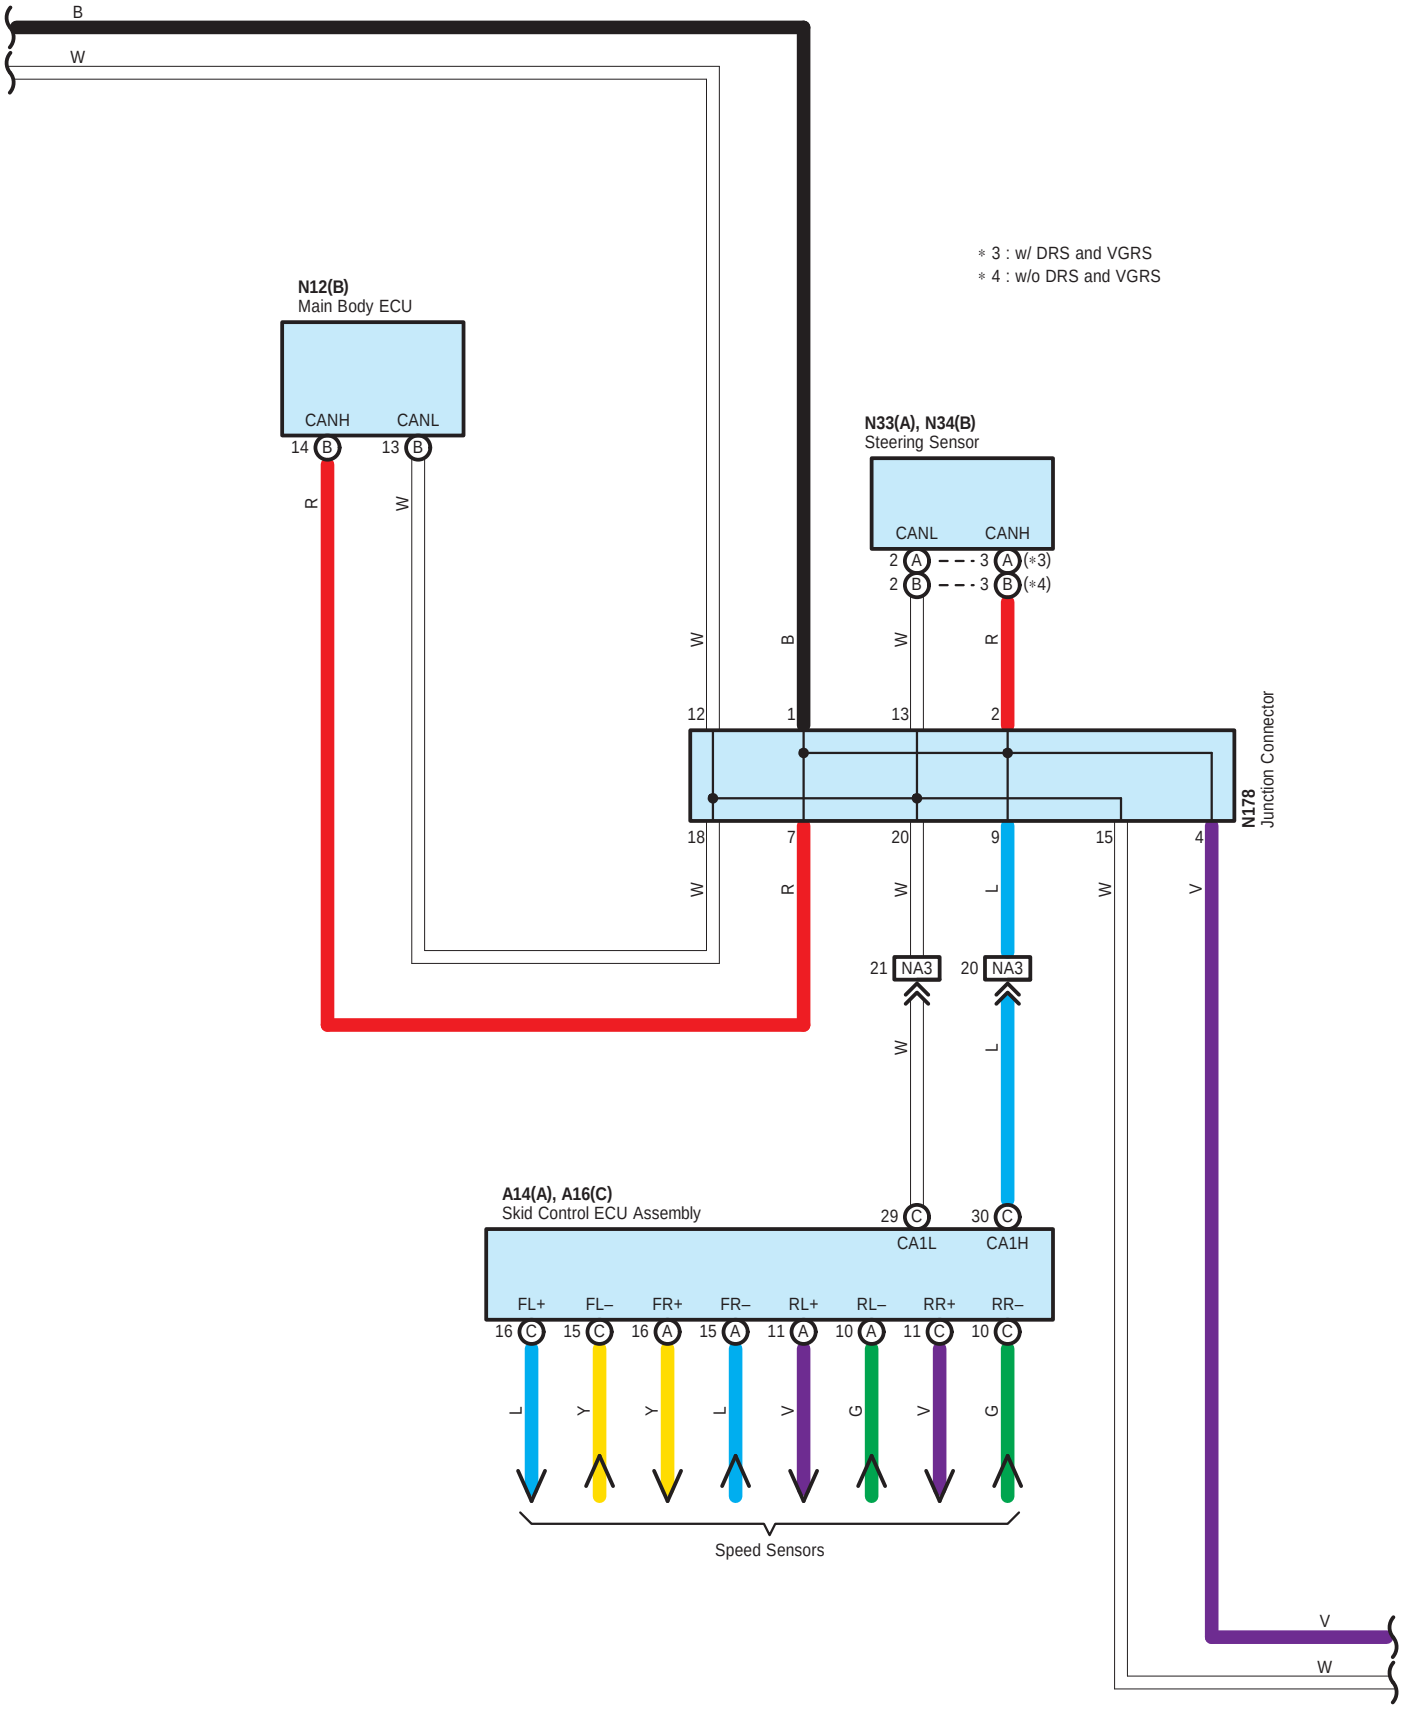
B
W
∗ 3 : w/ DRS and VGRS
∗ 4 : w/o DRS and VGRS
N12(B)
Main Body ECU
CANH
CANL
14 B
13 B
R
W
N33(A), N34(B)
Steering Sensor
CANL
CANH
2 A
3 A (∗3)
2 B
3 B (∗4)
W
B
W
R
12
1
13
2
N178
Junction Connector
18
7
20
9
15
4
W
R
W
L
W
V
21 NA3
20 NA3
W
L
A14(A), A16(C)
Skid Control ECU Assembly
29 C
30 C
CA1L
CA1H
FL+
FL–
FR+
FR–
RL+
RL–
RR+
RR–
16 C
15 C
16 A
15 A
11 A
10 A
11 C
10 C
L
Y
Y
L
V
G
V
G
Speed Sensors
V
W

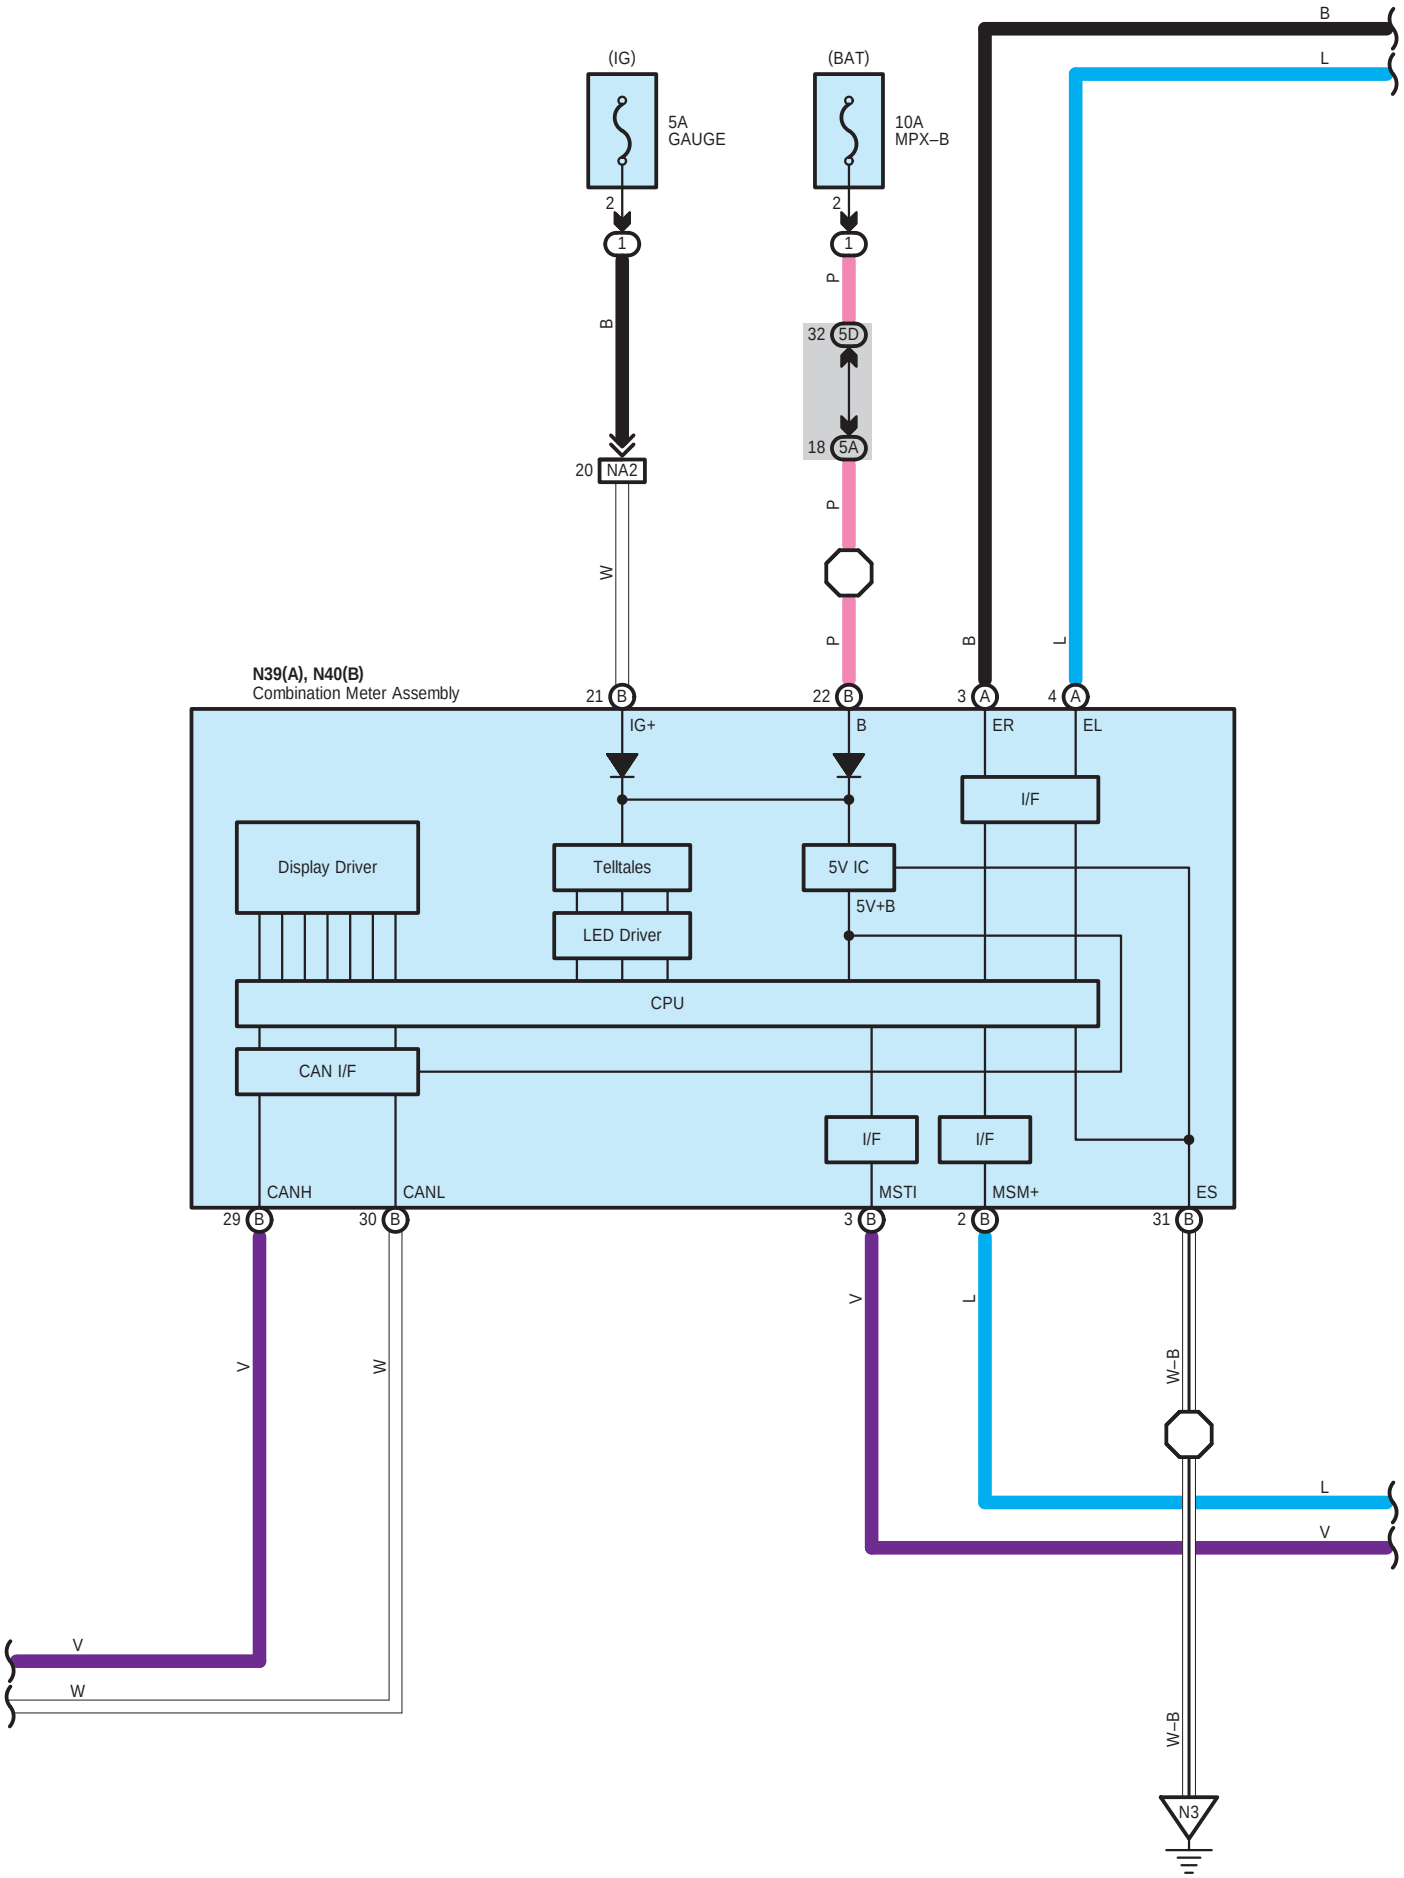
(IG)
5A
GAUGE
(BAT)
10A
MPX–B
B
L
2
1
B
20 NA2
W
P
32 5D
18 5A
P
P
B
L
N39(A), N40(B)
Combination Meter Assembly
21 B
22 B
3 A
4 A
IG+
B
ER
EL
I/F
Display Driver
Telltales
5V IC
5V+B
LED Driver
CPU
CAN I/F
I/F
I/F
CANH
CANL
MSTI
MSM+
ES
29 B
30 B
3 B
2 B
31 B
V
W
V
L
W–B
L
V
V
W
W–B
N3

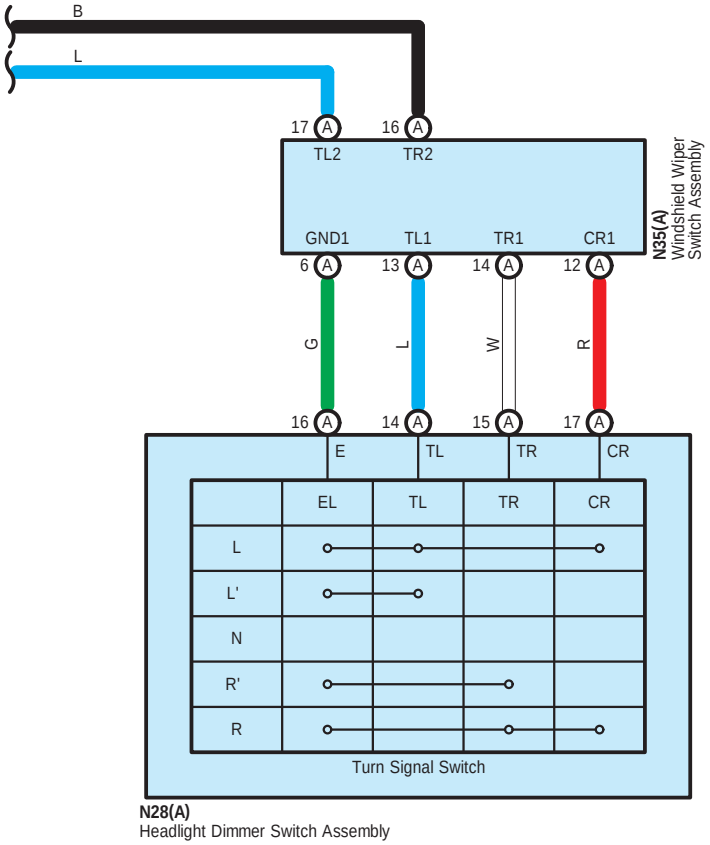
B
L
17 A
16 A
TL2
TR2
GND1
TL1
TR1
CR1
N35(A)
Windshield Wiper
Switch Assembly
6 A
13 A
14 A
12 A
G
L
W
R
16 A
14 A
15 A
17 A
E
TL
TR
CR
EL
TL
TR
CR
L
L'
N
R'
R
Turn Signal Switch
N28(A)
Headlight Dimmer Switch Assembly

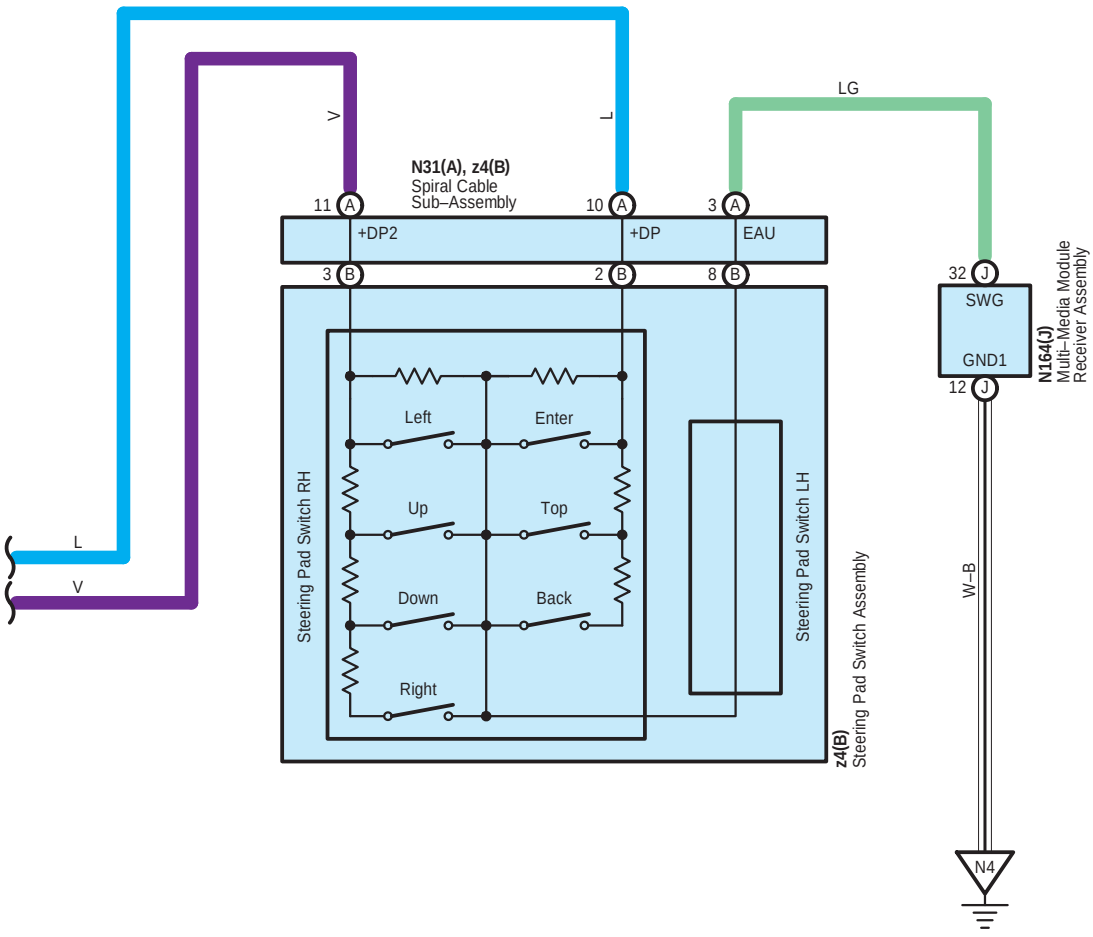
V
L
LG
N31(A), z4(B)
Spiral Cable
Sub–Assembly
11 A
10 A
3 A
+DP2
+DP
EAU
3 B
2 B
8 B
32 J
SWG
GND1
12 J
N164(J)
Multi–Media Module
Receiver Assembly
Left
Enter
Up
Top
Down
Back
Right
Steering Pad Switch RH
Steering Pad Switch LH
z4(B)
Steering Pad Switch Assembly
W–B
N4
L
V

A 14
Black

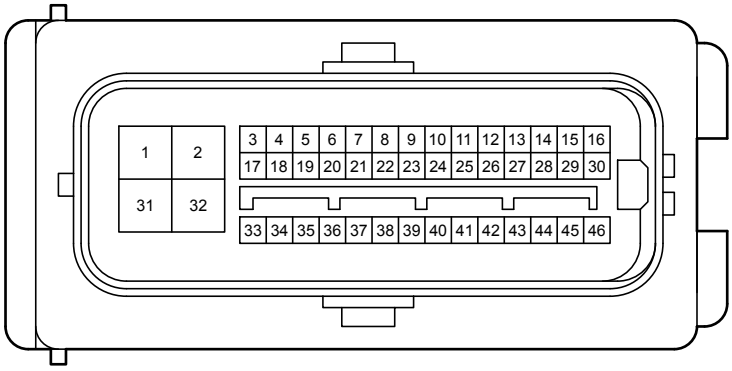

A 16
Gray

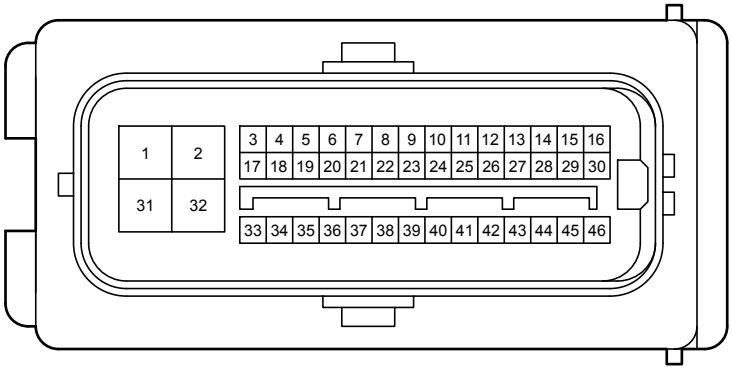

A 35
Gray

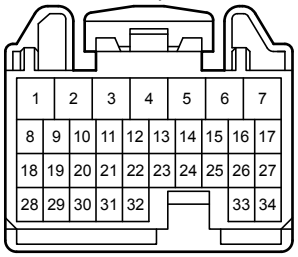

A 36
Gray

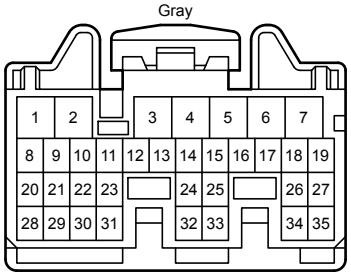

F 65
Gray

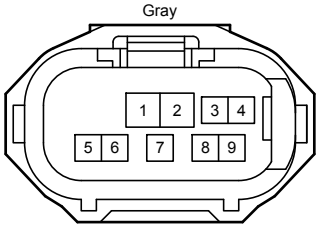

N 12
White

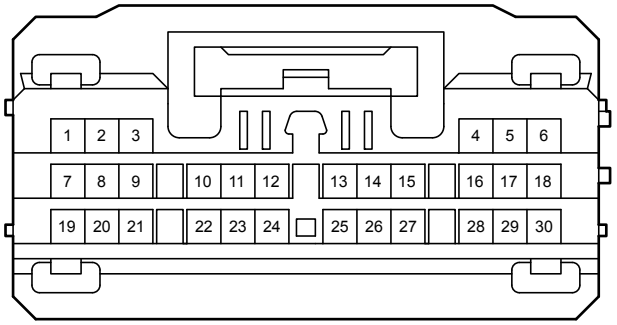

N 28
Black

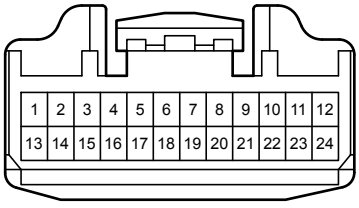

N 31
Black

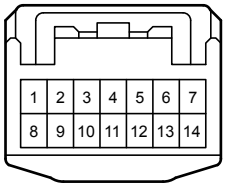

N 33
White

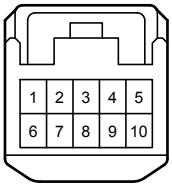

N 34
Black

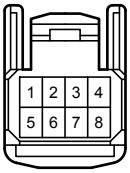

N 35
White

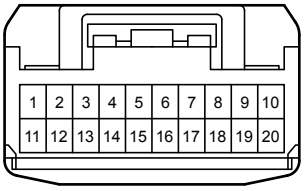

N 39
Black

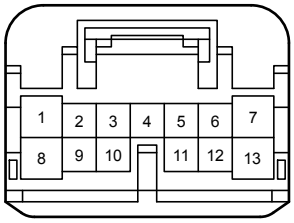

N 40
Black

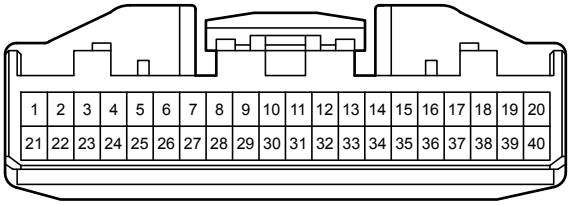

N 92
Gray

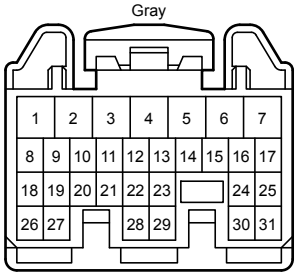

N164
White

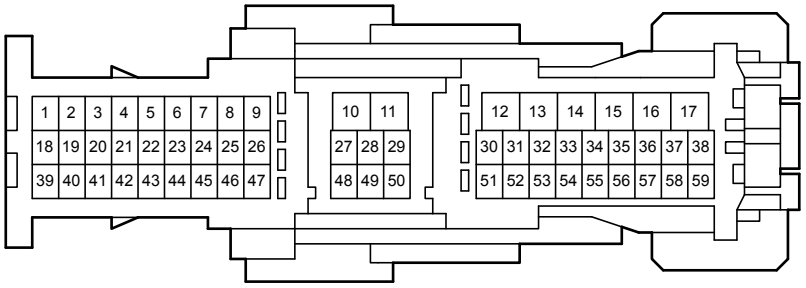

N176
Black

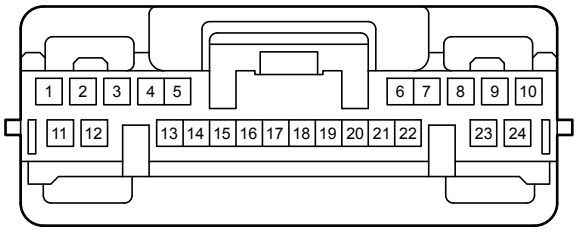

N177
Gray

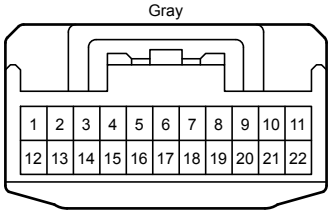

N178
Gray

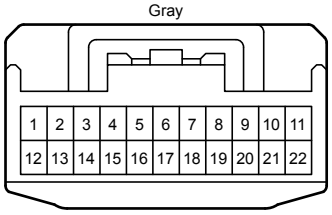

Q 4
White

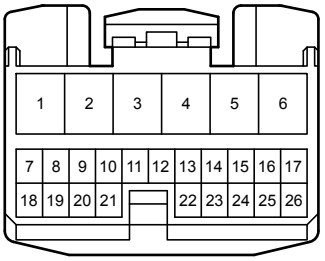

Q 19
White

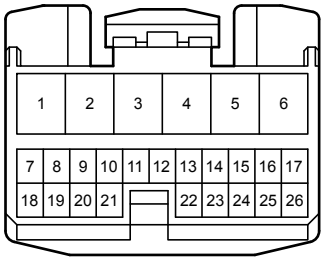

T 44
Blue

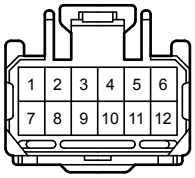

T 45
Blue

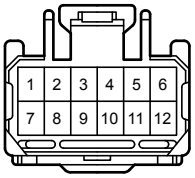

T 46
Black

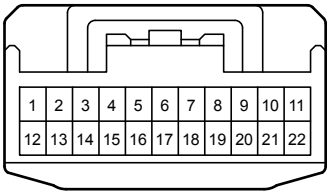

T 53
Black

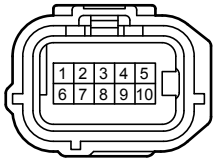

U 59
Black

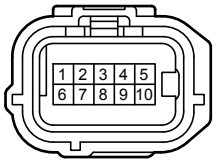

U 60
Black

U 66
Gray

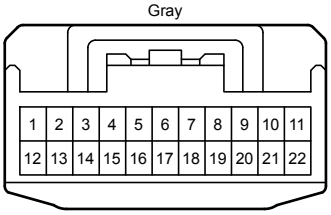

z 4
Black

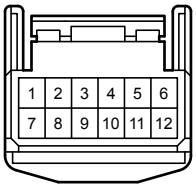

z 9
White

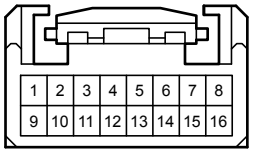

z 10
White

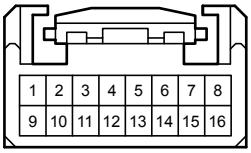

5A
White

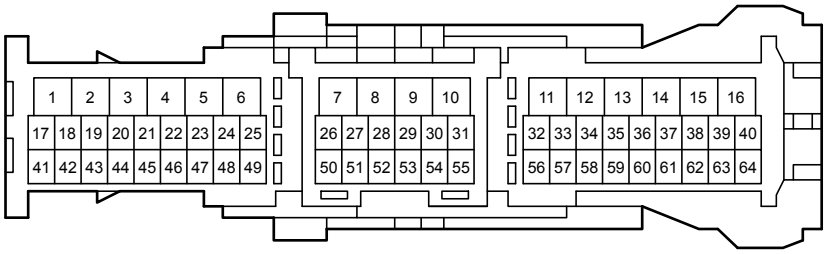

5C
White

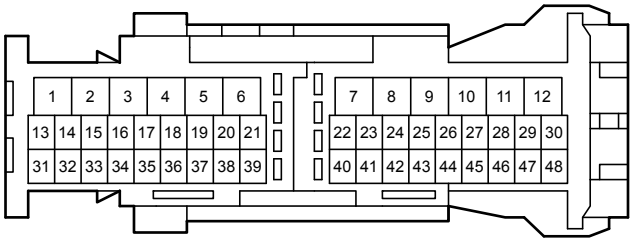

5D
White

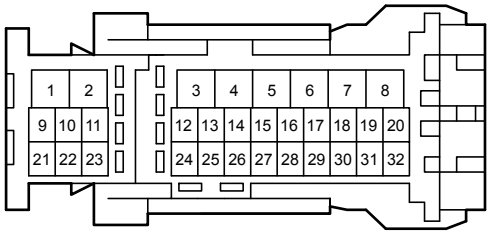

6A
White

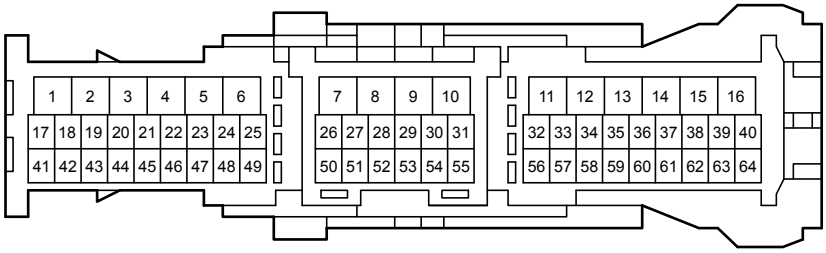

AF1
White

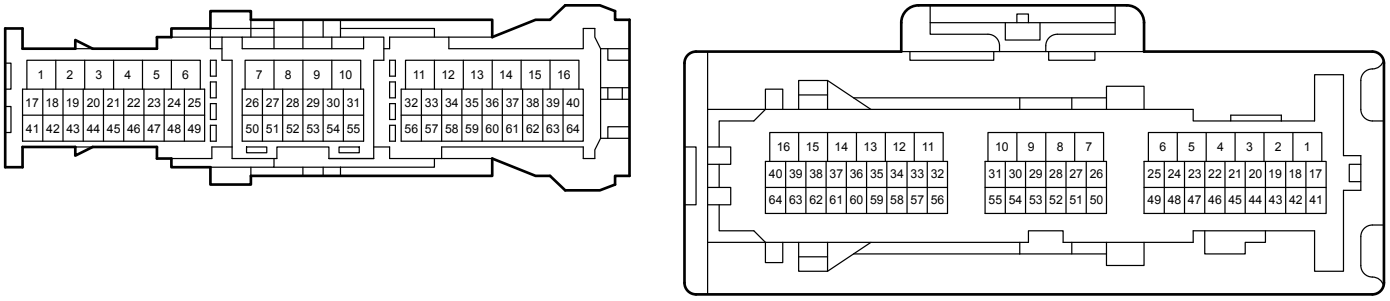

NA2
White

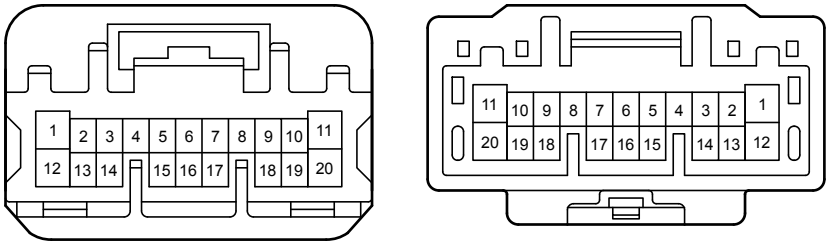

NA3
White

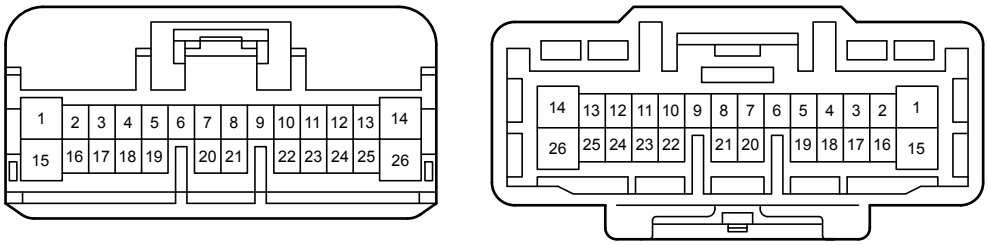

QT1
White

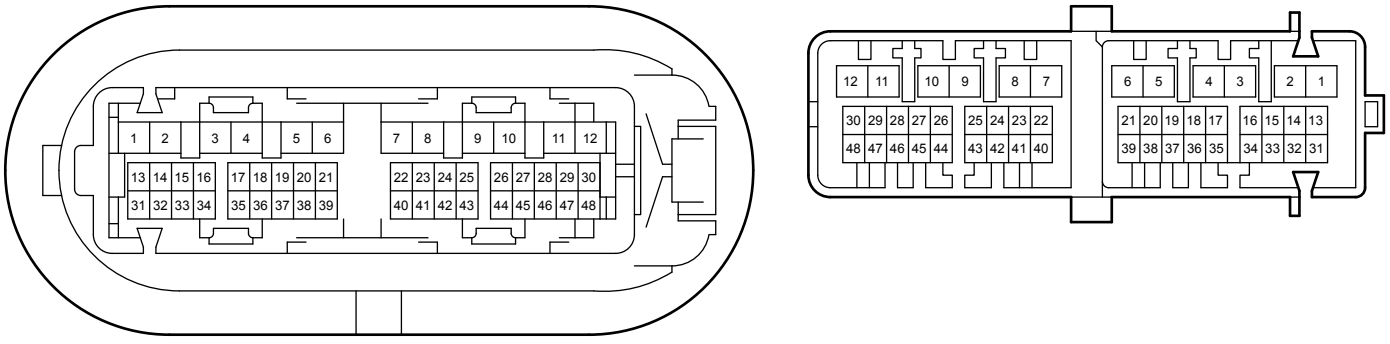

QU1
White

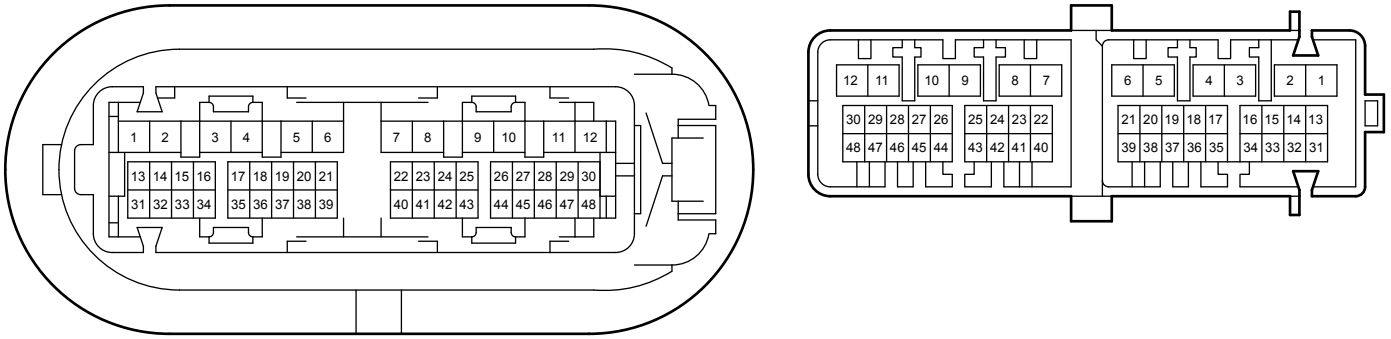

TN1
White

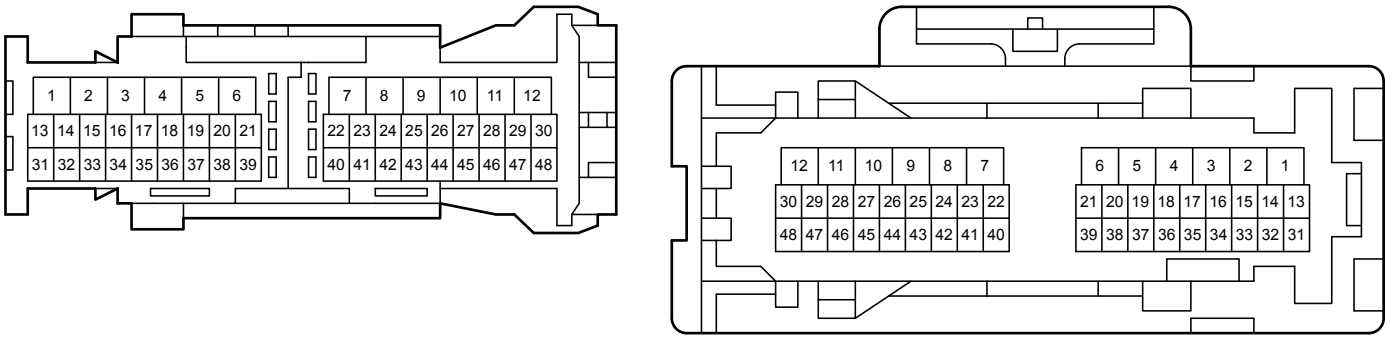
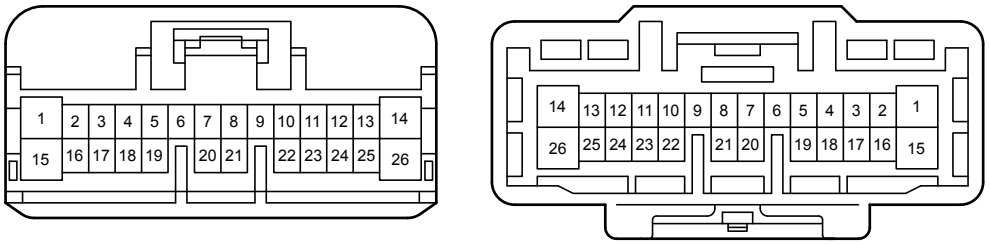
UT1
White