Seat Heater (Front) (w/o Climate Control Seat)
(From Aug. 2013 Production)

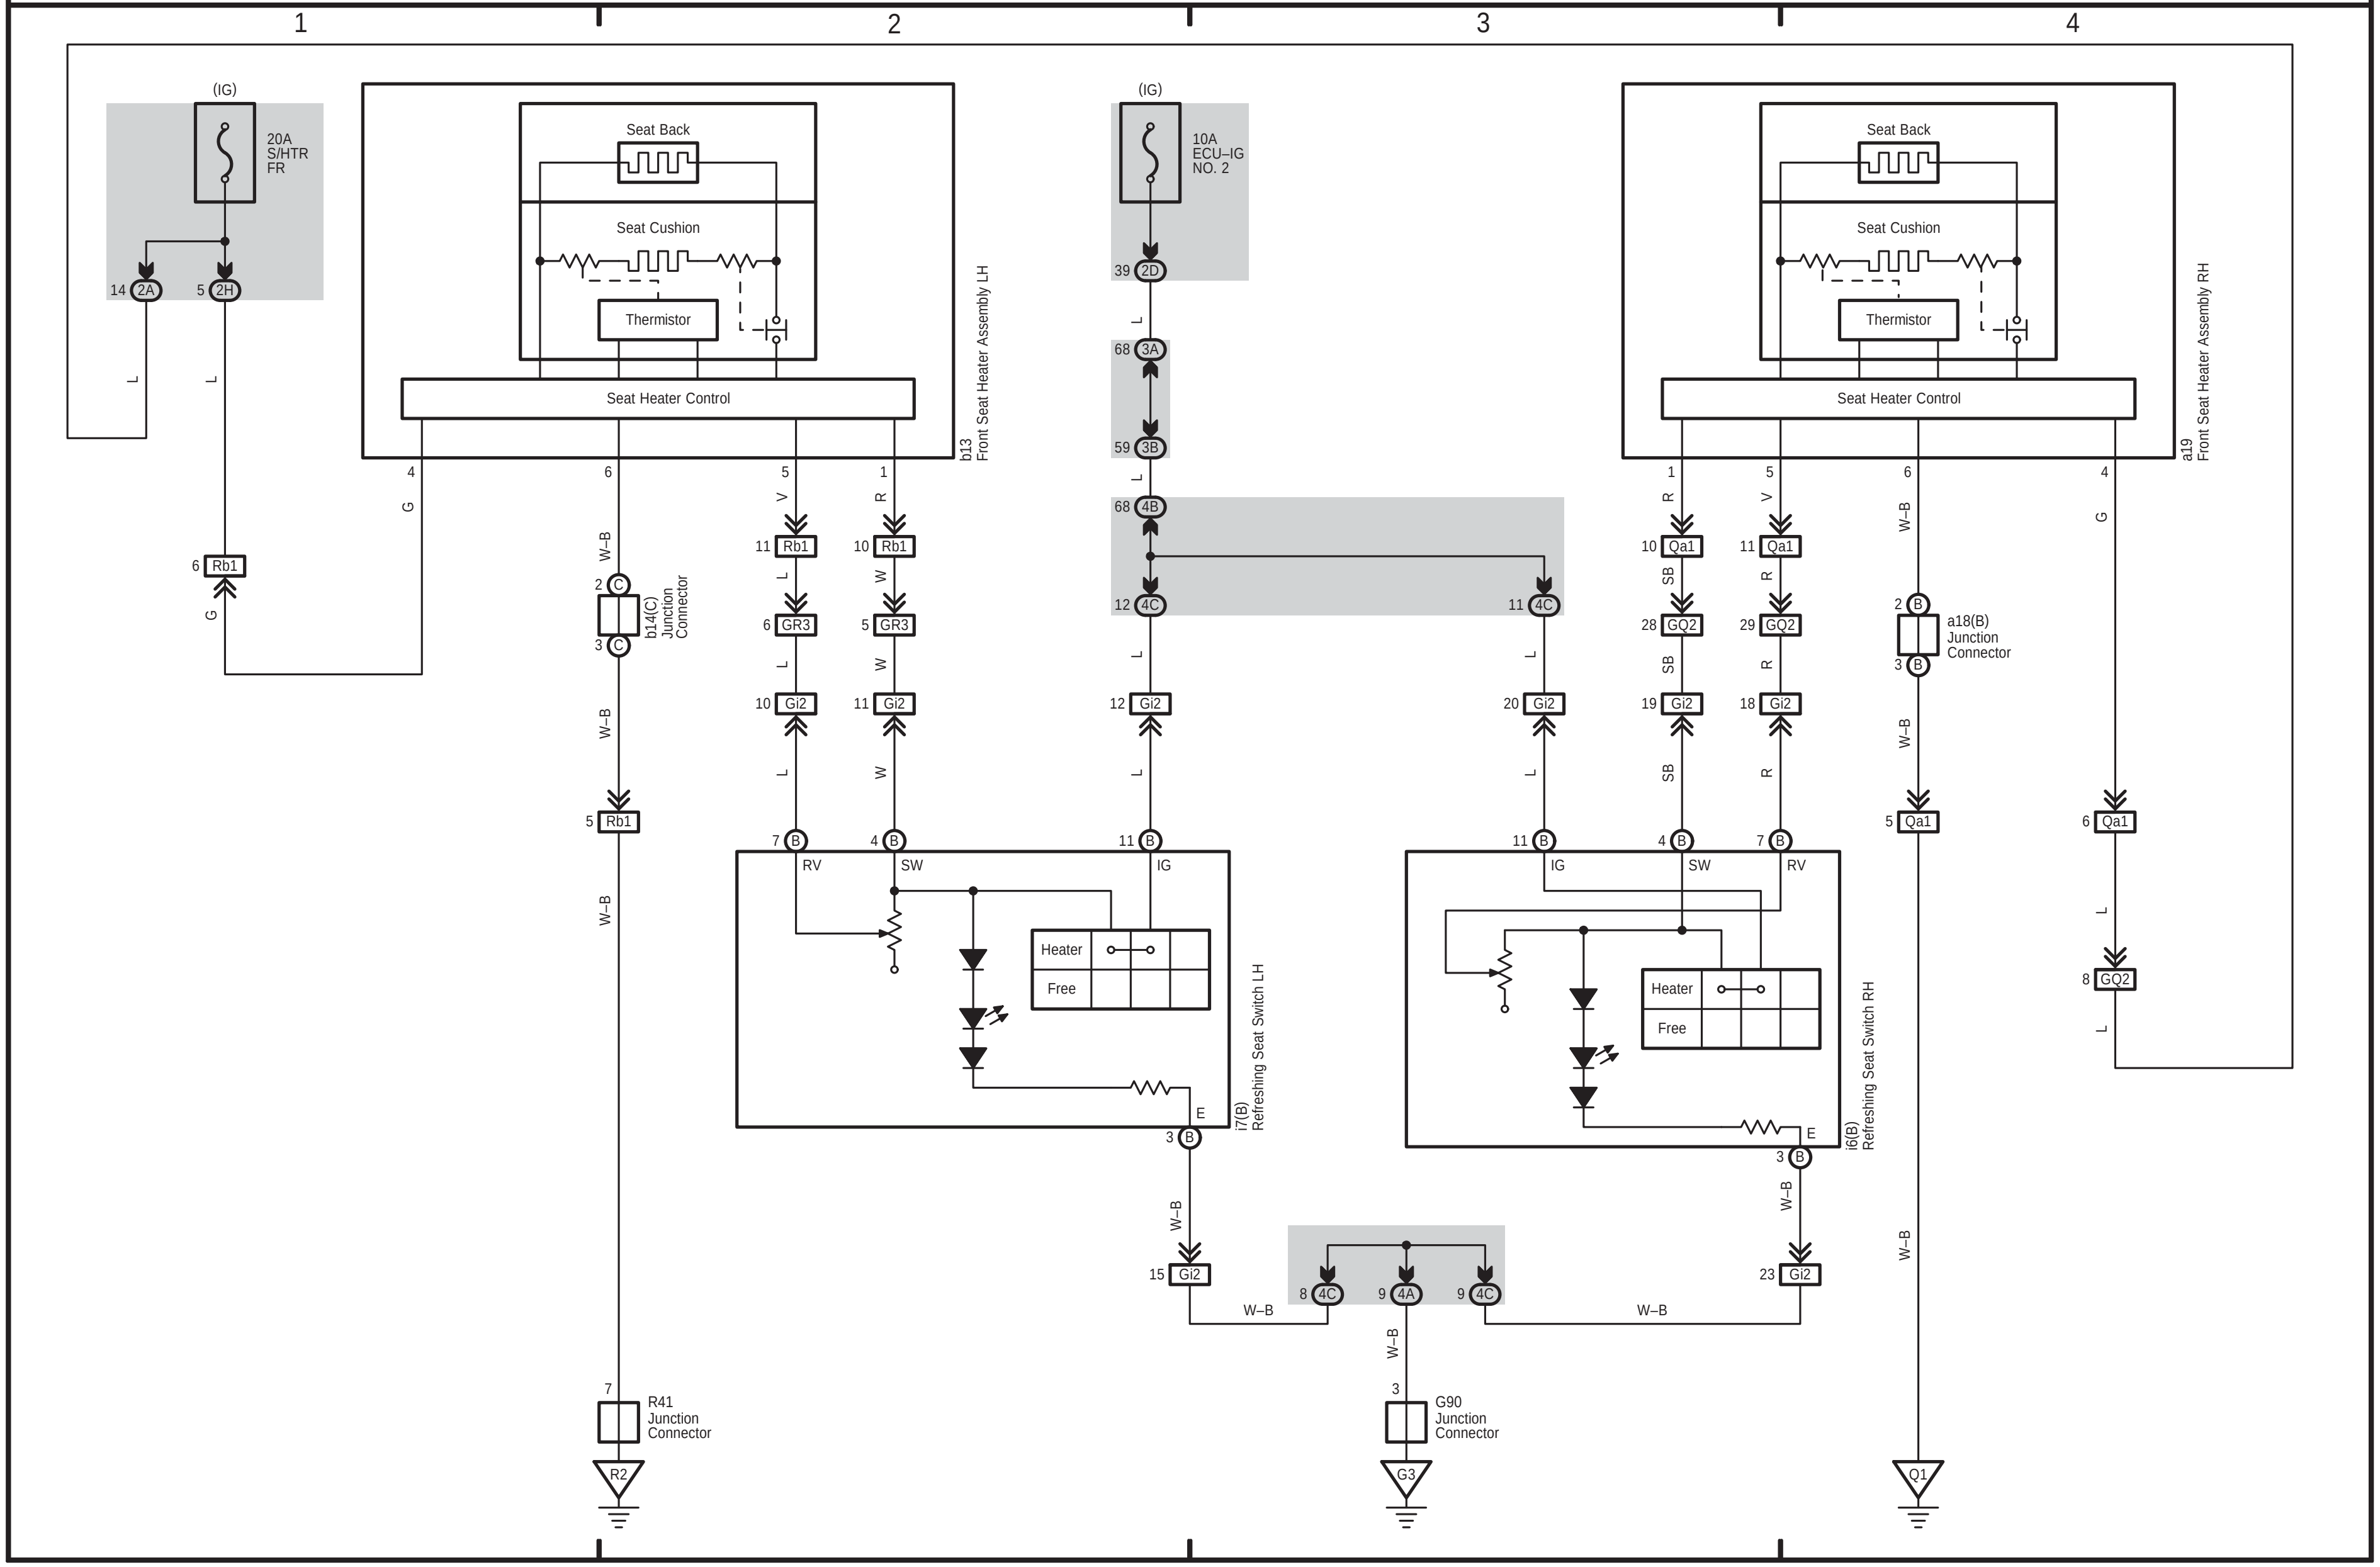
1
2
3
4
(IG)
20A
S/HTR
FR
14 2A
5 2H
L
L
6 Rb1
G
Seat Back
Seat Cushion
Thermistor
Seat Heater Control
b13
Front Seat Heater Assembly LH
4
6
5
1
G
W–B
V
R
11 Rb1
10 Rb1
2 C
b14(C)
Junction
Connector
3 C
L
W
6 GR3
5 GR3
10 Gi2
11 Gi2
5 Rb1
7 B
4 B
11 B
RV
SW
IG
Heater
Free
E
3 B
i7(B)
Refreshing Seat Switch LH
15 Gi2
W–B
7
R41
Junction
Connector
R2
(IG)
10A
ECU–IG
NO. 2
39 2D
68 3A
59 3B
68 4B
12 4C
11 4C
12 Gi2
20 Gi2
8 4C
9 4A
9 4C
3
G90
Junction
Connector
G3
Seat Back
Seat Cushion
Thermistor
Seat Heater Control
a19
Front Seat Heater Assembly RH
1
5
6
4
R
V
W–B
G
10 Qa1
11 Qa1
SB
R
28 GQ2
29 GQ2
19 Gi2
18 Gi2
2 B
a18(B)
Junction
Connector
3 B
5 Qa1
6 Qa1
8 GQ2
L
11 B
4 B
7 B
IG
SW
RV
Heater
Free
E
3 B
i6(B)
Refreshing Seat Switch RH
23 Gi2
W–B
Q1